

# QuickShifter easy Supplementary Manual



## Honda CB500X ABS 2013- (iQSE-W1 + QSH-P2T)

Secure the bike on a stand.



Remove the seat.


Remove the black plastic covers below  
the fuel tank.

Remove the side fairings.

Remove the fuel tank.



Locate the ignition coil connectors under  
the fuel tank.

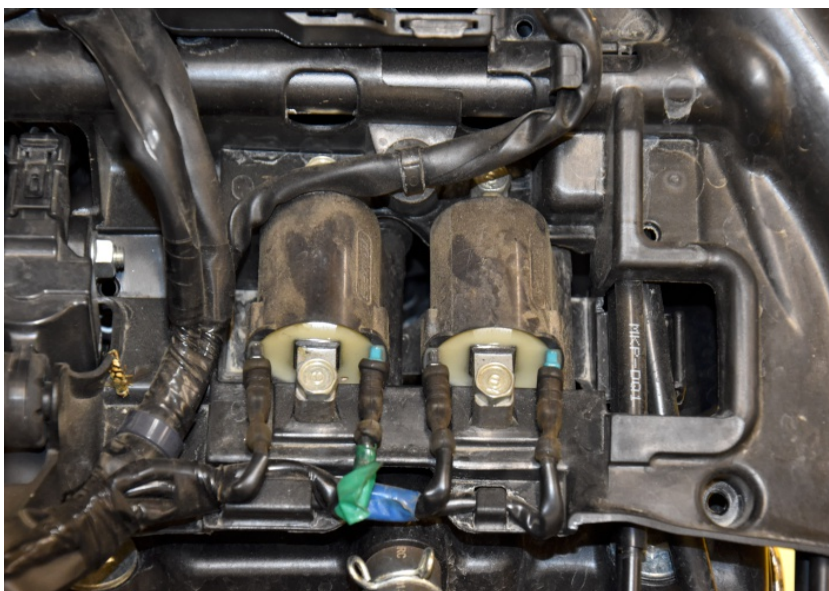



# QuickShifter easy Supplementary Manual




## Honda CB500X ABS 2013- (iQSE-W1 + QSH-P2T)

Take off the Black/White terminal from the coil.

Connect the Black/White terminal to the QSH Red wire terminal.

Connect the QSH Green terminal to this coil terminal.

Splice the QSH White wire to the Blue/Yellow wire of the coil by using the supplied red wire tap connector.

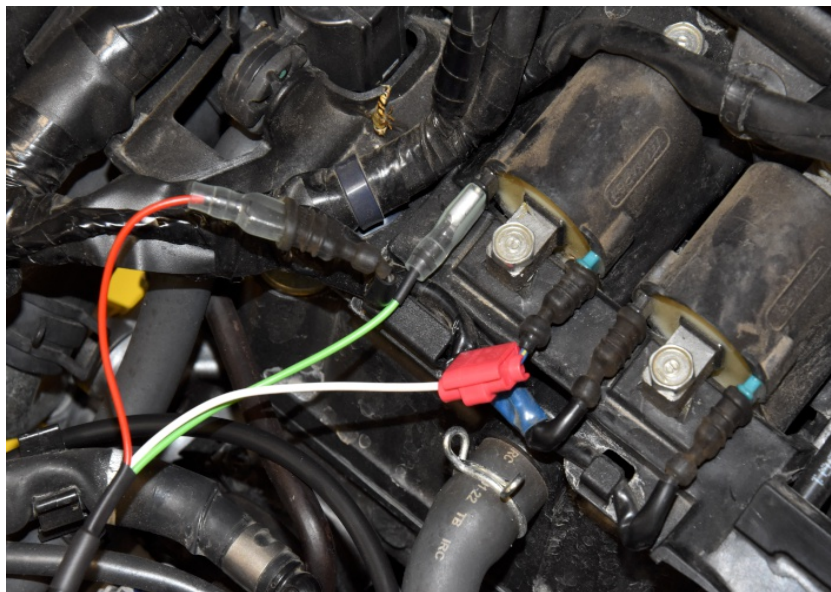

Take off the Black/White terminal from the other ignition coil.

Connect the QSH Green terminal to the empty ignition coil terminal.

Isolate the unused Black/White terminal with tape.



Connect the QSH Black wire terminal to the battery negative terminal.




# QuickShifter easy Supplementary Manual



## Honda CB500X ABS 2013- (iQSE-W1 + QSH-P2T)

Mount the QSE sensor.

*(Place the sensor in the rod as shown.  
Tighten the nut by hand fully and then by a  
1/4 turn using a wrench but maximum to  
about 6 Nm.)*

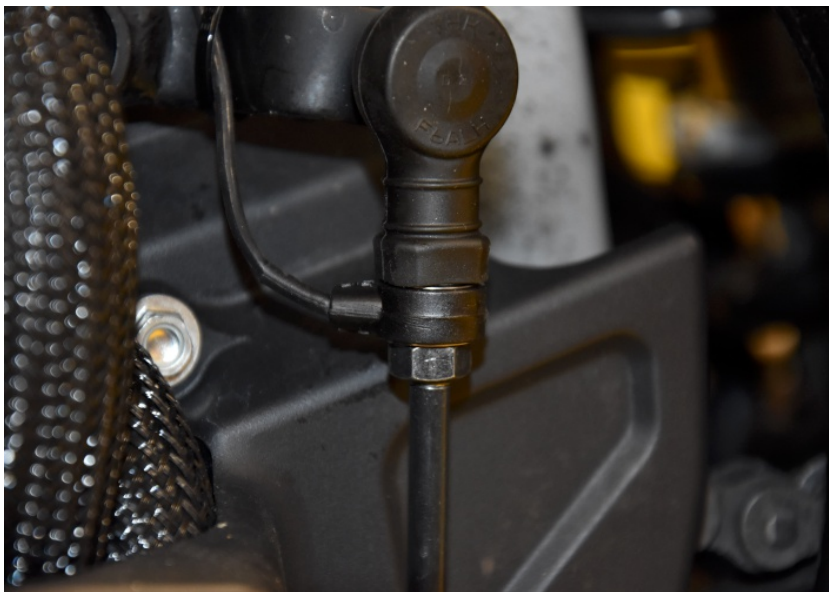

Typical position for the QuickShifter easy.

Secure the unit properly.

