QuickShifter easy
Supplementary Manual

Honda CB600F Hornet 2002-2006 (iQSE-1 + QSH-P2T)

Remove the seat.

Remove the fairings.

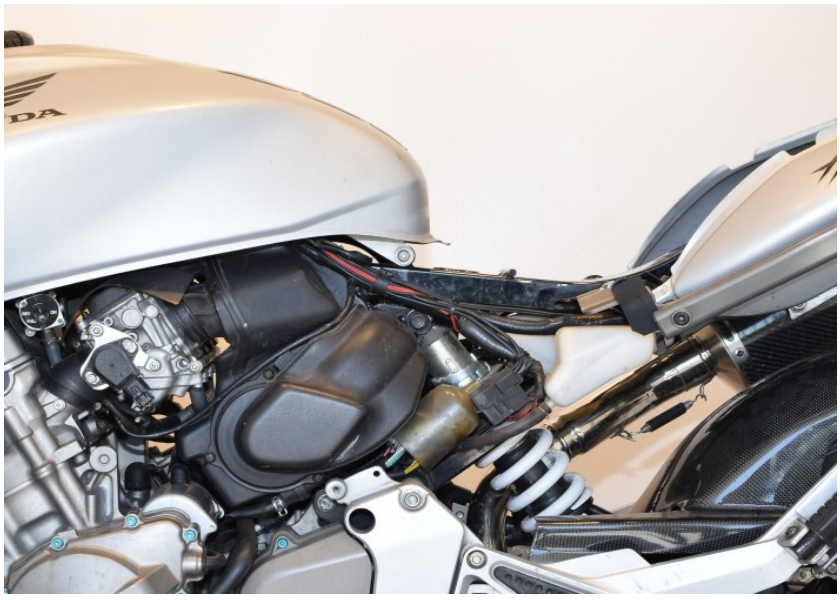

Remove the fuel tank.

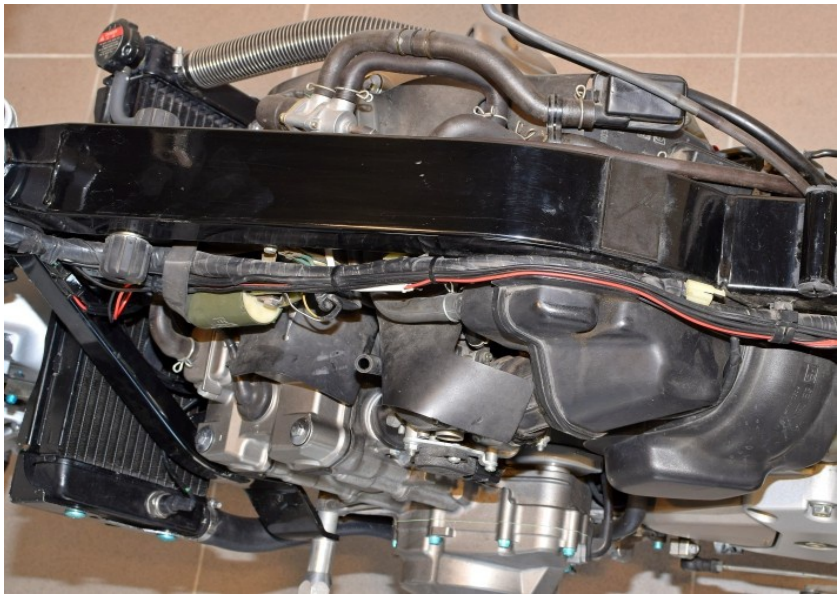

Honda CB600F Hornet 2002-2006 (iQSE-1 + QSH-P2T)

Take off the Black/White terminal from one coil.

Connect the QSH Green terminal to this coil terminal.

Connect the Black/White terminal to the QSH Red wire terminal.

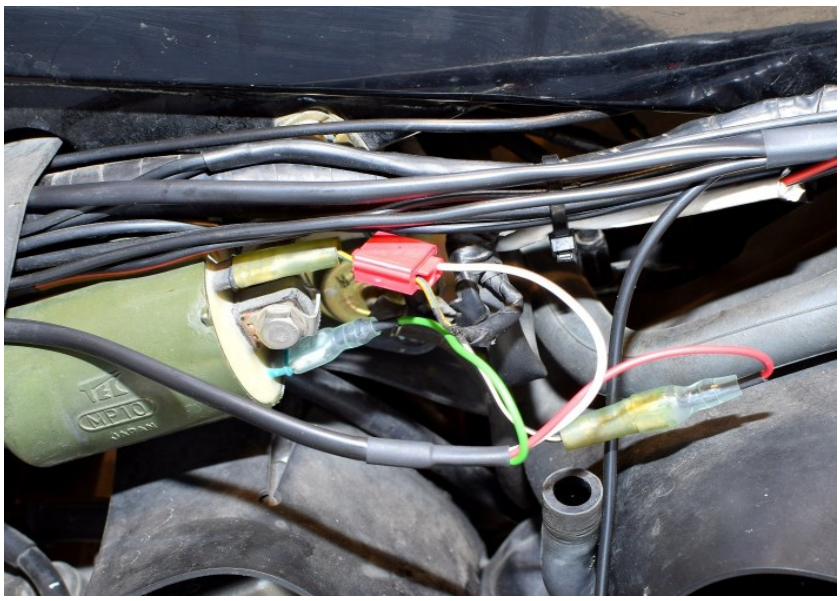

Splice the QSH White wire to the Yellow/Blue wire of the coil by using the supplied red wire tap connector.

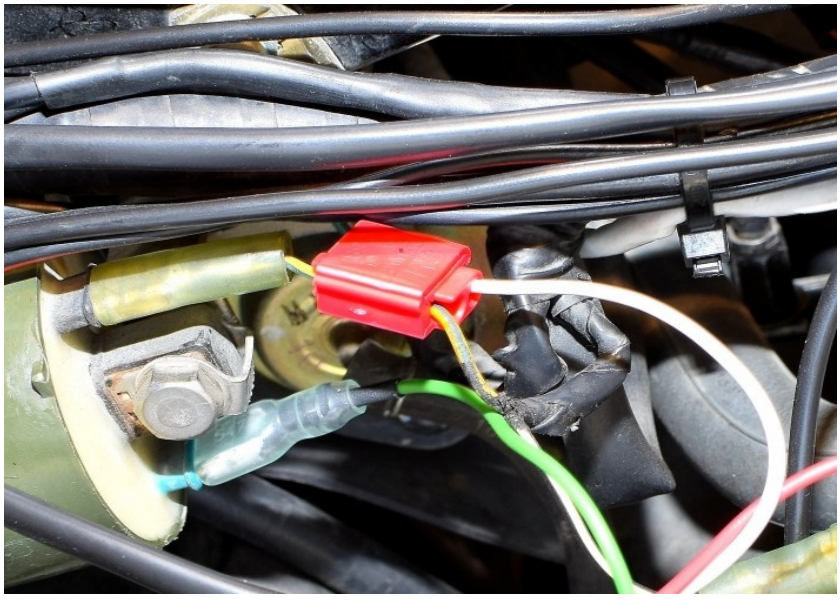

Take off the Black/White terminal from the 2nd coil.

Connect the QSH Green terminal to this coil terminal.

Isolate the unused Black/White terminal with tape.

Honda CB600F Hornet 2002-2006 (iQSE-1 + QSH-P2T)

Connect the QSH Black wire terminal to the chassis ground.

Mount the QSE sensor.

(Replace the bolt with the one supplied. Place the conical washers at the two sides of the sensor like this: (0). Tighten the bolt in this position by about 6 Nm. If you do not have torque wrench, tighten the bolt until the shift arm is tight on the gearbox shaft.)

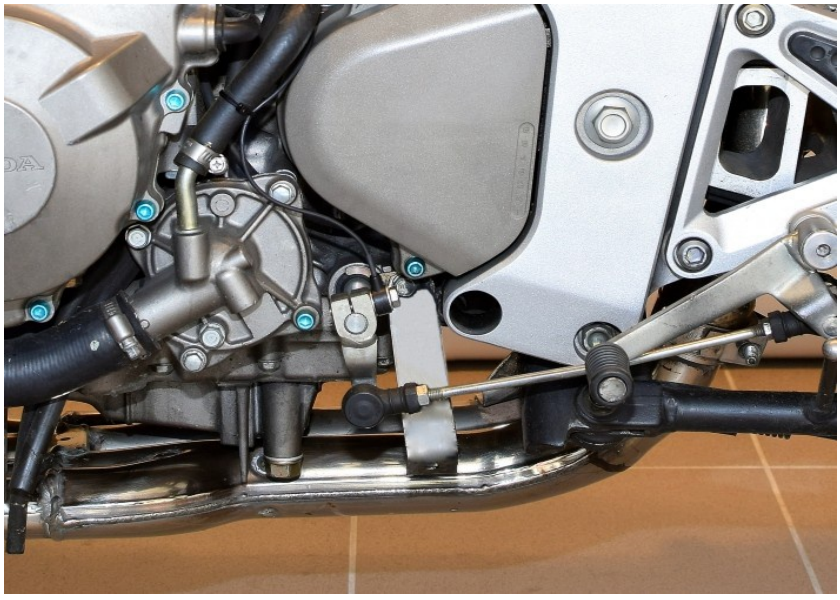

Typical position for the QuickShifter easy.
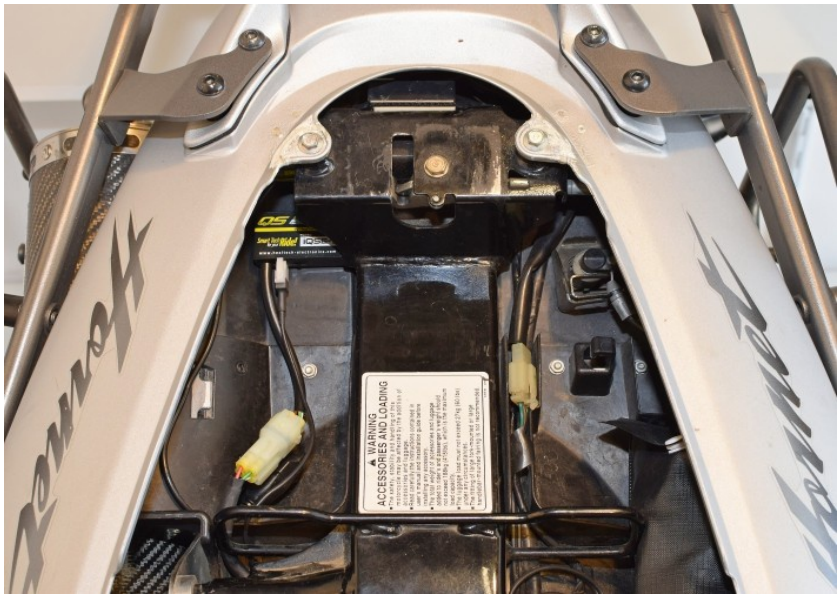
Secure the unit properly.