

QuickShifter easy

Supplementary Manual



Honda CB600F Hornet 2002-2006 (iQSE-1 + QSH-P2T)


Remove the seat.



Remove the fairings.



Remove the fuel tank.

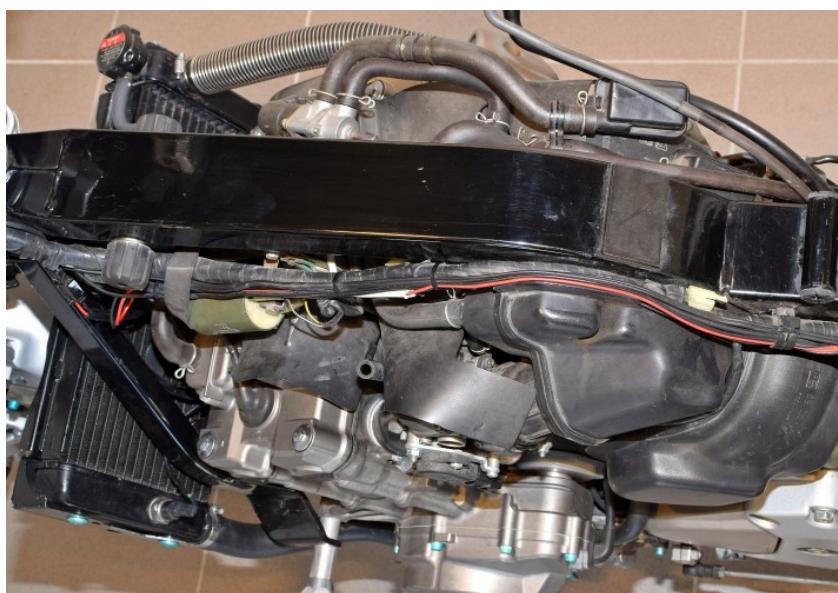

QuickShifter easy

Supplementary Manual




Honda CB600F Hornet 2002-2006 (iQSE-1 + QSH-P2T)

Take off the Black/White terminal from one coil.

Connect the QSH Green terminal to this coil terminal.

Connect the Black/White terminal to the QSH Red wire terminal.

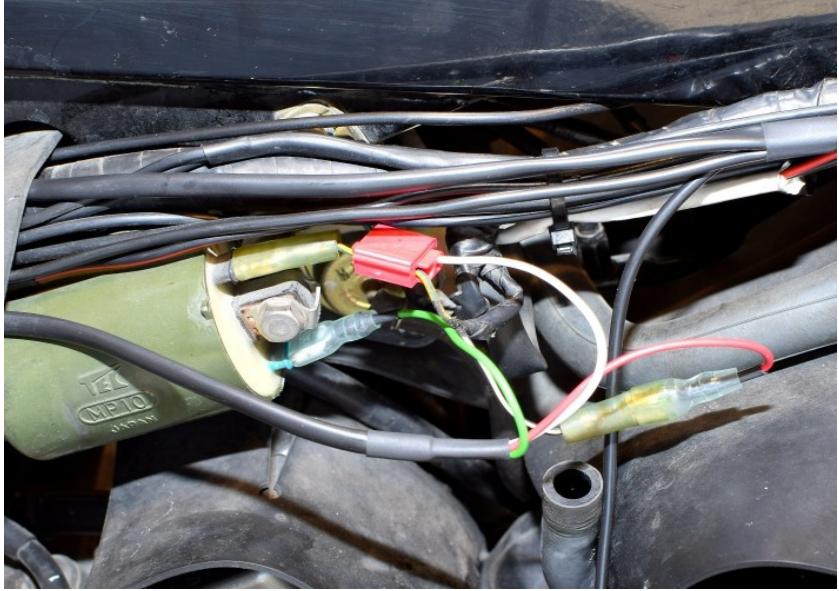

Splice the QSH White wire to the Yellow/Blue wire of the coil by using the supplied red wire tap connector.



Take off the Black/White terminal from the 2nd coil.

Connect the QSH Green terminal to this coil terminal.

Isolate the unused Black/White terminal with tape.



QuickShifter easy

Supplementary Manual



Honda CB600F Hornet 2002-2006 (iQSE-1 + QSH-P2T)


Connect the QSH Black wire terminal to the battery negative terminal.

(The picture on the right shows an alternative location, but we recommend using the battery negative terminal)



Mount the QSE sensor.

(Replace the bolt with the one supplied. Place the supplied washers at both sides of the sensor. Tighten the bolt in this position by about 6 Nm. If you do not have torque wrench, tighten the bolt until the shift arm is tight on the gearbox shaft.)

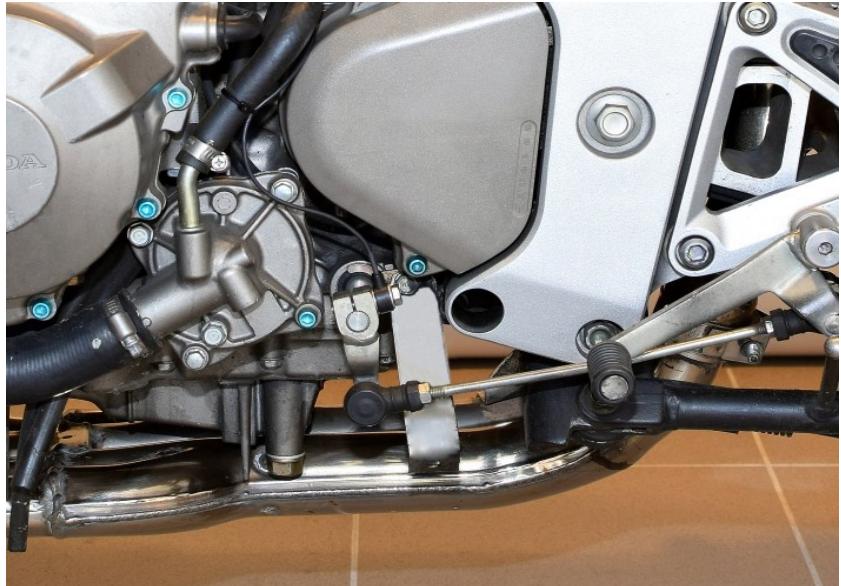

Typical position for the QuickShifter easy.

Secure the unit properly.

