

Honda CB600F Hornet


2007-2010




SUPPLEMENTARY MANUAL

for iQSE-1 + QSH-P2T

REMOVE THE SEAT.

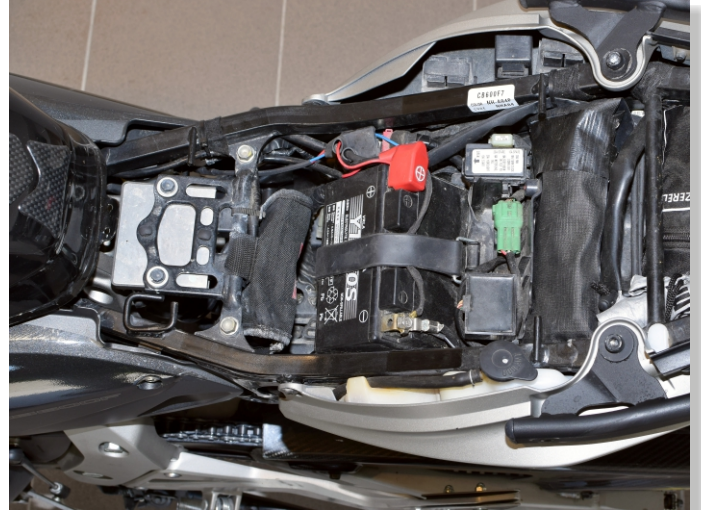

REMOVE THE FAIRINGS.

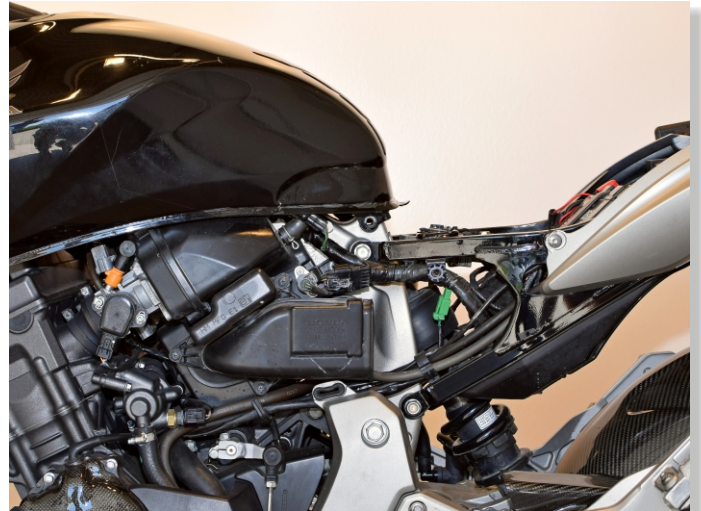

REMOVE THE FUEL TANK.



Honda CB600F Hornet


2007-2010



**TAKE OFF THE BLACK/WHITE
TERMINAL FROM ONE COIL.**

**CONNECT THE QSH GREEN
TERMINAL TO THIS COIL TERMINAL.**

**CONNECT THE BLACK/WHITE
TERMINAL TO THE QSH RED WIRE
TERMINAL.**

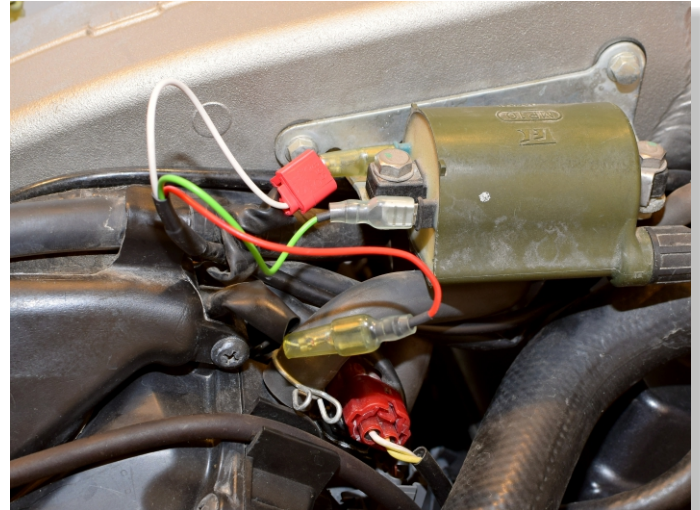

**SPLICE THE QSH WHITE WIRE TO
THE YELLOW/BLUE OR BLUE/YELLOW
WIRE OF THE COIL BY USING THE
SUPPLIED RED WIRE TAP
CONNECTOR.**

(REFER TO THE QSH-P2T INSTRUCTIONS)



**TAKE OFF THE BLACK/WHITE
TERMINAL FROM THE 2ND COIL.**

**CONNECT THE QSH GREEN
TERMINAL TO THIS COIL TERMINAL.**

**ISOLATE THE UNUSED BLACK/WHITE
TERMINAL WITH TAPE.**




Honda CB600F Hornet

2007-2010




**CONNECT QSH BLACK WIRE
TERMINAL TO CHASSIS GROUND.**

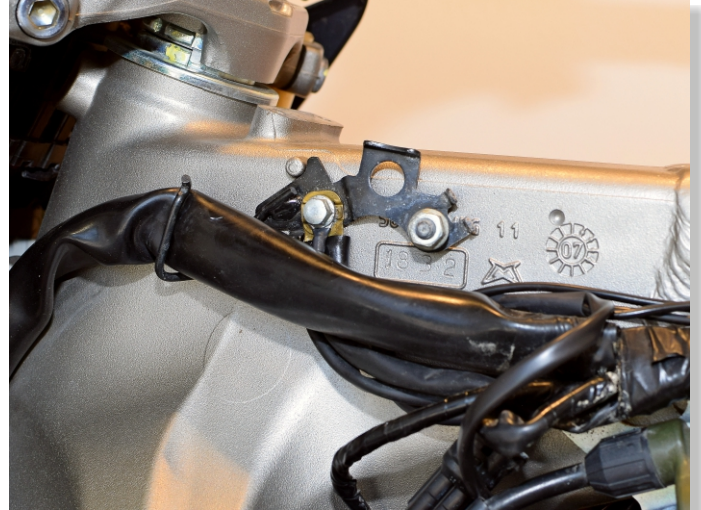

MOUNT THE QSE SENSOR.

(REPLACE THE BOLT WITH THE ONE SUPPLIED.
PLACE THE CONICAL WASHERS AT THE TWO SIDES OF
THE SENSOR LIKE THIS: (D). TIGHTEN THE BOLT IN
THIS POSITION BY ABOUT 6 NM. IF YOU DO NOT HAVE
A TORQUE WRENCH, TIGHTEN THE BOLT UNTIL THE
SHIFT ARM IS TIGHT ON THE GEARBOX SHAFT.

(FOR DIFFERENT MOUNTING OPTIONS,
REFER TO THE SENSOR INSTALL GUIDE.)

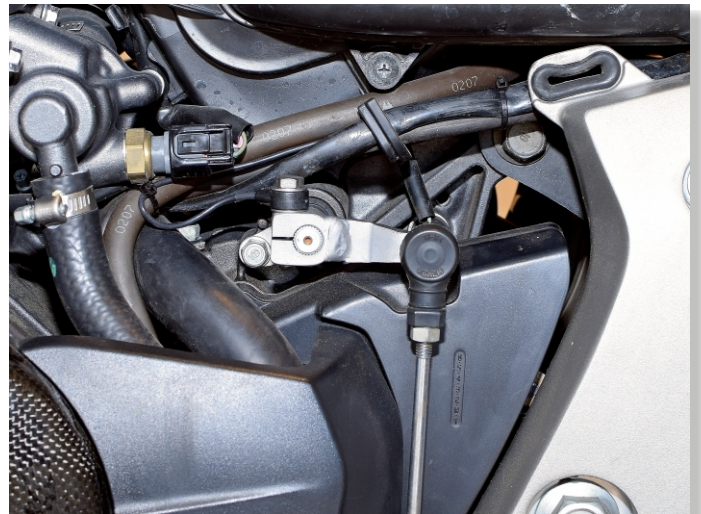

**TYPICAL POSITION FOR THE
QUICKSHIFTER EASY.**

