

QuickShifter easy Supplementary Manual

Honda CB650R ABS TC 2019- (iQSE-1 + QSH-P2T)

Secure the bike on a stand.




Remove the seats.

Remove the plastic covers from the fuel tank.

Remove the fuel tank.



Locate the ignition coil connectors under the fuel tank.

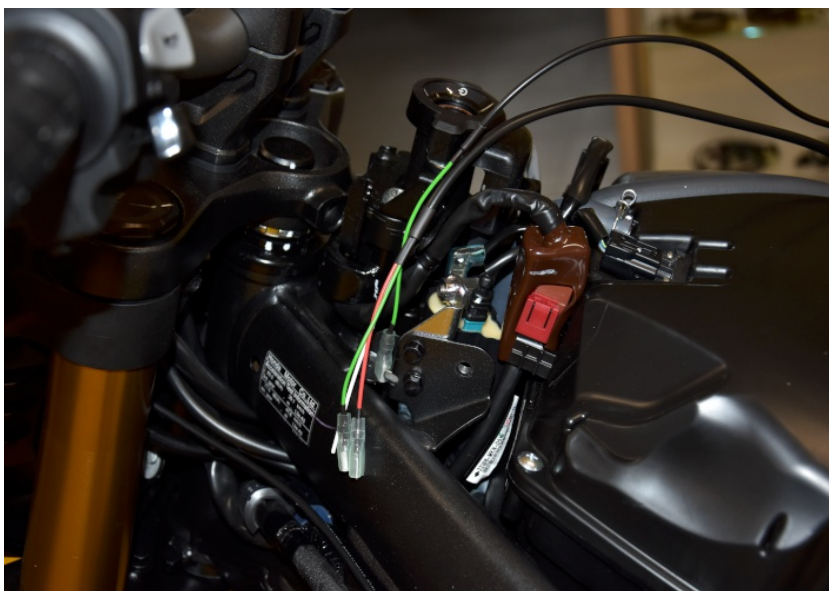

QuickShifter easy Supplementary Manual



Honda CB650R ABS TC 2019- (iQSE-1 + QSH-P2T)

Take off the Yellow/Red terminal from the coil.

Connect the Yellow/Red terminal to the QSH Red wire terminal.

Connect the QSH Green terminal to this coil terminal.




Splice the QSH White wire to the Green/White wire of the coil by using the supplied red wire tap connector.



Take off the Yellow/Red terminal from the other ignition coil.

Connect the QSH Green terminal to the empty ignition coil terminal.

Isolate the unused Yellow/Red terminal with tape.

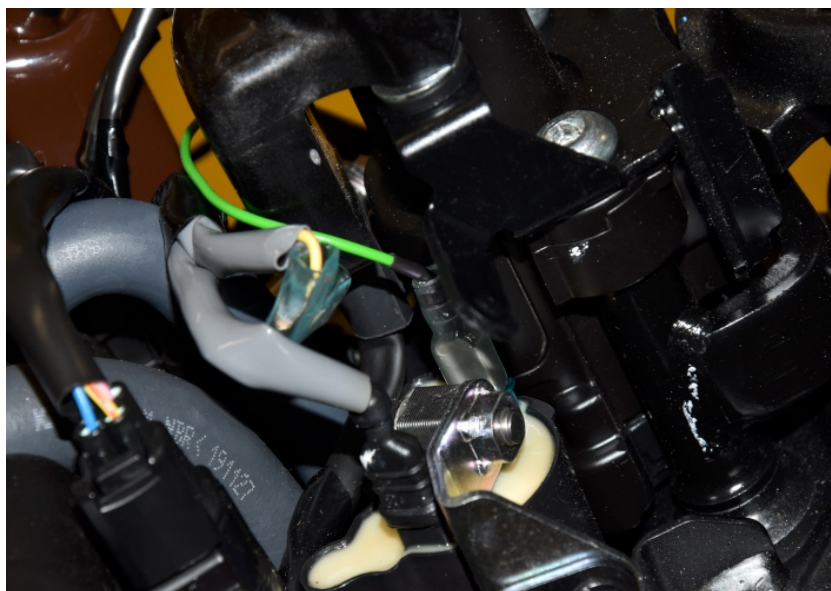

QuickShifter easy Supplementary Manual



Honda CB650R ABS TC 2019- (iQSE-1 + QSH-P2T)

Connect the QSH Black wire terminal to the battery negative terminal.

(The picture on the right shows an alternative location, but we recommend using the battery negative terminal)



Mount the QSE sensor.

(Replace the bolt with the one supplied. Place the supplied washers at both sides of the sensor. Tighten the bolt in this position by about 6 Nm. If you do not have torque wrench, tighten the bolt until the shift arm is tight on the gearbox shaft.)



Typical position for the QuickShifter easy.

Secure the unit properly.

