

QuickShifter easy Supplementary Manual



Honda CBF1000 F ABS 2010-2016 (iQSE-1 + QSH-P2T)

Secure the bike on a stand.



Remove the seats and the side covers.

Lift up or remove the fuel tank.



Take off the Black/White terminal from the ignition coil.

Connect the QSH Green terminal to the empty ignition coil terminal.

Connect the Black/White terminal to the QSH Red wire terminal.

Splice the QSH White wire to the Blue/Yellow wire of the ignition coil by using the supplied Red wire tap connector.



QuickShifter easy Supplementary Manual



Honda CBF1000 F ABS 2010-2016 (iQSE-1 + QSH-P2T)


Take off the Black/White terminal from the other ignition coil.

Connect the QSH Green terminal to the empty ignition coil terminal.

Isolate the unused Black/White terminal with tape.



Connect the QSH Black wire terminal to the battery negative terminal.

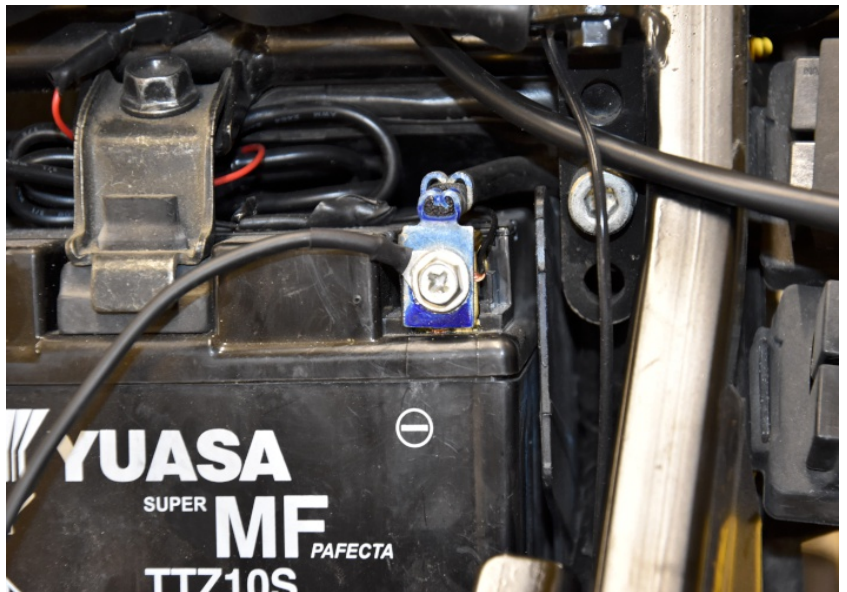

Mount the QSE sensor.

(Replace the bolt with the one supplied. Place the supplied washers at both sides of the sensor. Tighten the bolt in this position by about 6 Nm. If you do not have torque wrench, tighten the bolt until the shift arm is tight on the gearbox shaft.)



QuickShifter easy Supplementary Manual



Honda CBF1000 F ABS 2010-2016 (iQSE-1 + QSH-P2T)

Typical position for the QuickShifter easy.

Secure the unit properly.

