

# QuickShifter easy Supplementary Manual



## Honda CBR1100XX Blackbird 2001-2008 (iQSE-1 + QSH-P2T)

Remove the seat.



Lift up or remove the fuel tank.



Take off the Black/White terminal from one coil.

Connect the QSH Green terminal to this coil terminal.



# QuickShifter easy Supplementary Manual



## Honda CBR1100XX Blackbird 2001-2008 (iQSE-1 + QSH-P2T)


Connect the Black/White terminal to the QSH Red wire terminal and secure with tape.



Take off the Black/White terminal from the 2nd coil.

Connect the QSH Green terminal to this coil terminal.

Isolate the unused Black/White terminal with tape.

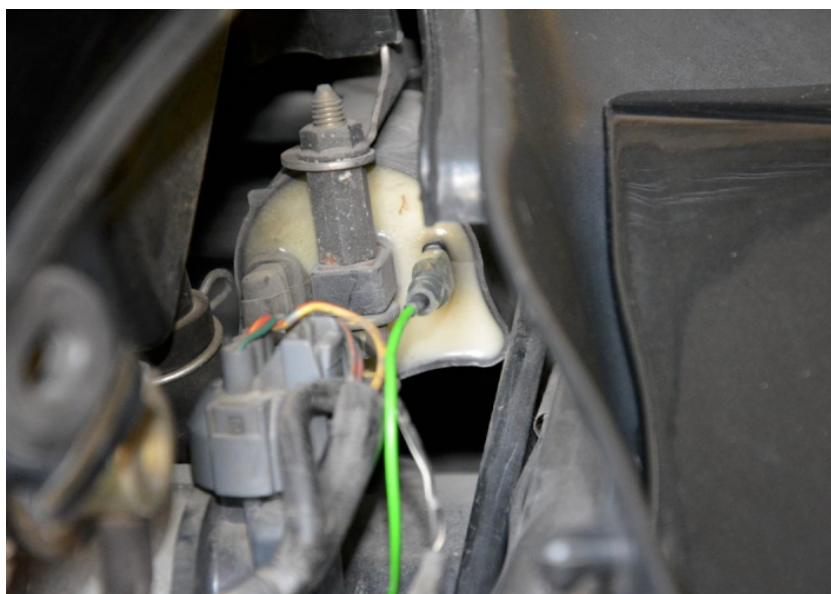

Splice the QSH White wire to the Yellow/Blue or Blue/Yellow wire of the coil by using the supplied red wire tap connector.

*(Refer to the QSH-P2T instructions)*





# QuickShifter easy Supplementary Manual



## Honda CBR1100XX Blackbird 2001-2008 (iQSE-1 + QSH-P2T)


Connect the QSH Black wire terminal to the battery negative terminal.

*(The picture on the right shows an alternative location, but we recommend using the battery negative terminal)*



Mount the QSE sensor.

*(Replace the bolt with the one supplied. Place the supplied washers at both sides of the sensor. Tighten the bolt in this position by about 6 Nm. If you do not have torque wrench, tighten the bolt until the shift arm is tight on the gearbox shaft.)*

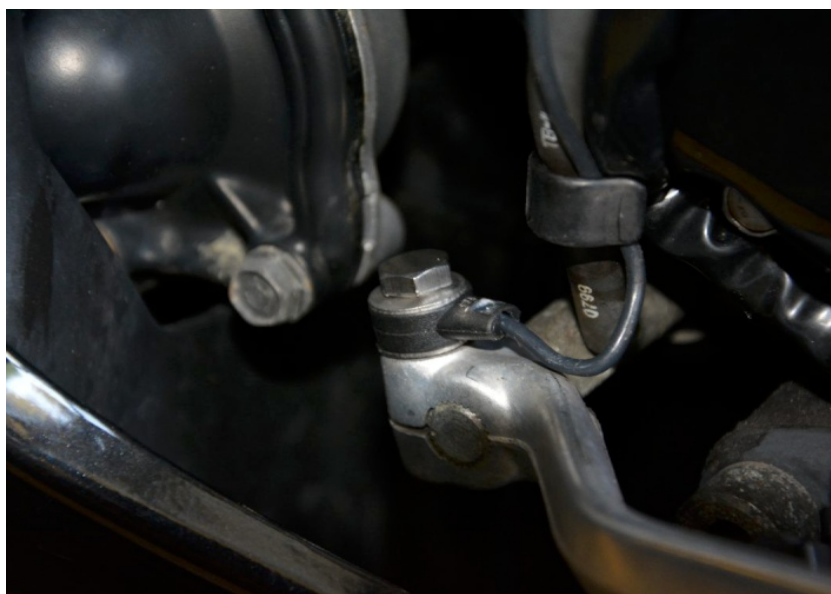

Typical position for the QuickShifter easy.

Secure the unit properly.

