

QuickShifter easy Supplementary Manual



Honda CBR1100XX Blackbird 2001-2008 (iQSE-1 + QSH-P2T)

Remove the seat.



Lift up or remove the fuel tank.



Take off the Black/White terminal from one coil.

Connect the QSH Green terminal to this coil terminal.



QuickShifter easy Supplementary Manual



Honda CBR1100XX Blackbird 2001-2008 (iQSE-1 + QSH-P2T)


Connect the Black/White terminal to the QSH Red wire terminal and secure with tape.



Take off the Black/White terminal from the 2nd coil.

Connect the QSH Green terminal to this coil terminal.

Isolate the unused Black/White terminal with tape.

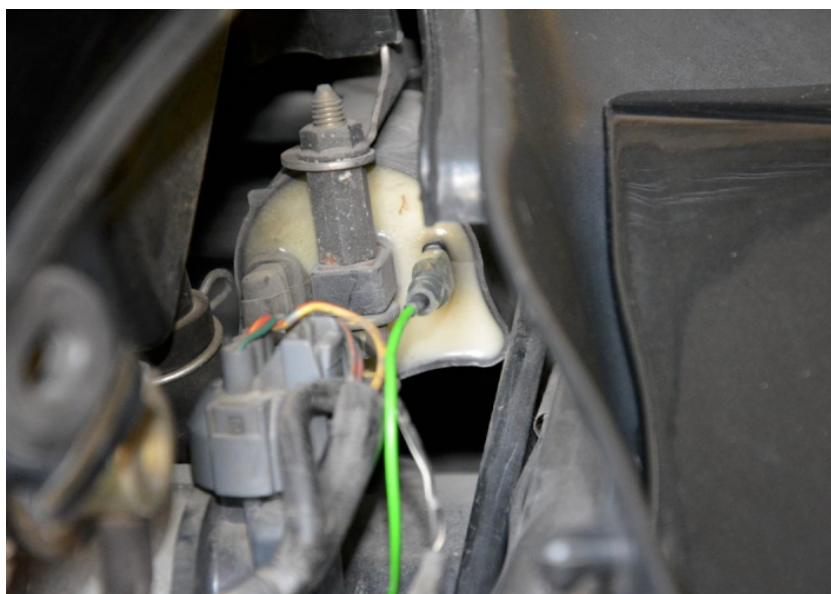

Splice the QSH White wire to the Yellow/Blue or Blue/Yellow wire of the coil by using the supplied red wire tap connector.

(Refer to the QSH-P2T instructions)



QuickShifter easy Supplementary Manual



Honda CBR1100XX Blackbird 2001-2008 (iQSE-1 + QSH-P2T)

Connect the QSH Black wire terminal to the chassis ground.



Mount the QSE sensor.

(Replace the bolt with the one supplied. Place the conical washers at the two sides of the sensor like this: (O). Tighten the bolt in this position by about 6 Nm. If you do not have torque wrench, tighten the bolt until the shift arm is tight on the gearbox shaft.)



Typical position for the QuickShifter easy.

Secure the unit properly.

