

QuickShifter easy Supplementary Manual

Honda CBR650F 2017- (iQSE-1 + QSH-P2T)

Remove the seat and the side fairings.



Remove the clamps at the front side of the fuel tank.



Remove the fuel tank and locate the ignition coil terminals on the right side.



QuickShifter easy Supplementary Manual




Honda CBR650F 2017- (iQSE-1 + QSH-P2T)

Take off the Yellow/Red terminal from one coil.

Connect the QSH Green terminal to this coil terminal.


Connect the Yellow/Red terminal to the QSH Red wire terminal and secure with tape.

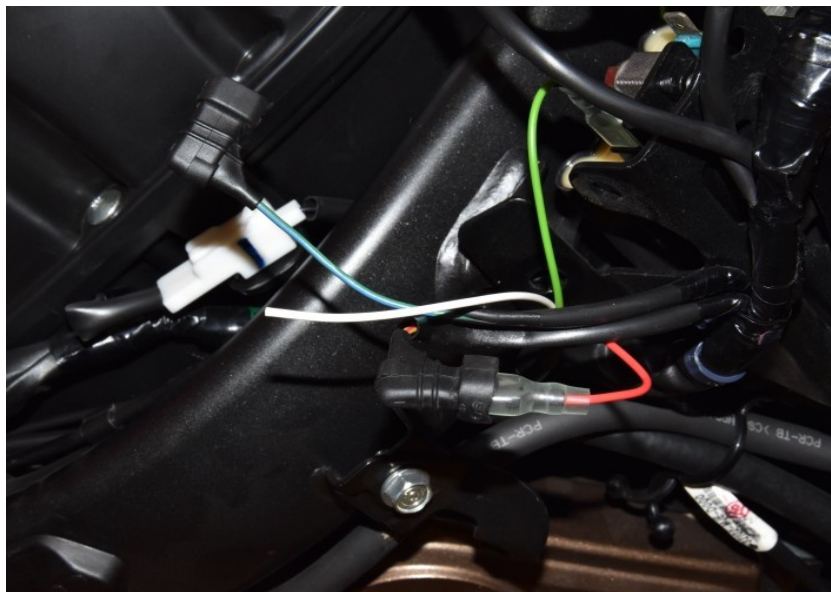

Take off the Yellow/Red terminal from the 2nd coil.

Connect the QSH Green terminal to this coil terminal.


Isolate the unused Yellow/Red terminal with tape.

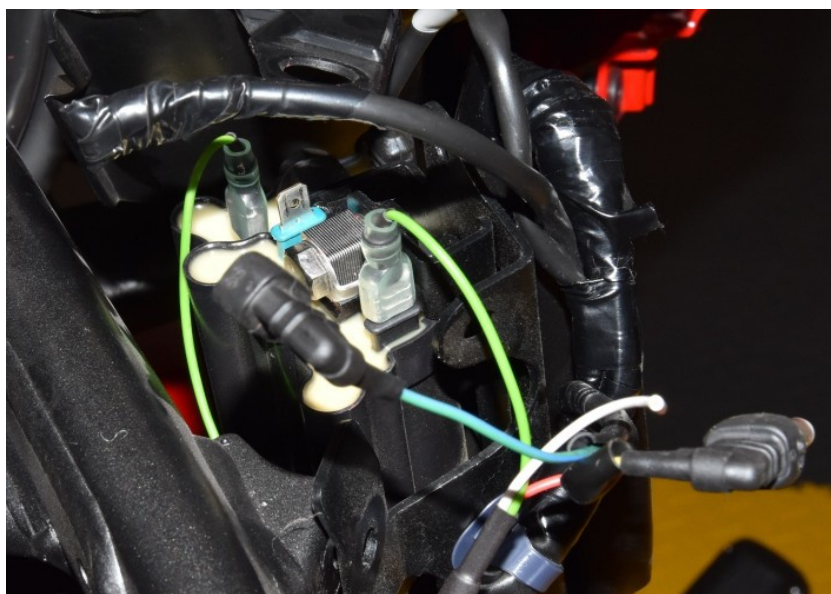

Splice the QSH White wire to the Green/Blue wire of the coil by using the supplied red wire tap connector.

Connect QSH Black wire terminal to chassis ground.

(Refet to the QSH-P2T instructions.)

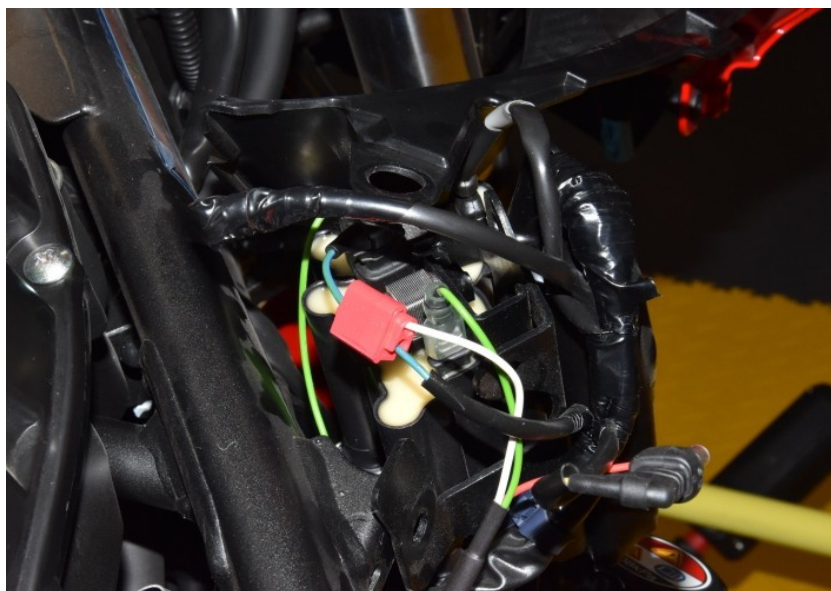

QuickShifter easy Supplementary Manual



Honda CBR650F 2017- (iQSE-1 + QSH-P2T)

Mount the QSE sensor.

*(Replace the bolt with the one supplied.
Tighten the bolt in this position by about 6 Nm. If you do not have torque wrench, tighten the bolt until the shift arm is tight on the gearbox shaft.)*



Typical position for the QuickShifter easy.

Secure the unit properly.

