

Honda ST1300 Pan European 2002-2015



SUPPLEMENTARY MANUAL

for QSE-1 + QSH-P2T

REMOVE THE SEAT.



LIFT UP OR REMOVE
THE FUEL TANK.



TAKE OFF THE BLACK/WHITE
TERMINAL FROM ONE COIL.


CONNECT THE BLACK/WHITE
TERMINAL TO THE QSH RED WIRE
TERMINAL AND SECURE WITH TAPE.



Honda ST1300 Pan European 2002-2015




**CONNECT THE QSH GREEN
TERMINAL TO COIL TERMINAL.**

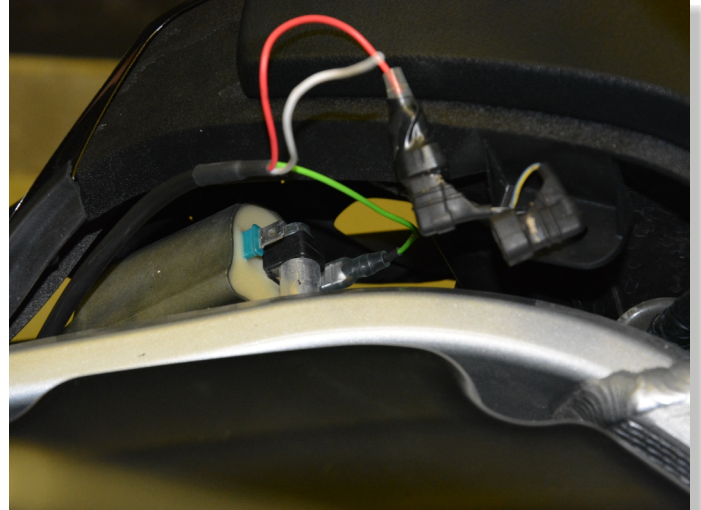

**TAKE OFF THE BLACK/WHITE
TERMINAL FROM THE 2ND COIL.**


**CONNECT THE QSH GREEN
TERMINAL TO THIS COIL TERMINAL.**

**ISOLATE THE UNUSED BLACK/WHITE
TERMINAL WITH TAPE.**

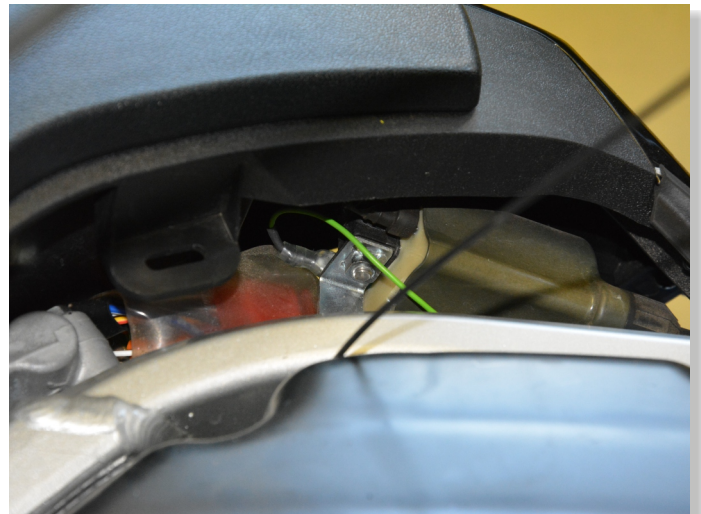

**SPLICE THE QSH WHITE WIRE TO
THE YELLOW/BLUE OR BLUE/YELLOW
WIRE OF THE COIL BY USING THE
SUPPLIED RED WIRE
CONNECTOR.**


(REFER TO THE QSH-P2T INSTRUCTIONS)

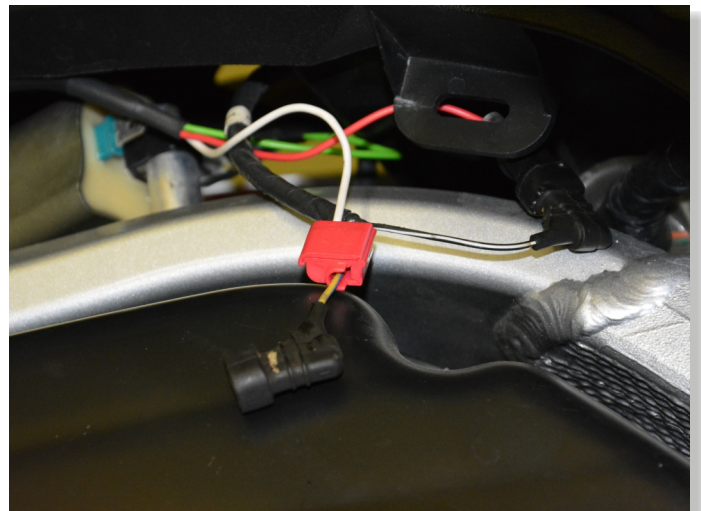

Honda ST1300 Pan European 2002-2015



**CONNECT QSH BLACK WIRE
TERMINAL TO CHASSIS GROUND.**

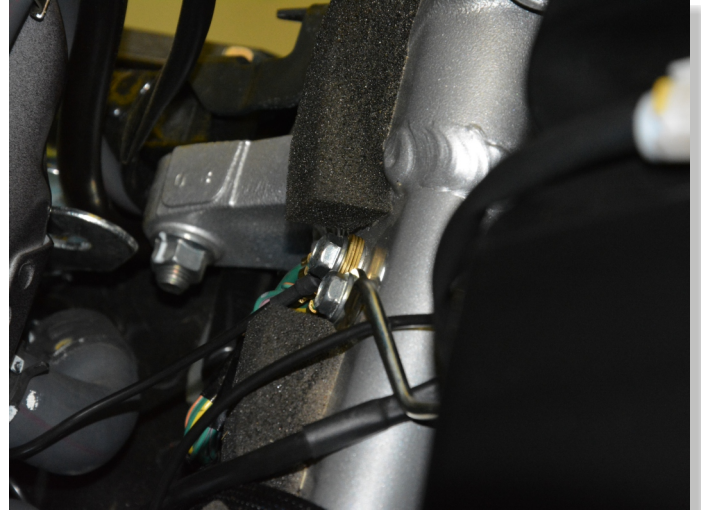

MOUNT THE QSE SENSOR.
(REPLACE THE BOLT WITH THE ONE SUPPLIED.
PLACE THE CONICAL WASHERS AT THE TWO SIDES OF
THE SENSOR LIKE THIS: (O). TIGHTEN THE BOLT IN
THIS POSITION BY ABOUT 5 NM. IF YOU DO NOT HAVE
A TORQUE WRENCH, TIGHTEN THE BOLT UNTIL THE
SHIFT ARM IS TIGHT ON THE GEARBOX SHAFT.)

FOR DIFFERENT MOUNTING OPTIONS,
REFER TO THE SENSOR INSTALL GUIDE.)



**TYPICAL POSITION FOR THE
QUICKSHIFTER EASY.**

