

Kawasaki Vulcan 900 Custom 2006- (iQSE-1 + QSH-P2T)

Remove the seat.

Remove the left frame cover below the main seat.



Remove the ignition cover.



Remove the engine left side cover.




QuickShifter easy Supplementary Manual



Kawasaki Vulcan 900 Custom 2006- (iQSE-1 + QSH-P2T)

Remove the drive belt cover.

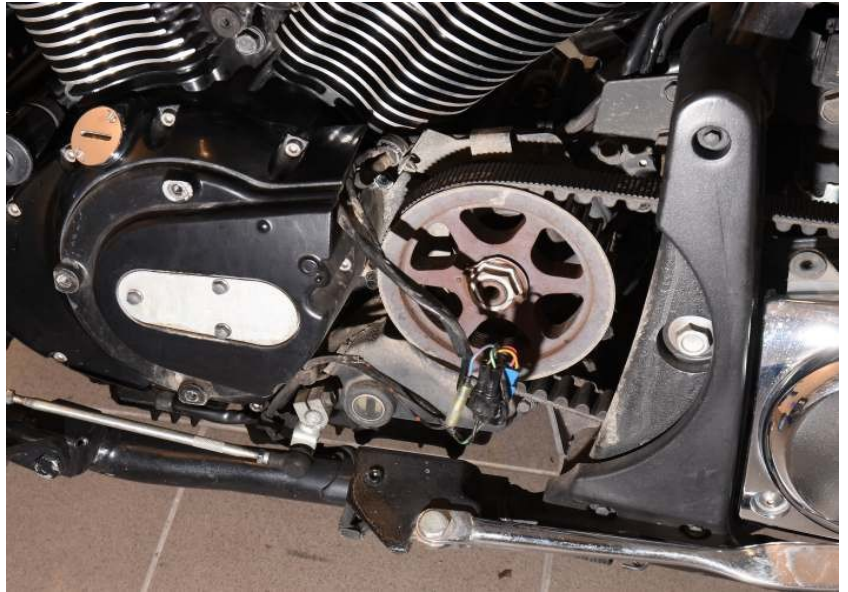


Take off the Red terminal from one coil.

Connect the QSH Green terminal to this coil terminal.

Connect the Red terminal to the QSH Red wire terminal and secure with tape.

Splice the QSH White wire to the Black/Green wire of the coil by using the supplied red wire tap connector.

(Refer to the QSH-P2T instructions)

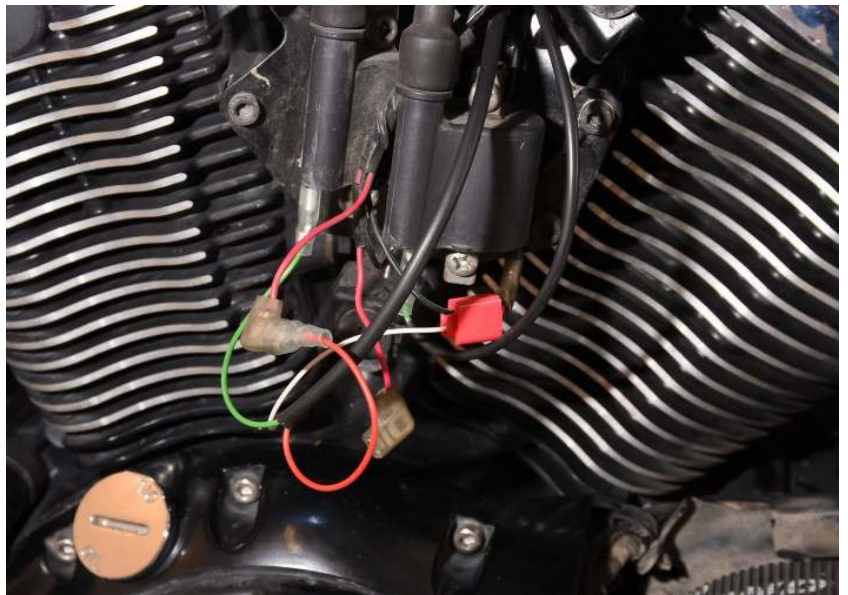

Take off the Red terminal from the 2nd coil.

Connect the QSH Green terminal to this coil terminal.

Isolate the unused Red terminal with tape.




QuickShifter easy Supplementary Manual



Kawasaki Vulcan 900 Custom 2006- (iQSE-1 + QSH-P2T)

Connect the QSH Black wire terminal to the battery negative terminal.

(The picture on the right shows an alternative location, but we recommend using the battery negative terminal)

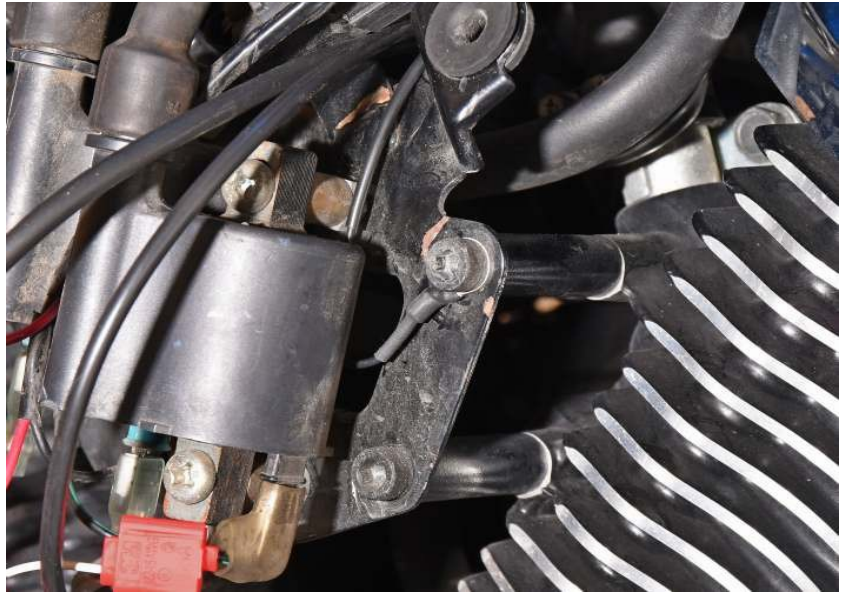

Mount the QSE Sensor.

(Place the sensor in the rod as shown. Tighten the nut by hand fully and then by a 1/4 turn using a wrench but maximum to about 6 Nm.)



Typical position for the QuickShifter easy.

Secure the unit properly.

