


Kawasaki W800 2011- (iQSE-1 + QSH-P2T)

Remove the seat.

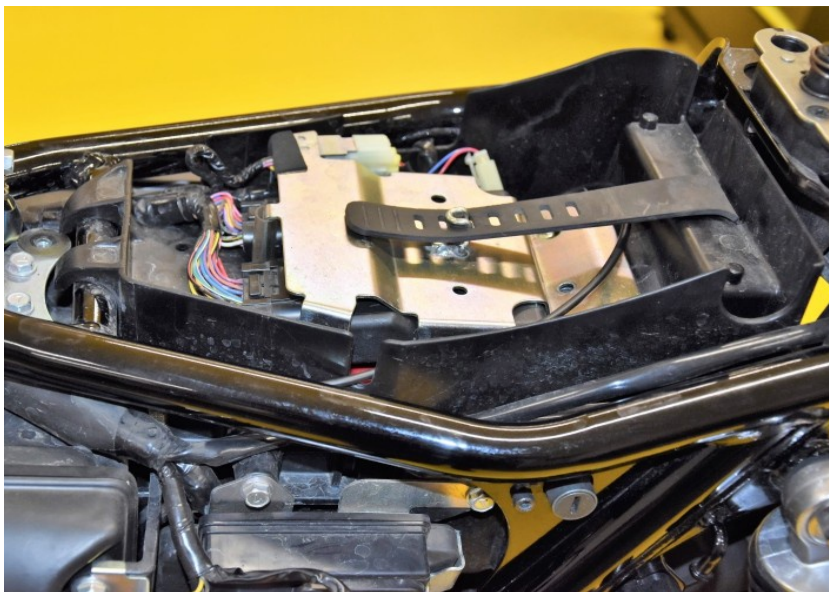

Lift up or remove the fuel tank.



Locate the ignition coil terminals on the right side.



QuickShifter easy Supplementary Manual




Kawasaki W800 2011- (iQSE-1 + QSH-P2T)

Take off the Red terminal from the coil.

Connect the QSH Green terminal to this coil terminal.

Connect the Red terminal to the QSH Red wire terminal and secure with tape.

Isolate the unused QSH Green terminal with tape.

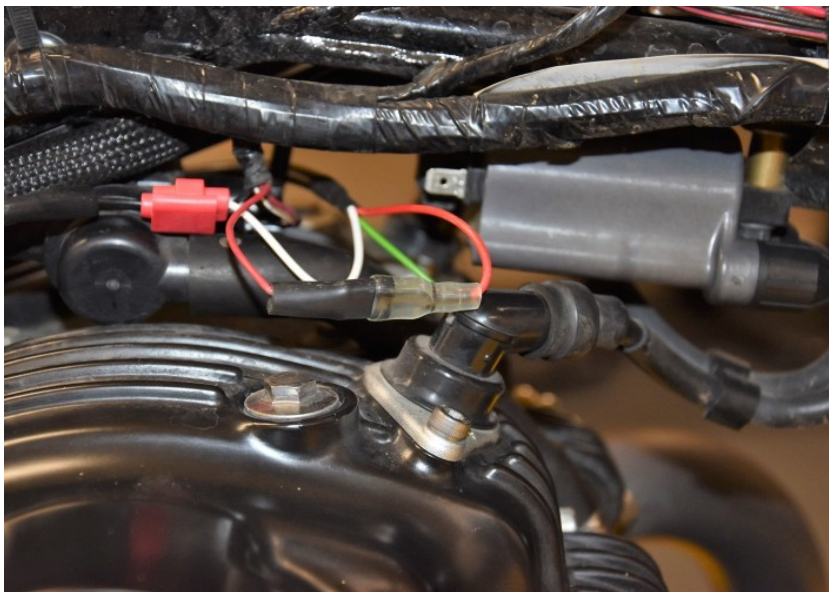

Splice the QSH White wire to the Black wire of the coil by using the supplied red wire tap connector.



Connect the QSH Black wire terminal to the chassis ground.




QuickShifter easy Supplementary Manual



Kawasaki W800 2011- (iQSE-1 + QSH-P2T)

Mount the QSE sensor.

*(Replace the bolt with the one supplied.
Place the supplied washers at both sides of
the sensor. Tighten the bolt in this position
by about 6 Nm. If you do not have torque
wrench, tighten the bolt until the shift arm
is tight on the gearbox shaft.)*

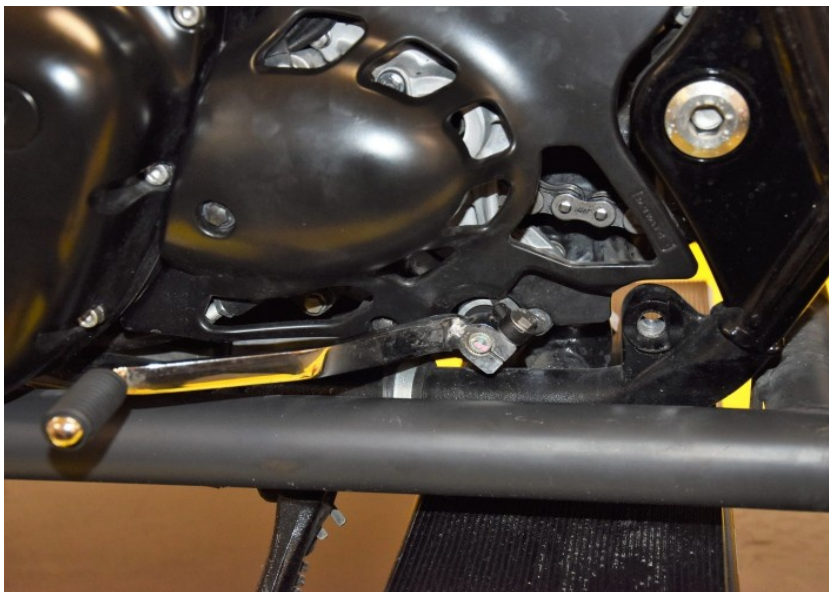

Typical position for the QuickShifter easy.

Secure the unit properly.

