

# QuickShifter easy Supplementary Manual

Suzuki SV650S 1999-2002 (iQSE-W1 + QSH-P2T)


Secure the bike on a stand.



Remove the seats and lift up or remove the fuel tank.



Locate the front and rear ignition coil connectors under the fuel tank.

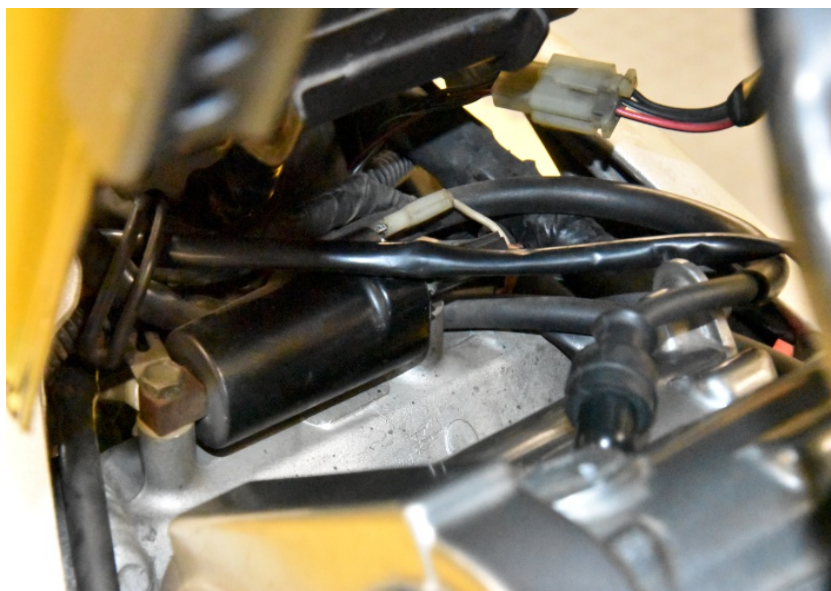

# QuickShifter easy Supplementary Manual




## Suzuki SV650S 1999-2002 (iQSE-W1 + QSH-P2T)


Take off the Orange/White terminal from one of the coil.

Connect the Orange/White terminal to the QSH Red wire terminal.

Connect the QSH Green terminal to this coil terminal.

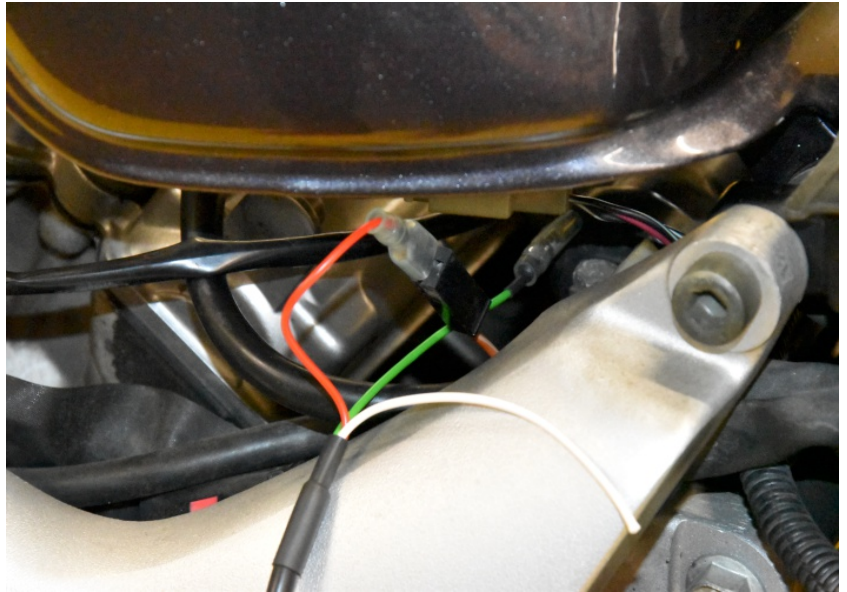

Splice the QSH White wire to the White wire of the coil by using the supplied red wire tap connector.

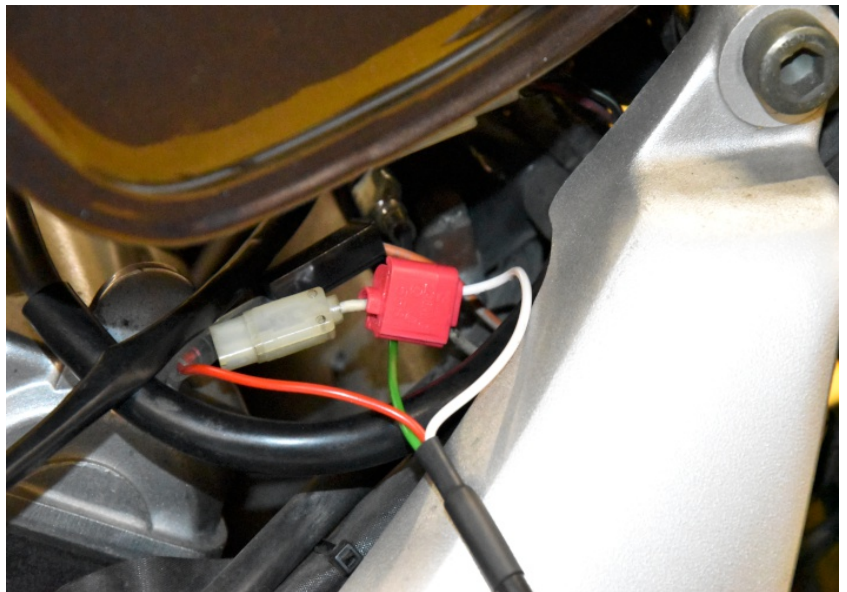

Take off the Orange/White terminal from the other ignition coil.

Connect the QSH Green terminal to the empty ignition coil terminal.

Isolate the unused Orange/White terminal with tape.



# QuickShifter easy Supplementary Manual



Suzuki SV650S 1999-2002 (iQSE-W1 + QSH-P2T)

Connect the QSH Black wire terminal to the battery negative terminal.



Mount the QSE sensor.

*(Place the sensor in the rod as shown.  
Tighten the nut by hand fully and then by a  
1/4 turn using a wrench but maximum to  
about 6 Nm.)*



Typical position for the QuickShifter easy.

Secure the unit properly.

