

QuickShifter easy Supplementary Manual



Triumph Thruxton 1200 ABS TC RS 2016- (iQSE-1 + QSH-P2T)

Secure the bike on a stand.



Remove the seat.

Remove the fuel tank and remove the side covers.



Locate the ignition coil connectors under the fuel tank.



QuickShifter easy

Supplementary Manual


Triumph Thruxton 1200 ABS TC RS 2016- (iQSE-1 + QSH-P2T)

Take off the Brown/Pink terminal from the coil.

Connect the Brown/Pink terminal to the QSH Red wire terminal.

Connect the QSH Green terminal to this coil terminal.


Splice the QSH White wire to the Green/Pink wire of the coil by using the supplied red wire tap connector.

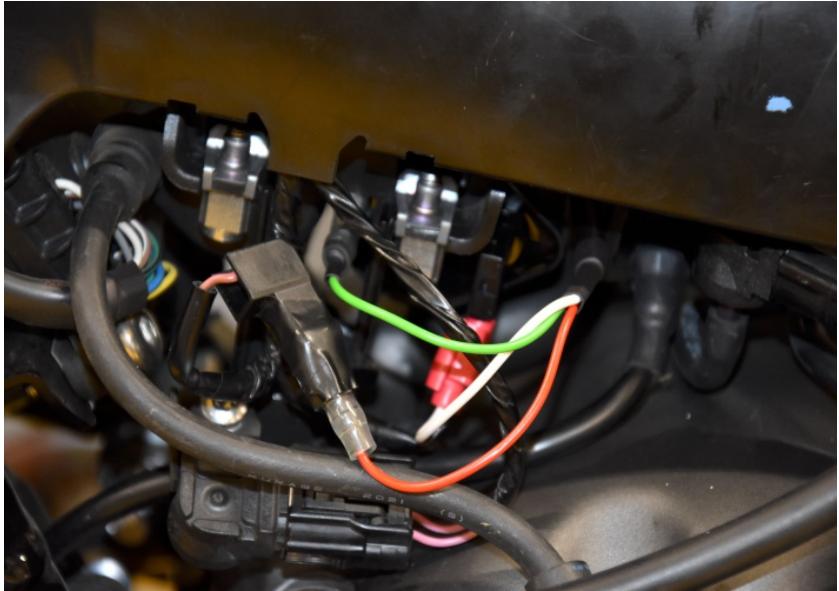


Take off the Brown/Pink terminal from the other ignition coil.

Connect the QSH Green terminal to the empty ignition coil terminal.

Isolate the unused Brown/Pink terminal with tape.

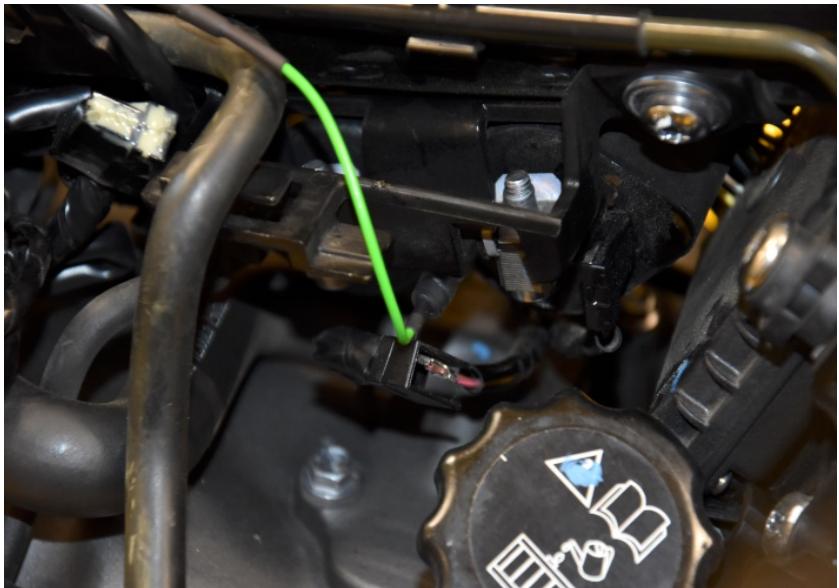

Connect the QSH Black wire terminal to the battery negative terminal.

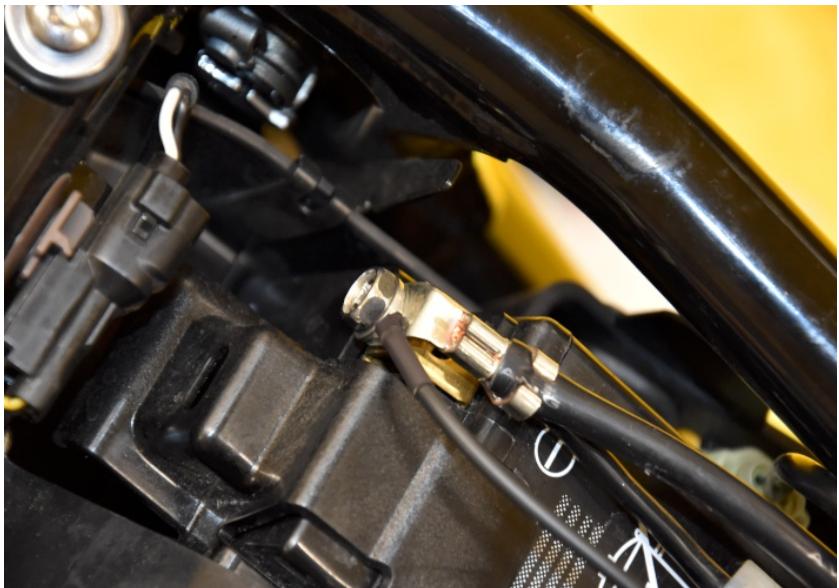

QuickShifter easy


Supplementary Manual



Triumph Thruxton 1200 ABS TC RS 2016- (iQSE-1 + QSH-P2T)

Mount the QSE sensor.

*(Place the sensor in the rod as shown.
Tighten the nut by hand fully and then by a
1/4 turn using a wrench but maximum to
about 6 Nm.)*

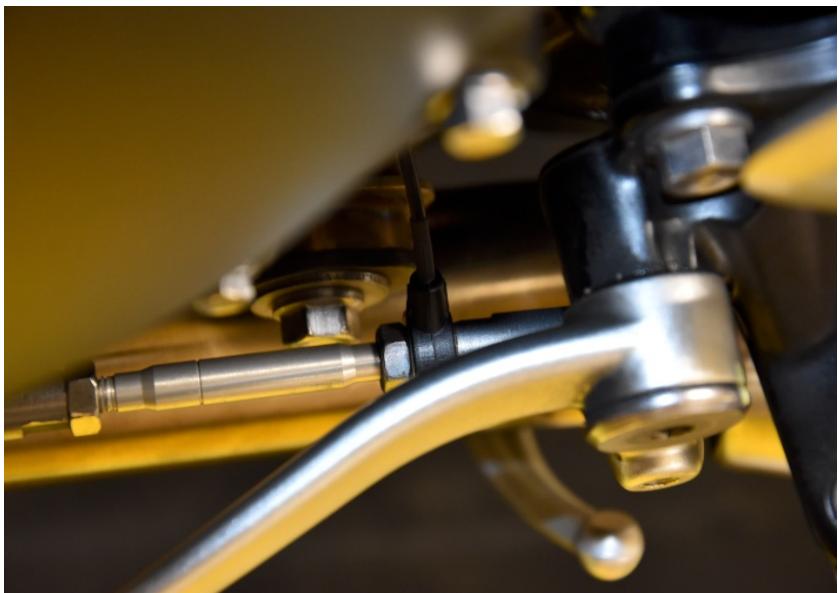

Typical position for the QuickShifter easy.

Secure the unit properly.

