

QuickShifter easy Supplementary Manual



Yamaha XJR1300 2004-2017 (iQSE-1 + QSH-P2T)

Secure the bike on a stand.




Remove the seat and the side covers.

Remove the fuel tank.



Locate the ignition coil terminals under the fuel tank.

Splice the QSH White wire to the Grey/Red wire of the coil by using the supplied red wire tap connector.

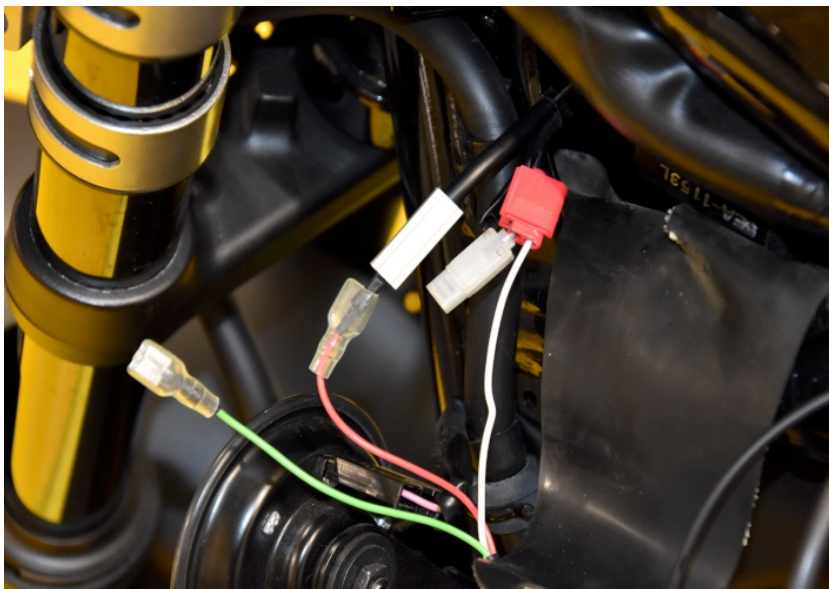

QuickShifter easy Supplementary Manual




Yamaha XJR1300 2004-2017 (iQSE-1 + QSH-P2T)

Take off the Red/Black terminal from the coil.

Connect the Red/Black terminal to the QSH Red wire terminal.

Connect the QSH Green terminal to this coil terminal.

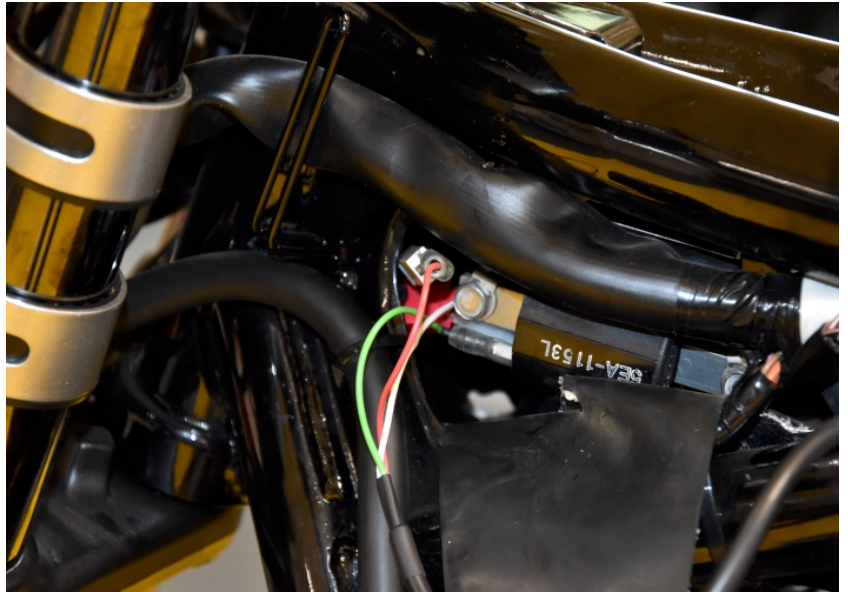

Take off the Red/Black terminal from the other ignition coil.

Connect the QSH Green terminal to the empty ignition coil terminal.

Isolate the unused Red/Black terminal with tape.



Connect the QSH Black wire terminal to the battery negative terminal.

(The picture on the right shows an alternative location, but we recommend using the battery negative terminal)



QuickShifter easy Supplementary Manual



Yamaha XJR1300 2004-2017 (iQSE-1 + QSH-P2T)

Mount the QSE sensor.

(Place the sensor in the rod as shown. Place the supplied washers at both sides of the sensor. Tighten the nut by hand fully and then by a 1/4 turn using a wrench but maximum to about 6 Nm.)



Typical position for the QuickShifter easy.

Secure the unit properly.

