


QuickShifter easy Supplementary Manual

Triumph Daytona 675 2006-2012 (iQSE-1 + QSH-P4A)

Remove the main seat.



Remove the fuel tank.

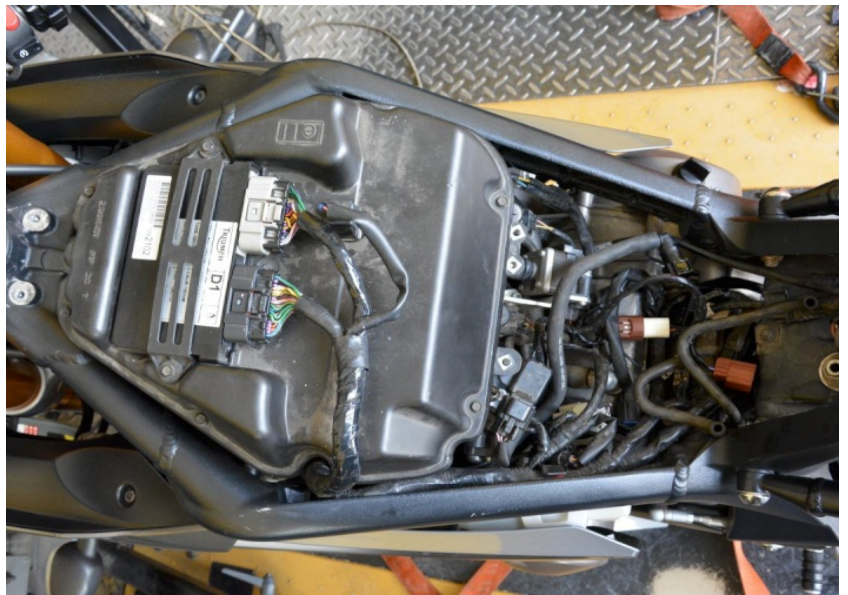

Remove the airbox.



QuickShifter easy Supplementary Manual




Triumph Daytona 675 2006-2012 (iQSE-1 + QSH-P4A)

Plug the QSH connectors in-line with the ignition coil connectors.


(Black, 2-pole connectors below the airbox)

(Make sure the QSH plugs marked with a RED square are connected, and leave one coupler unused)

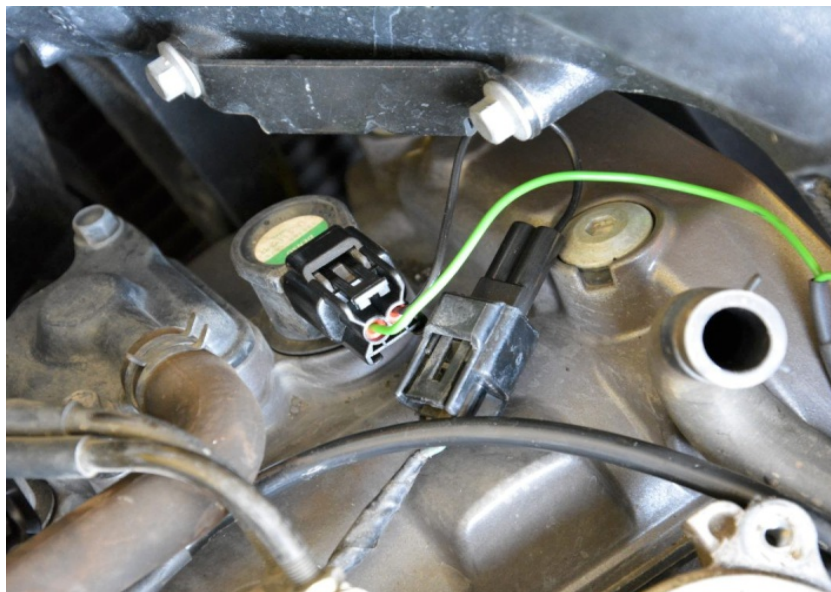

Connect the QSH Black wire terminal to the battery negative terminal.

(The picture on the right shows an alternative location, but we recommend using the battery negative terminal)

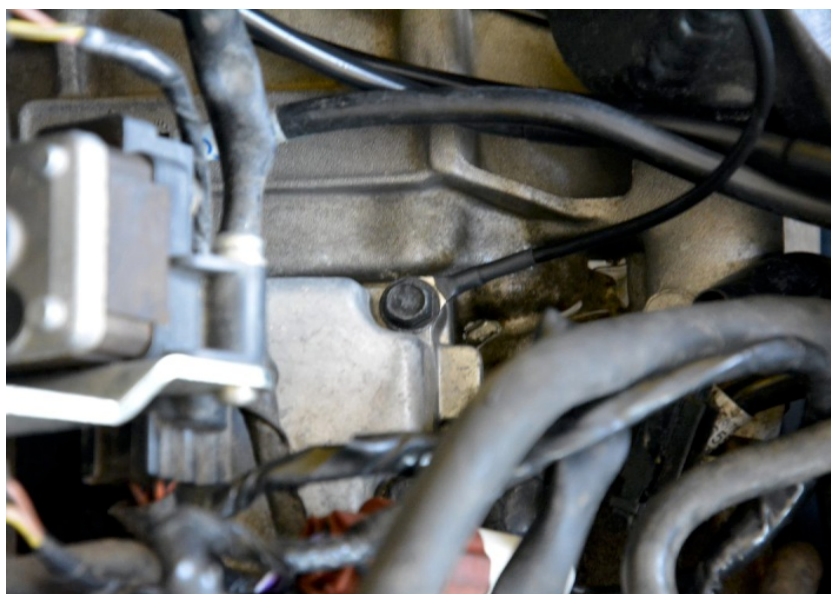

Mount the QSE sensor.

(Replace the bolt with the one supplied. Place the supplied washers at both sides of the sensor. Tighten the bolt in this position by about 6 Nm. If you do not have torque wrench, tighten the bolt until the shift arm is tight on the gearbox shaft.)



QuickShifter easy Supplementary Manual



Triumph Daytona 675 2006-2012 (iQSE-1 + QSH-P4A)

Typical position for the QuickShifter easy.

Secure the unit properly.

