

# QuickShifter easy Supplementary Manual



## Triumph Street Triple 2007-2011 (iQSE-W1 + QSH-P4A)

Secure the bike on a stand.




Remove the seat.



Plug the QSH connectors in-line with the ignition coil connectors.

*(Make sure the QSH plugs marked with RED square are connected, and leave one coupler unused)*

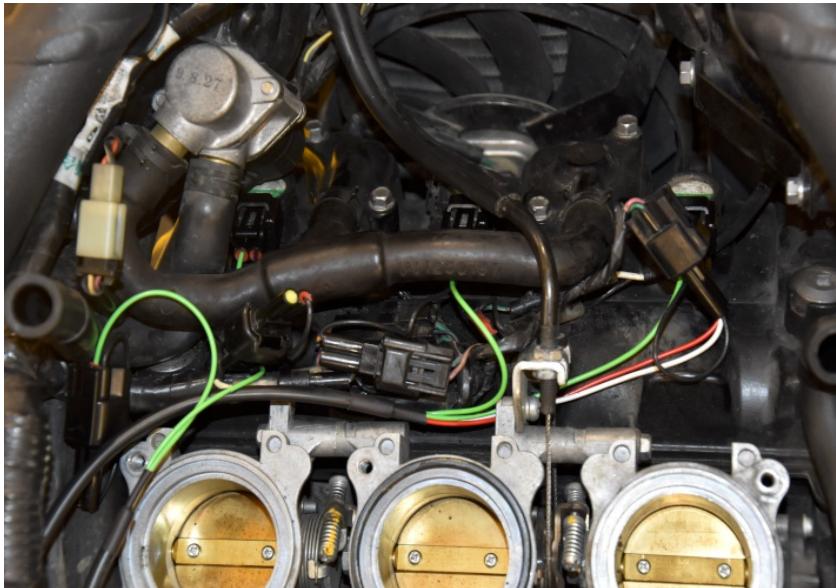

# QuickShifter easy

## Supplementary Manual



### Triumph Street Triple 2007-2011 (iQSE-W1 + QSH-P4A)

Connect the QSH Black wire terminal to the battery negative terminal.

*(The picture on the right shows an alternative location, but we recommend using the battery negative terminal)*



Mount the QSE sensor.

*(Place the sensor in the rod as shown. Tighten the nut by hand fully and then by a 1/4 turn using a wrench but maximum to about 6 Nm.)*



Typical position for the QuickShifter easy.

Secure the unit properly.

