## **QuickShifter easy** Supplementary Manual



## Yamaha XSR900 ABS TC 2016- (iQSE-W1 + QSH-P4A)

Secure the bike on a stand.



Remove the seat.

Remove the covers from the fuel tank.

Remove the fuel tank and the airbox.



Plug the QSH connectors in-line with the ignition coil connectors.

(Make sure the QSH plugs marked with RED square are connected, and leave one coupler unused)




## **QuickShifter easy** Supplementary Manual



## Yamaha XSR900 ABS TC 2016- (iQSE-W1 + QSH-P4A)

Connect the QSH Black wire terminal to the battery nagative terminal.

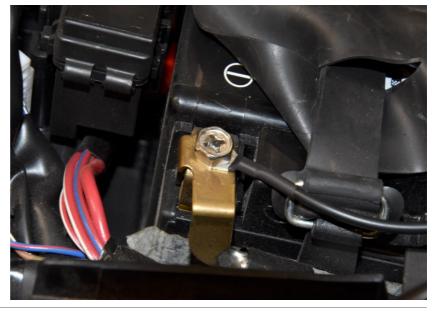

Mount the QSE sensor.

(Place the sensor in the rod as shown. Tighten the nut by hand fully and then by a 1/4 turn using a wrench but maximum to about 6 Nm.)



Typical position for the QuickShifter easy.

Secure the unit properly.

