

# QuickShifter easy Supplementary Manual

## Yamaha XT1200Z ABS TC Super Tenere 2010- (iQSE-1 + QSH-P4A)

Secure the bike on a stand.




Remove the seats.

Remove the side fairings.

Remove the fuel tank and the the airbox.



Plug the QSH connectors in-line with the  
ignition coil connectors.

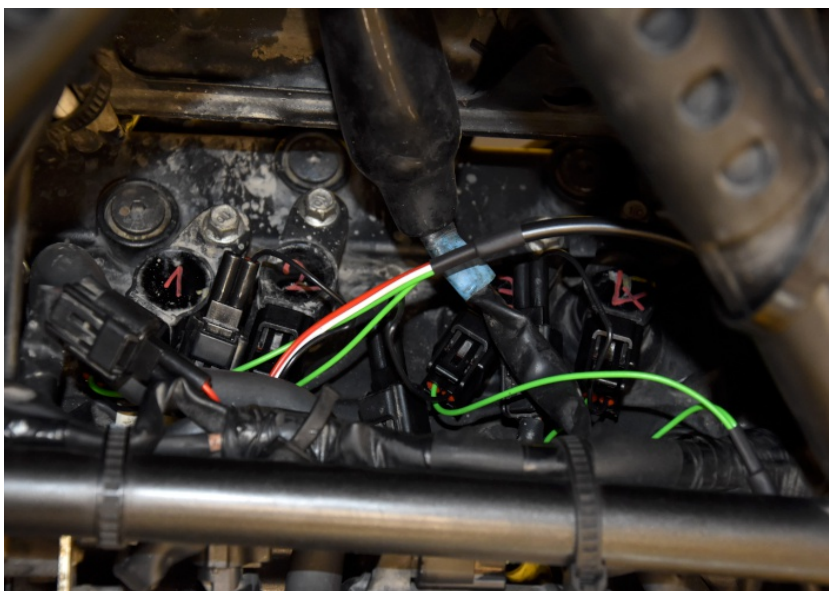

## Yamaha XT1200Z ABS TC Super Tenere 2010- (iQSE-1 + QSH-P4A)

Connect the QSH Black wire terminal to the battery negative terminal.



Mount the QSE sensor.

*(Place the sensor in the rod as shown.  
Tighten the nut by hand fully and then by a  
1/4 turn using a wrench but maximum to  
about 6 Nm.)*



Typical position for the QuickShifter easy.

Secure the unit properly.

