

# QuickShifter easy Supplementary Manual



## Honda CBR1000RR ABS 2009-2019 (iQSE-W1 + QSH-P4B)

Secure the bike on a stand.



Remove side frame covers and the seats.


Remove the fuel tank cover.

Lift up or remove the fuel tank.

Remove the airbox.



Plug the QSH connectors in-line with the  
ignition coil connectors.

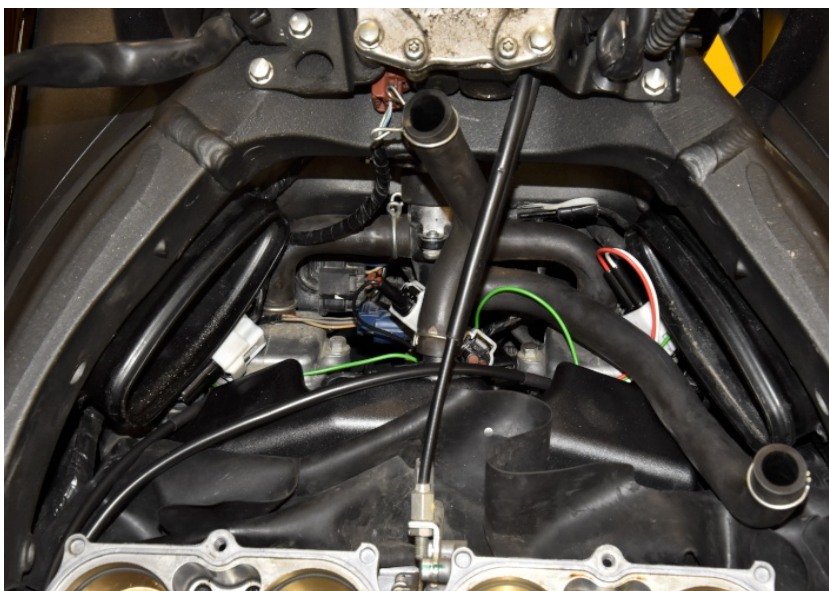

# QuickShifter easy Supplementary Manual



## Honda CBR1000RR ABS 2009-2019 (iQSE-W1 + QSH-P4B)

Connect the QSH Black wire terminal to the battery negative terminal.

*(The picture on the right shows an alternative location, but we recommend using the battery negative terminal)*



Mount the QSE sensor.

*(Replace the bolt with the one supplied. Place the supplied washers at both sides of the sensor. Tighten the bolt in this position by about 6 Nm. If you do not have a torque wrench, tighten the bolt until the shift arm is tight on the gearbox shaft.)*



Typical position for the QuickShifter easy.

Secure the unit properly.

