

QuickShifter easy Supplementary Manual

Honda CBR1000RR ABS 2009-2019 (iQSE-W1 + QSH-P4B)

Secure the bike on a stand.



Remove side frame covers and the seats.


Remove the fuel tank cover.

Lift up or remove the fuel tank.

Remove the airbox.



Plug the QSH connectors in-line with the
ignition coil connectors.

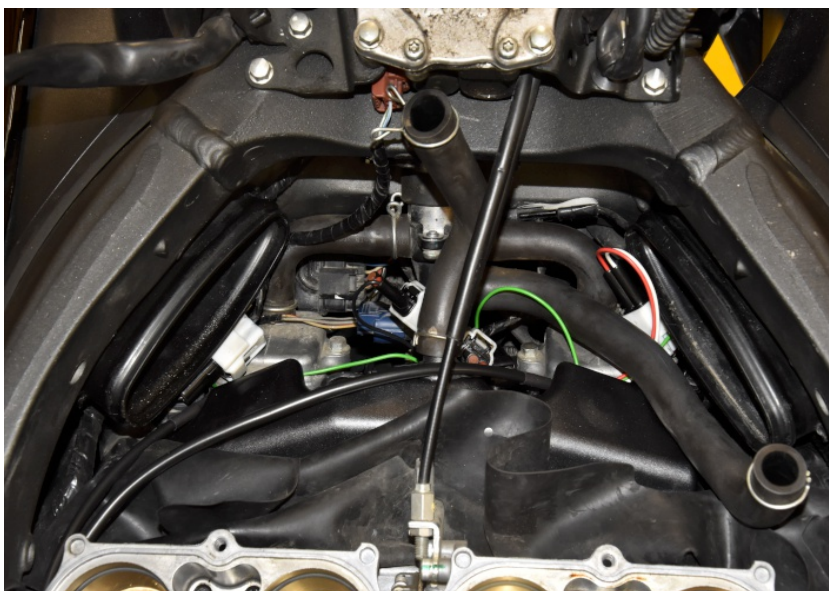

QuickShifter easy Supplementary Manual



Honda CBR1000RR ABS 2009-2019 (iQSE-W1 + QSH-P4B)

Connect the QSH Black wire terminal to the chassis ground.



Mount the QSE sensor.

(Replace the bolt with the one supplied. Place the conical washers at the two sides of the sensor like this: (O). Tighten the bolt in this position by about 6 Nm. If you do not have a torque wrench, tighten the bolt until the shift arm is tight on the gearbox shaft.)



Typical position for the QuickShifter easy.

Secure the unit properly.

