

Honda CBR1000RR 2006-2007 (iQSE-1 + QSH-P4B)

Remove the main seat.



Remove the black side covers from the fuel tank cover.

Remove the fuel tank cover.



Remove the fuel tank.




QuickShifter easy Supplementary Manual



Honda CBR1000RR 2006-2007 (iQSE-1 + QSH-P4B)

Remove the airbox.

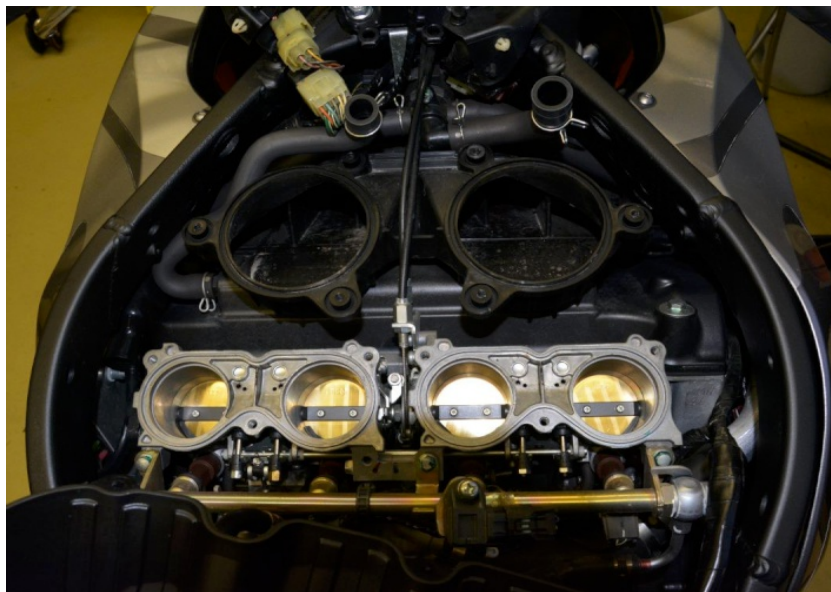

Remove the air intake below the airbox.



Plug the QSH connectors in-line with the
ignition coil connectors.

*(Black, 2-pole connectors below the air
intake)*



QuickShifter easy Supplementary Manual



Honda CBR1000RR 2006-2007 (iQSE-1 + QSH-P4B)

Connect the QSH Black wire terminal to the battery negative terminal.

(The picture on the right shows an alternative location, but we recommend using the battery negative terminal)



Mount the QSE sensor.

(Replace the bolt with the one supplied. Place the supplied washers at both sides of the sensor. Tighten the bolt in this position by about 6 Nm. If you do not have torque wrench, tighten the bolt until the shift arm is tight on the gearbox shaft.)



Typical position for the QuickShifter easy.

Secure the unit properly.

