


## Honda CBR600RR 2007-2008 (iQSE-1 + QSH-P4B)

Remove the main seat.

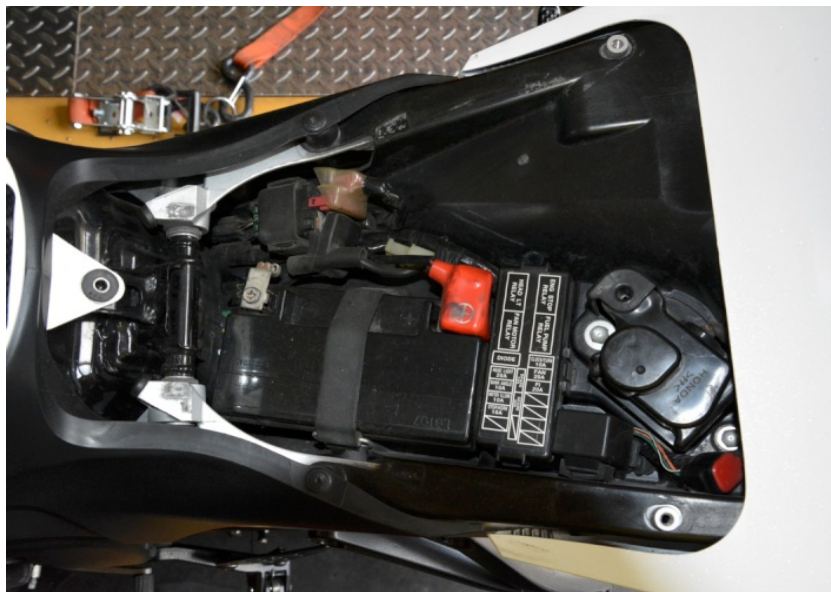

Remove the fuel tank cover.



Lift up or remove the fuel tank.



# QuickShifter easy Supplementary Manual



Honda CBR600RR 2007-2008 (iQSE-1 + QSH-P4B)

Remove the airbox.



Plug the QSH connectors in-line with the  
ignition coil connectors.

*(Black, 2-pole connectors on the top of the  
engine)*



Connect the QSH Black wire terminal to  
the battery negative terminal.



# QuickShifter easy Supplementary Manual



## Honda CBR600RR 2007-2008 (iQSE-1 + QSH-P4B)

Mount the QSE sensor.

*(Replace the bolt with the one supplied.  
Place the supplied washers at both sides of  
the sensor. Tighten the bolt in this position  
by about 6 Nm. If you do not have torque  
wrench, tighten the bolt until the shift arm  
is tight on the gearbox shaft.)*



Typical position for the QuickShifter easy.

Secure the unit properly.

