

## Aprilia Caponord 1200 2013- (iQSE-1 + QSH-P4H)

Remove the seats.



Remove the frame covers and the side fairings.




Remove the fuel tank.



## Aprilia Caponord 1200 2013- (iQSE-1 + QSH-P4H)

Remove the airbox.

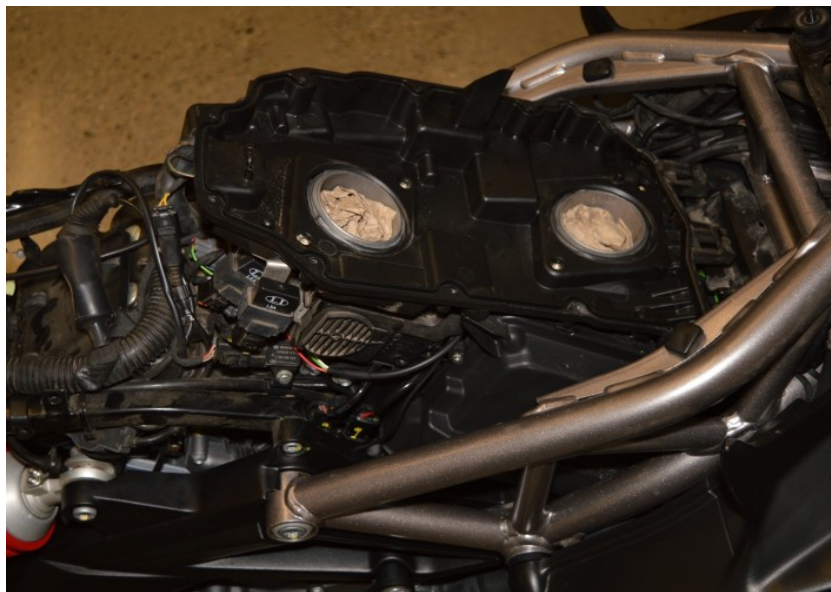


Connect the QSH connectors in-line with the ignition coil connectors on the left side.

*(Black, 3-pole connectors)*



Connect the QSH connectors in-line with the ignition coil connectors on the right side.

*(Black, 3-pole connectors)*

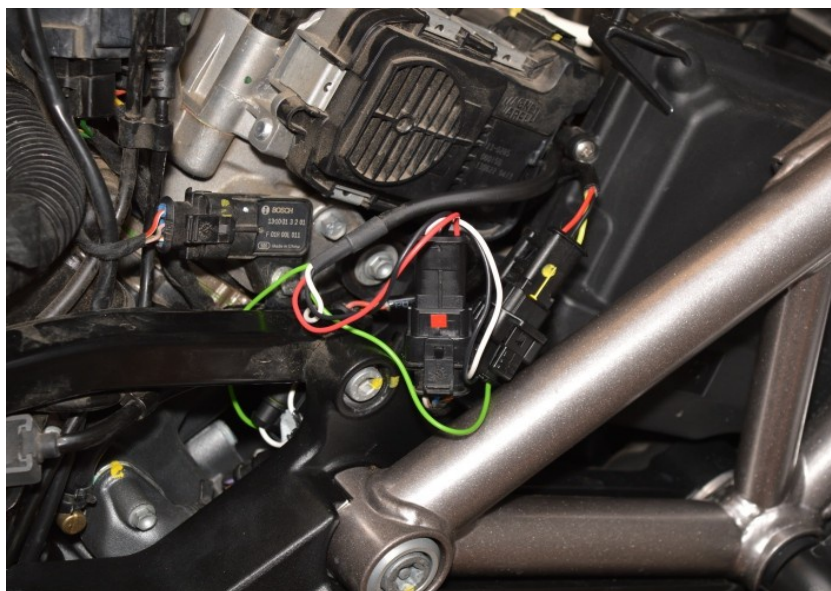



# QuickShifter easy Supplementary Manual



## Aprilia Caponord 1200 2013- (iQSE-1 + QSH-P4H)

Connect the QSH Black wire terminal to the chassis ground.



Mount the QSE sensor.

*(Replace the bolt with the one supplied.  
Place the conical washers at the two sides  
of the sensor like this: (O). Tighten the bolt  
in this position by about 6 Nm. If you do not  
have torque wrench, tighten the bolt until  
the shift arm is tight on the gearbox shaft.)*



Typical position for the QuickShifter easy.

Secure the unit properly.

