

QuickShifter easy Supplementary Manual



Husqvarna SM 125 1998-2013 (iQSE-W3 + QSH-SW1)


Secure the bike properly.

Note: These instructions are applicable if an aftermarket ignition system is installed, e.g. EMP (Elekra Moto Power) or HPI (Horse Power Ignition) and a 12V battery.




Connect the QSH Red wire to the positive terminal of the battery via an on/off switch.

Connect the QSH Black wire to the negative terminal of the battery.

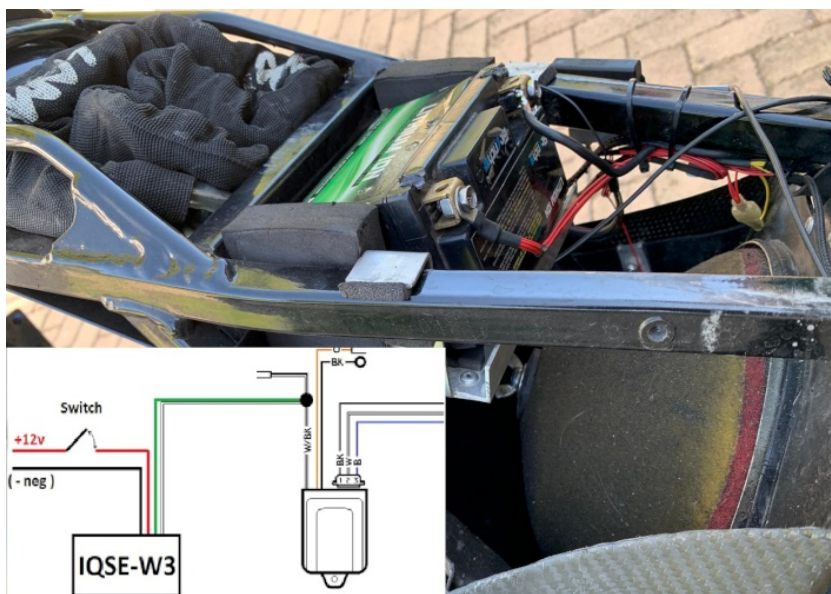

Connect the QSH White and Green wires to the engine cutoff Black/White wire. This wire comes directly from the control unit.

In the iQSE-W app, set the "Pulses per rev" parameter to 3.

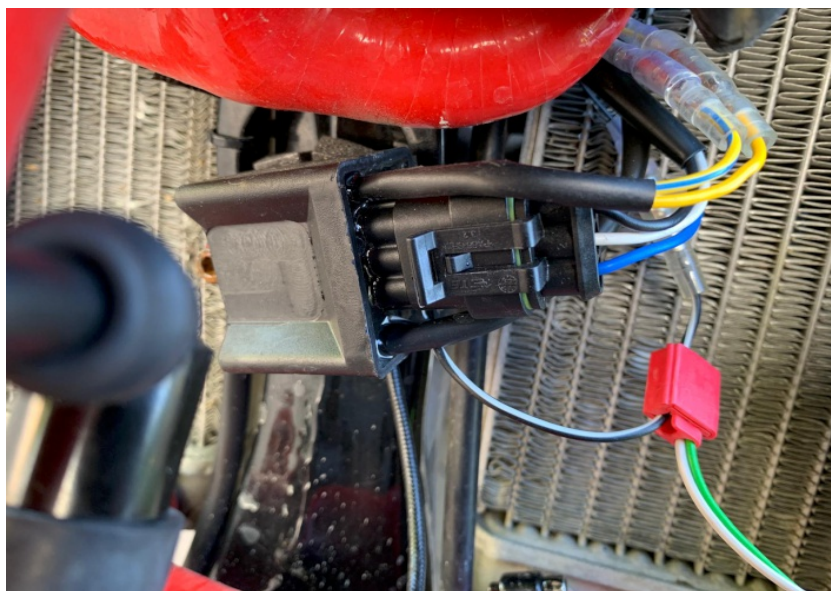


QuickShifter easy Supplementary Manual



Husqvarna SM 125 1998-2013 (iQSE-W3 + QSH-SW1)

Mount the QSE sensor under the bolt of gearbox shaft.

(Replace the bolt with the one supplied. Place the supplied washers at both sides of the sensor. Tighten the bolt in this position by about 6Nm. If you do not have a torque wrench, tighten the bolt until the shift arm is tight on the gearbox shaft.)

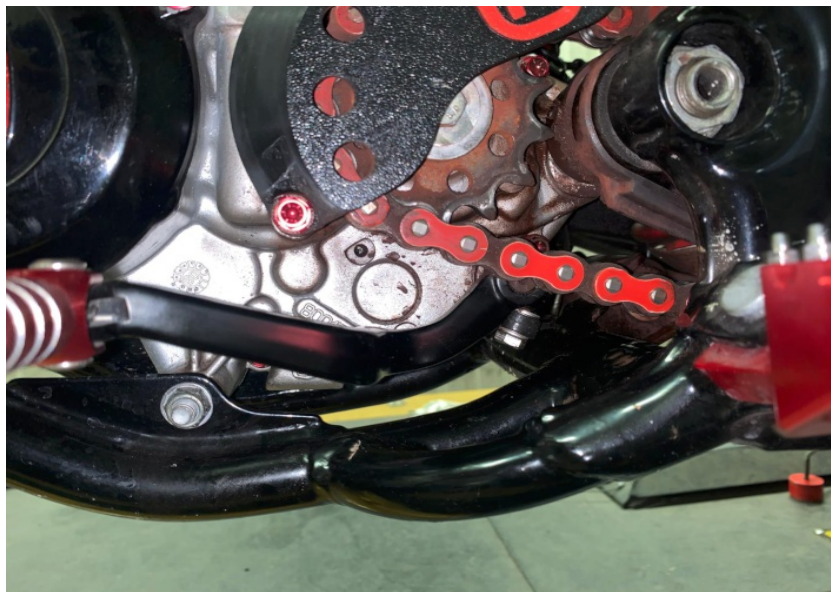

Typical position for the QuickShifter easy.

Secure the unit properly.

