

# QuickShifter easy Supplementary Manual

KTM 1290 Super Duke R/GT 2014- (iQSE-1 + QSR-F2F)

Remove the seats.



Remove the left and right side covers  
with the blinkers.



Remove the lower plastic covers around  
the fuel tank.



# QuickShifter easy Supplementary Manual

## KTM 1290 Super Duke R/GT 2014- (iQSE-1 + QSR-F2F)


Remove the fuel tank.



Remove the airbox.



Connect the QSH connectors in-line with  
the fuel injector connectors.

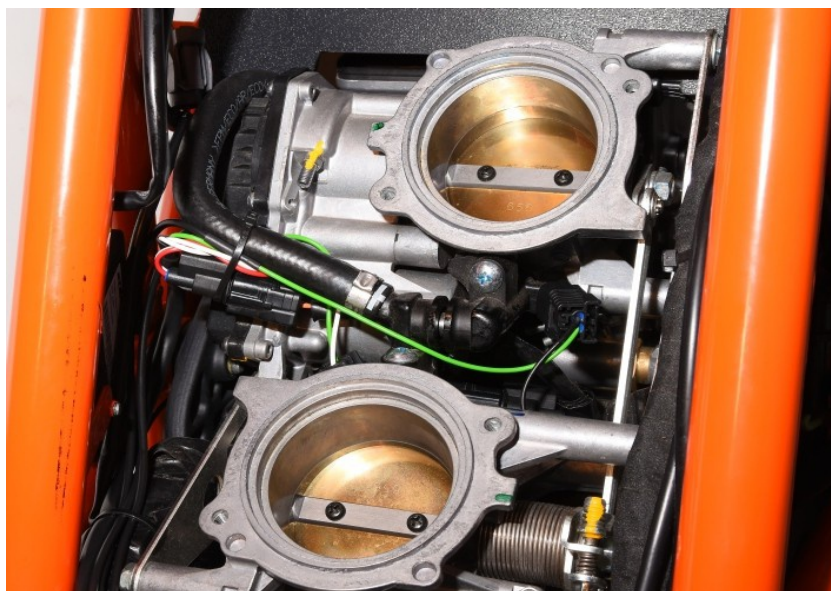



# QuickShifter easy Supplementary Manual



## KTM 1290 Super Duke R/GT 2014- (iQSE-1 + QSR-F2F)

Connect the QSH Black wire terminal to the battery negative terminal.

*(The picture on the right shows an alternative location, but we recommend using the battery negative terminal)*



Remove the OEM shift rod.

Install the supplied M6 shift rod.

Mount the QSE sensor.

*(Place the sensor in the rod without the washers, so the sensor only. Tighten the nut by hand fully and then by a 1/4 turn using a wrench but maximum to about 6 Nm.)*



Typical position for the QuickShifter easy.

Secure the unit properly.

