

QuickShifter easy

Supplementary Manual



Honda VFR800 Interceptor ABS 2002-2013 (iQSE-1 + QSX-F4B)

Secure the bike on a stand.



Remove the seat and remove the black frame covers below the seat.


Remove the side fairings.

Lift up or remove the fuel tank and remove the airbox.



Plug the QSX connectors in-line with the fuel injector connectors.

(Gray, 2-pole connectors below the airbox)

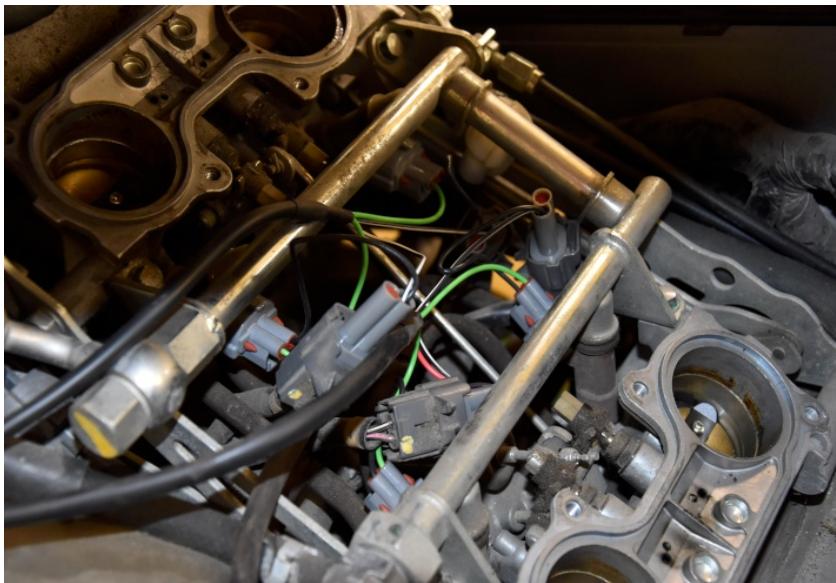


QuickShifter easy

Supplementary Manual



Honda VFR800 Interceptor ABS 2002-2013 (iQSE-1 + QSX-F4B)

Connect the QSX Black wire terminal to the battery negative terminal.

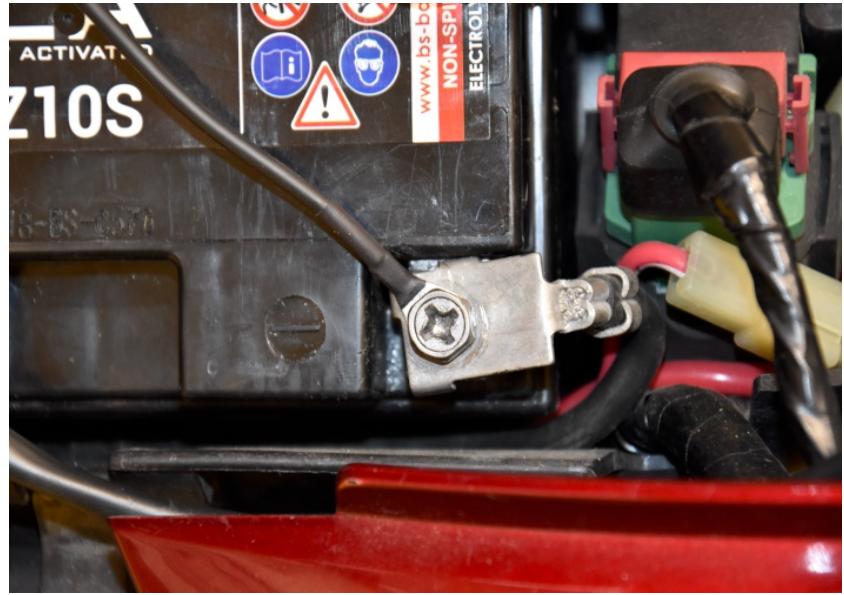

Mount the QSE sensor.

*(Replace the bolt with the one supplied.
Place the supplied washers at both sides of
the sensor. Tighten the bolt in this position
by about 6 Nm. If you do not have torque
wrench, tighten the bolt until the shift arm
is tight on the gearbox shaft.)*



Typical position for the QuickShifter easy.

Secure the unit properly.

