SpeedoHealer CAN
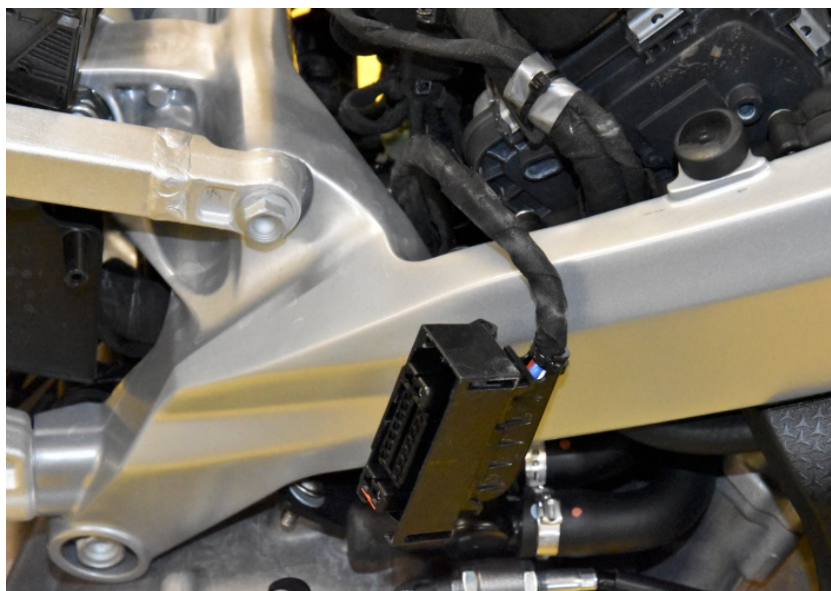## Supplementary Manual

Secure the bike on a stand.

Remove the seats.

Remove the plastic cover from the fuel tank.

Remove the fuel tank.
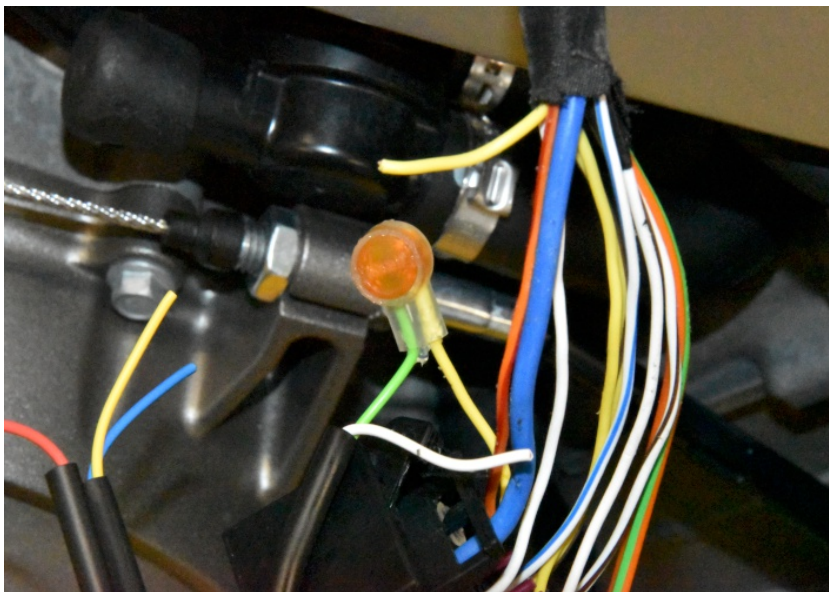

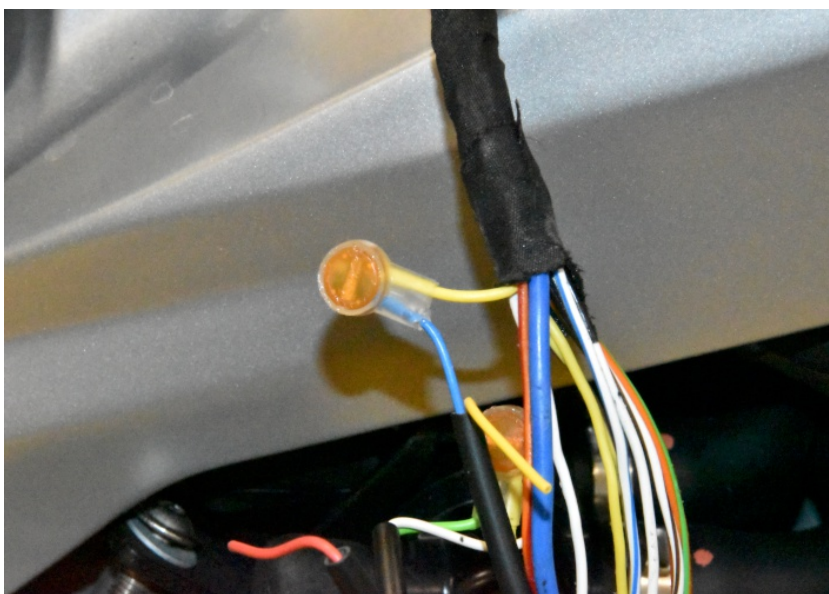Locate the ABS connector under the fuel tank.

Aprilia RS660 ABS TC 2020- (SH-CAN)

Cut the Yellow wire about 2,5cm (1") of the connector.

Connect the SH Green wire to the Yellow wire end, which goes to the ABS module. Use a yellow butt connector.
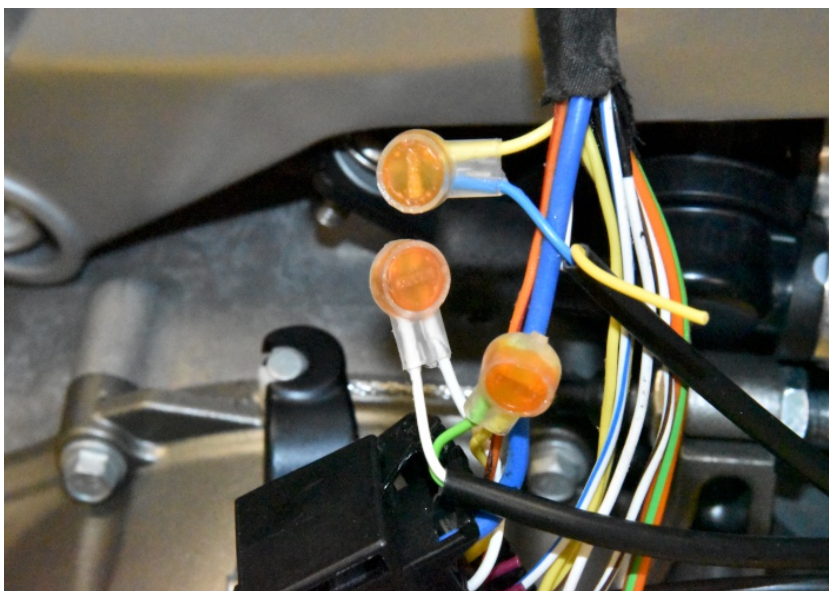

Connect the SH Blue wire to the Yellow wire end, which is at the wiring harness side. Use a yellow butt connector.

Cut the White wire about 2,5cm (1") of the connector.

Connect the SH White wire to the White wire end, which goes to the ABS module. Use a yellow butt connector.
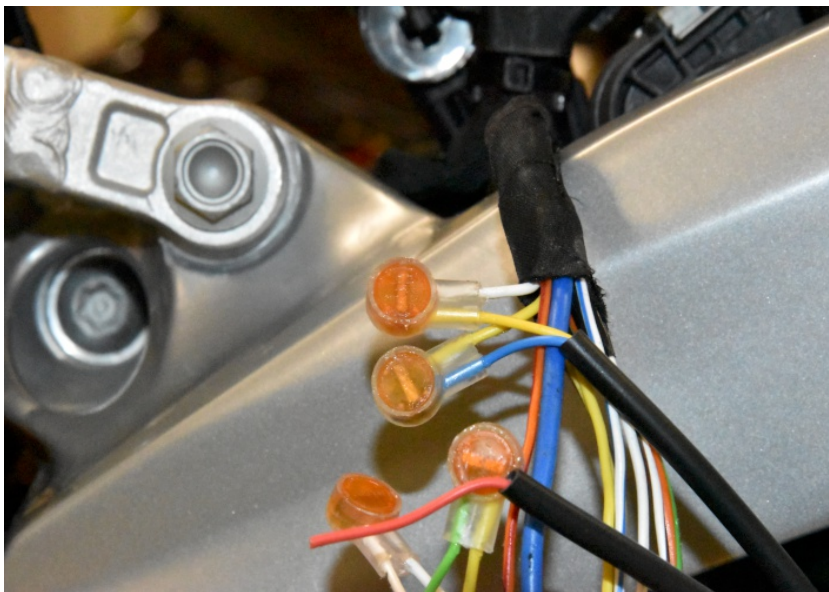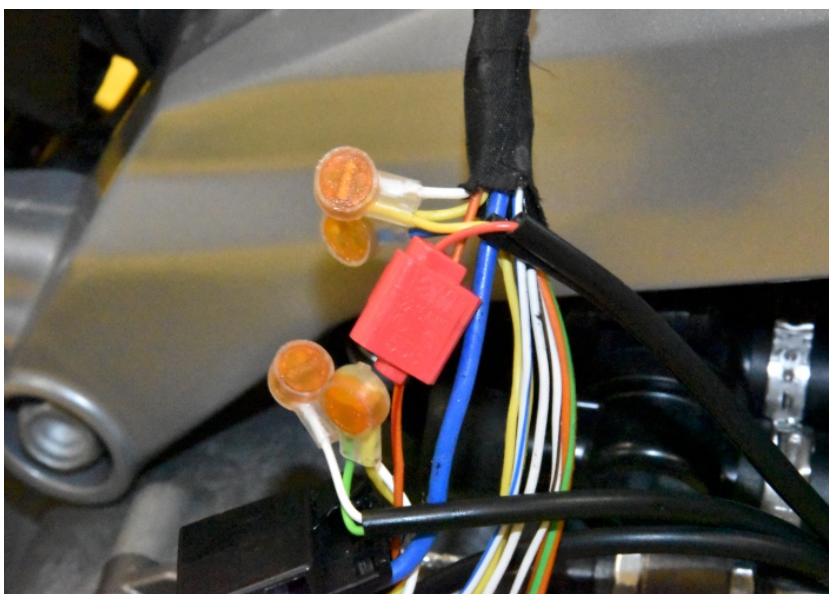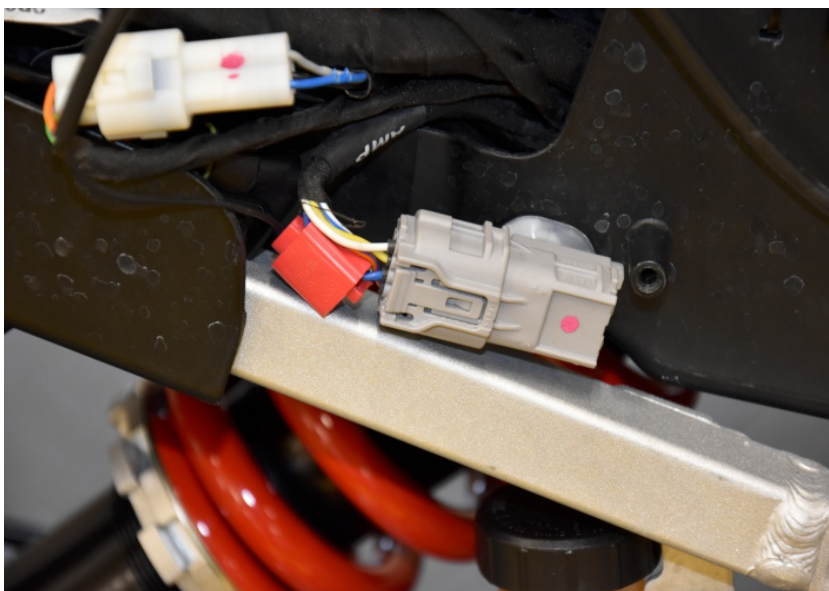
Aprilia RS660 ABS TC 2020- (SH-CAN)

Connect the SH Yellow wire to the White wire end, which is at the wiring harness side. Use a yellow butt connector.

Splice the SH Red wire to the Orange/Red wire of the ABS connector. Use a red wire tap connector.

Splice the SH Black wire to the Blue wire of the unused additional connector. Use a red wire tap connector.

SpeedoHealer CAN
Supplementary Manual

Typical position for the SpeedoHealer CAN.

Secure the unit properly.