# SpeedoHealer CAN
## Supplementary Manual

Secure the bike on a stand.



Remove the seats.
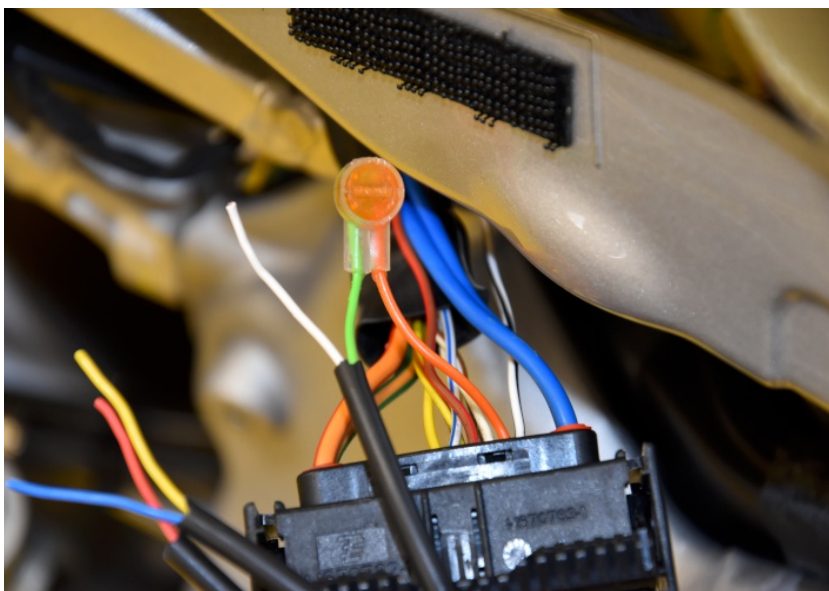
Remove the plastic cover from the fuel tank.

Lift up the fuel tank.

Locate the ABS connector under the fuel tank on the right side.



Cut the Orange wire about 2,5cm (1") of the connector.

Connect the SH Green wire to the Orange wire end, which goes to the ABS module. Use a yellow butt connector.
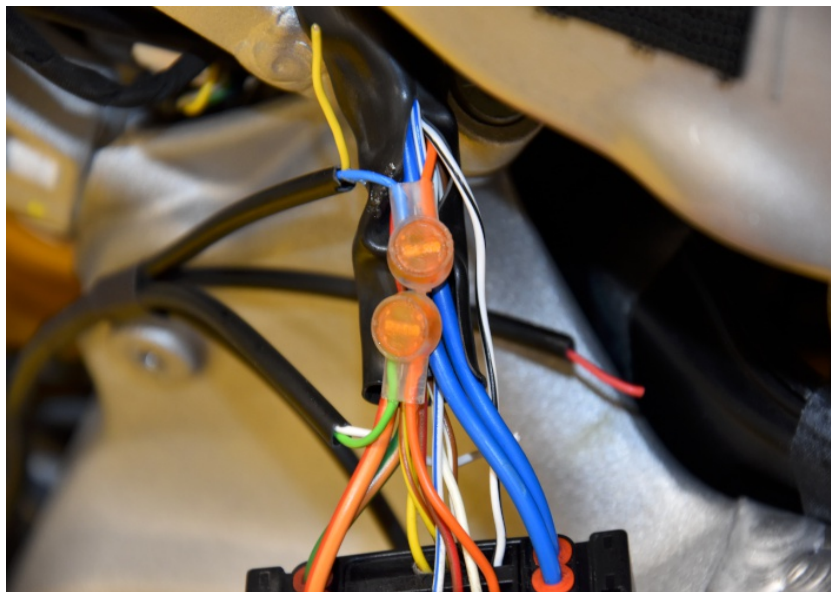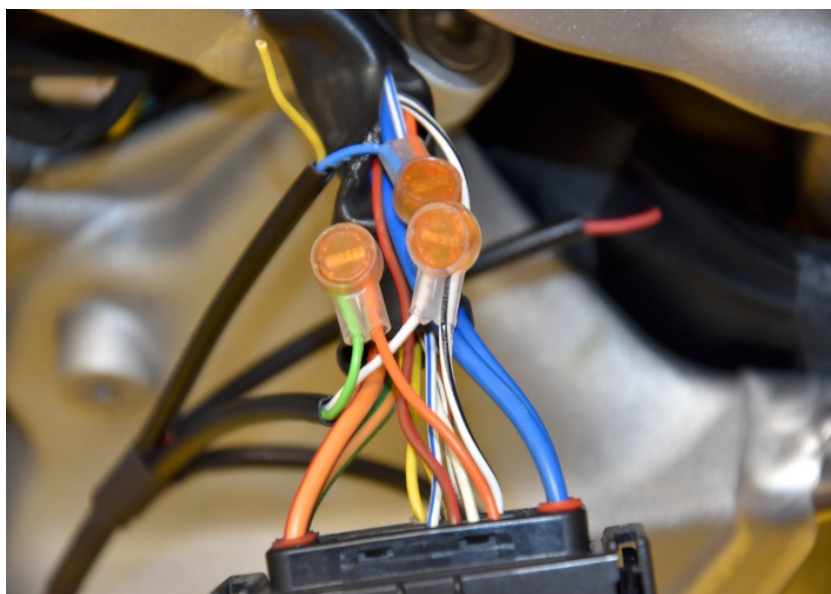
Connect the SH Blue wire to the Orange wire end, which is at the wiring harness side. Use a yellow butt connector.
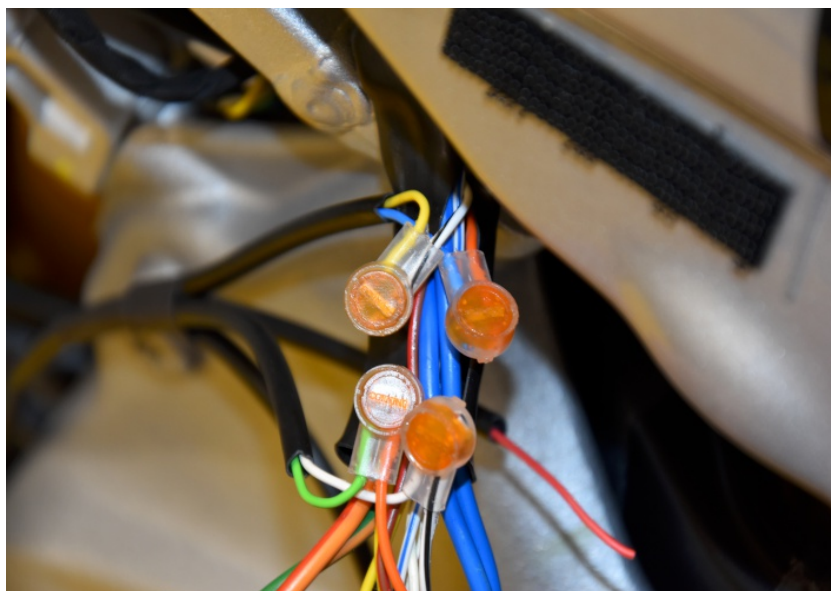


Cut the White/Black wire about 2,5cm (1") of the connector.

Connect the SH White wire to the White/Black wire end, which goes to the ABS module. Use a yellow butt connector.



Connect the SH Yellow wire to the White/Black wire end, which is at the wiring harness side. Use a yellow butt connector.
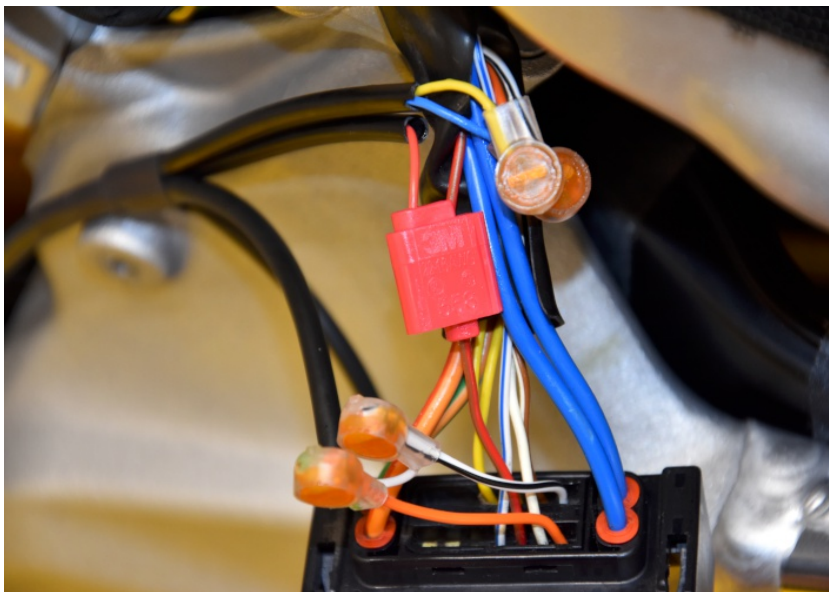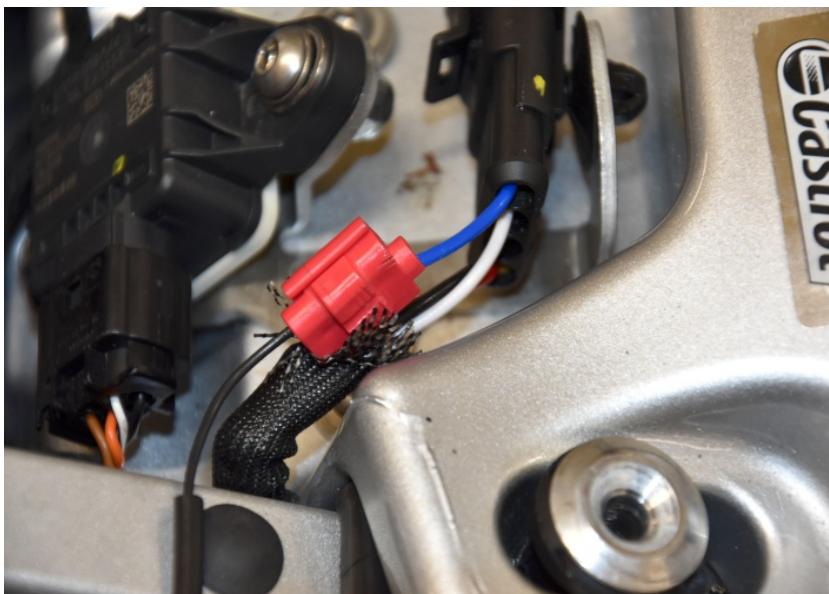
# SpeedoHealer CAN
## Supplementary Manual

Splice the SH Red wire to the Red/Brown wire of the ABS connector. Use a red wire tap connector.



Splice the SH Black wire to the Blue wire of the fuel pump connector. Use a red wire tap connector.



Typical position for the SpeedoHealer CAN.

Secure the unit properly.