

SpeedoHealer CAN Supplementary Manual




BMW S1000XR ABS TC 2016-2020 (SH-CAN)

Secure the bike on a stand.




Remove the seat.

Locate the ABS connector under the seat.

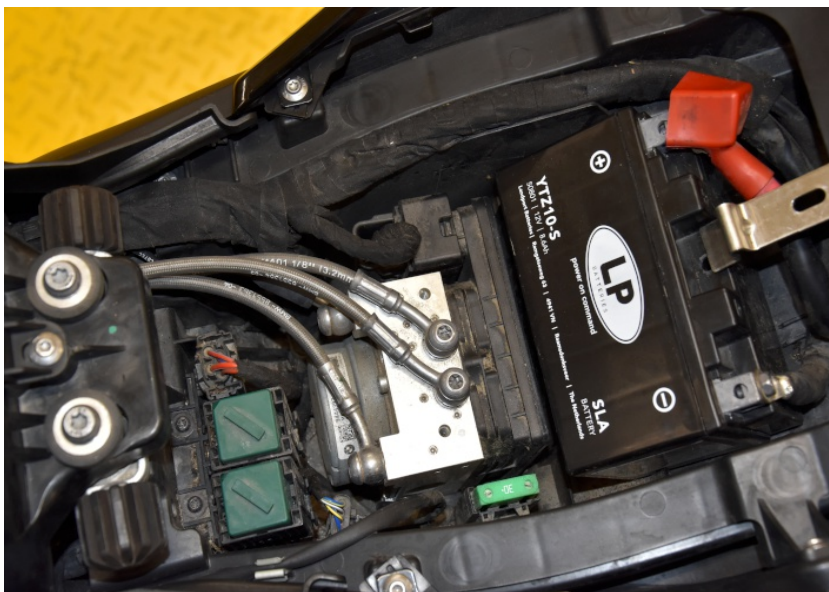

Cut the White/Black wire about 2,5cm (1") of the connector.

Connect the SH Green wire to the White/Black wire end, which goes to the ABS module. Use a yellow butt connector.

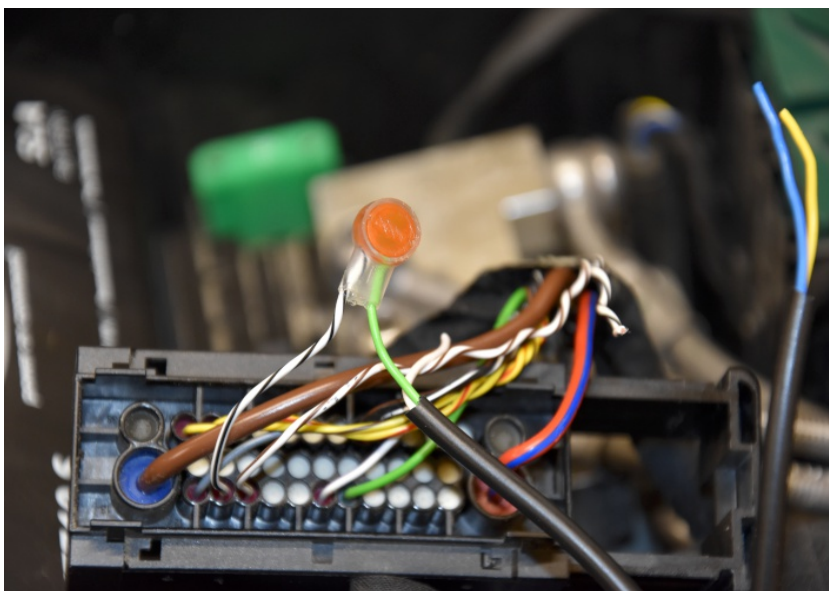


SpeedoHealer CAN Supplementary Manual




BMW S1000XR ABS TC 2016-2020 (SH-CAN)

Connect the SH Blue wire to the White/Black wire end, which is at the wiring harness side. Use a yellow butt connector.

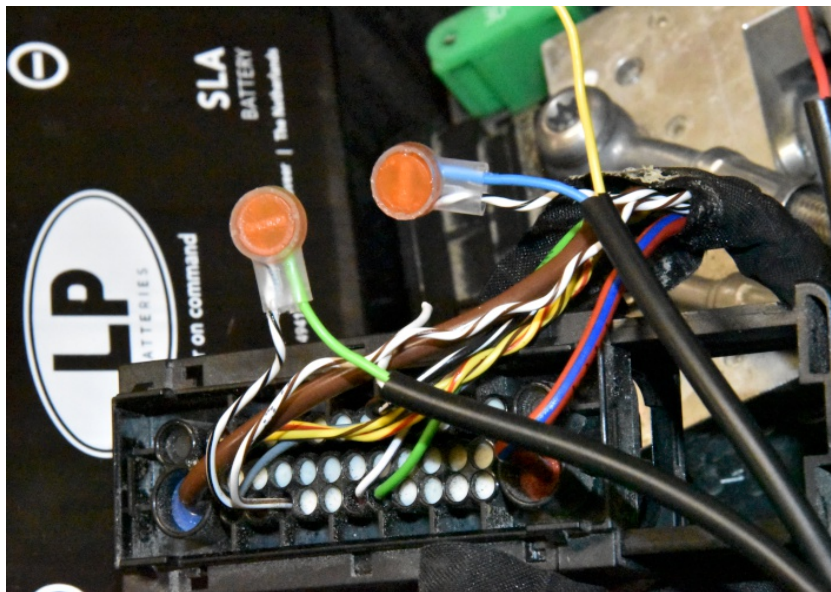


Cut the White/Brown wire about 2,5cm (1") of the connector.

Connect the SH White wire to the White/Brown wire end, which goes to the ABS module. Use a yellow butt connector.

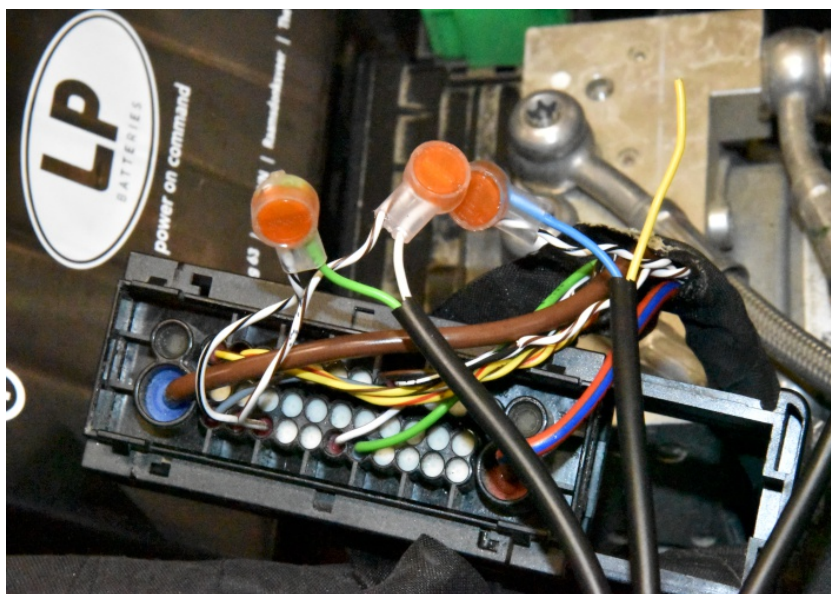

Connect the SH Yellow wire to the White/Brown wire end, which is at the wiring harness side. Use a yellow butt connector.

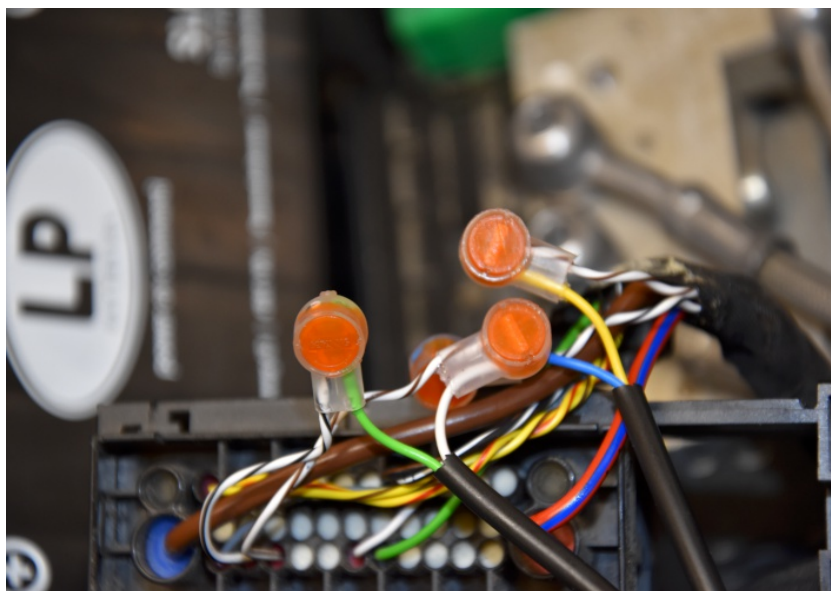


SpeedoHealer CAN Supplementary Manual




BMW S1000XR ABS TC 2016-2020 (SH-CAN)

Splice the SH Red wire to the Green wire of the ABS connector. Use a red wire tap connector.

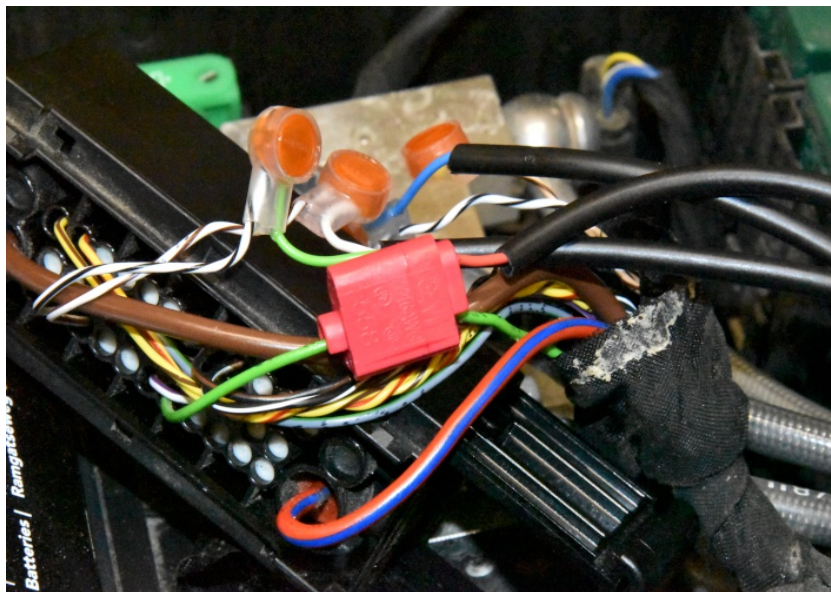

Splice the SH Black wire to the Brown wire of the diagnostic connector. Use a red wire tap connector.

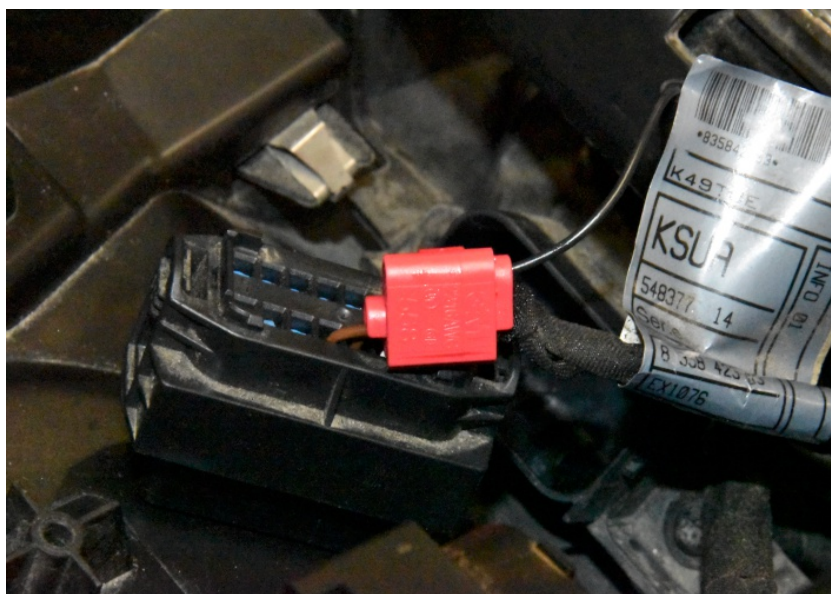

Typical position for the SpeedoHealer CAN.

Secure the unit properly.

