

SpeedoHealer CAN Supplementary Manual




Ducati Hypermotard ABS TC 2022- (SH-CAN)

Secure the bike on a stand.




Remove the seat.

Locate the ABS connector under the fuel tank.

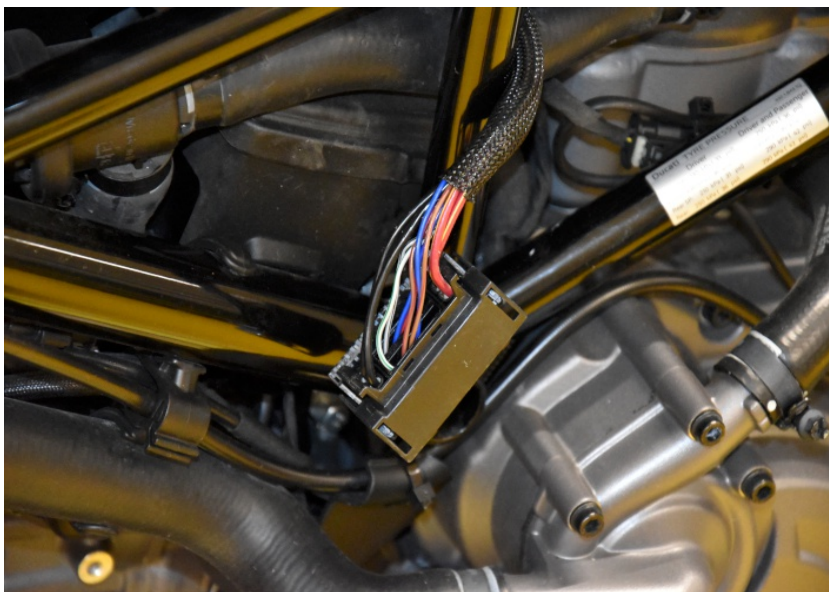

Cut the Grey/Black wire about 2,5cm (1") of the connector.

Connect the SH Green wire to the Grey/Black wire end, which goes to the ABS module. Use a yellow butt connector.

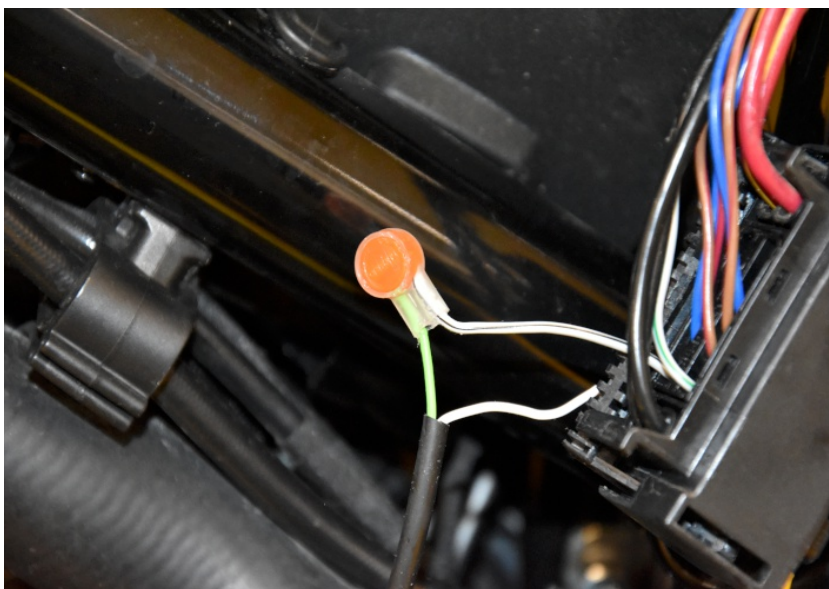

SpeedoHealer CAN Supplementary Manual



Ducati Hypermotard ABS TC 2022- (SH-CAN)

Connect the SH Blue wire to the Grey/Black wire end, which is at the wiring harness side. Use a yellow butt connector.



Cut the Grey/Green wire about 2,5cm (1") of the connector.

Connect the SH White wire to the Grey/Green wire end, which goes to the ABS module. Use a yellow butt connector.



Connect the SH Yellow wire to the Grey/Green wire end, which is at the wiring harness side. Use a yellow butt connector.




SpeedoHealer CAN Supplementary Manual




Ducati Hypermotard ABS TC 2022- (SH-CAN)

Splice the SH Red wire to the Red/Black wire of the ABS connector. Use a red wire tap connector.

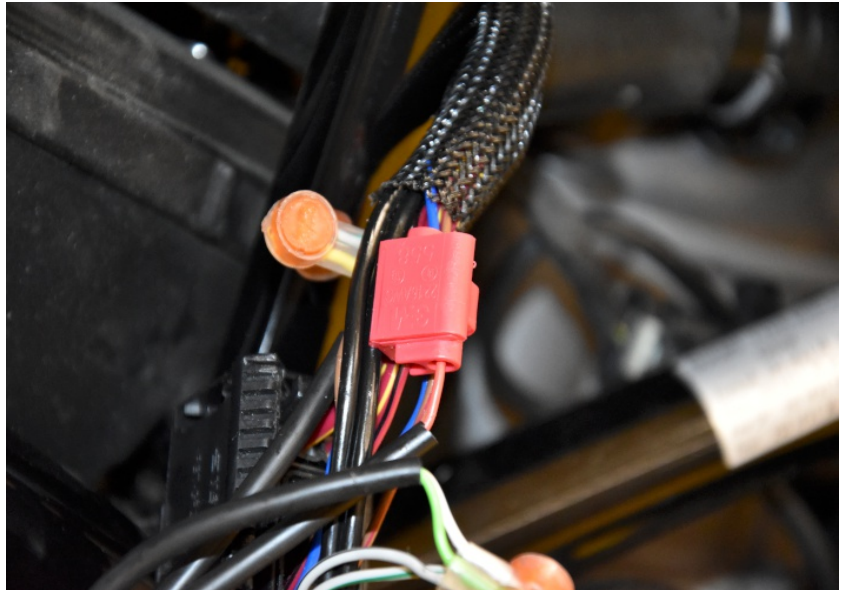

Splice the SH Black wire to the Black wire of the fan cooling connector. Use a red wire tap connector.

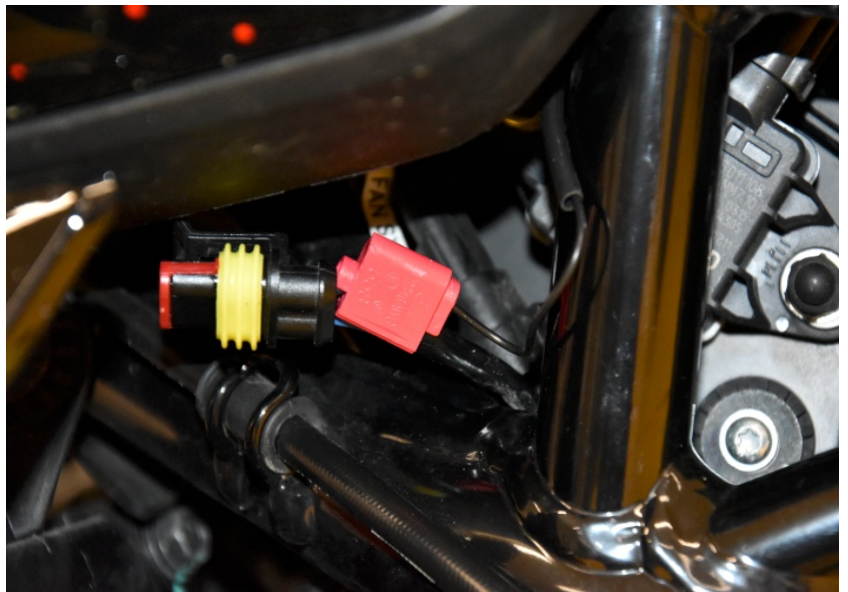

Typical position for the SpeedoHealer CAN.

Secure the unit properly.

