

SpeedoHealer CAN Supplementary Manual



Ducati Panigale 899 ABS TC 2014-2015 (SH-CAN)


Secure the bike on a stand.



Remove the side fairing on the right side.



Locate the ABS connector.

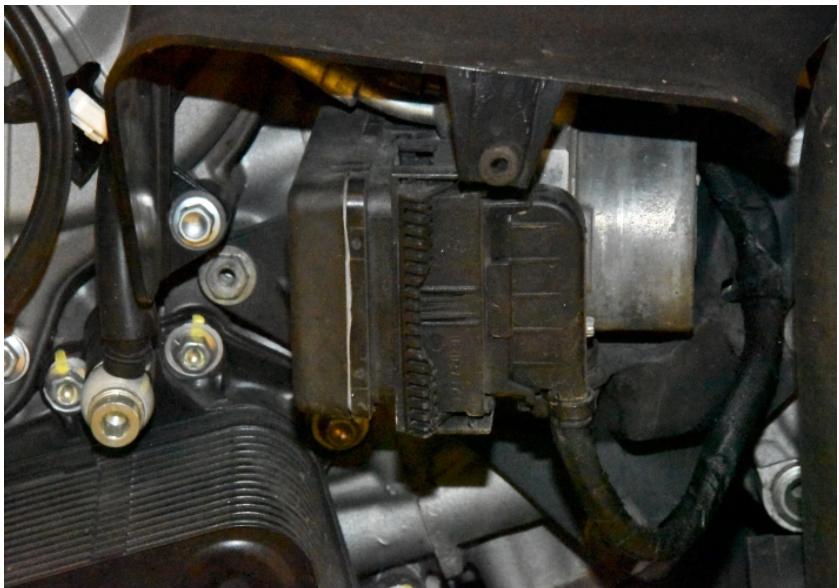


SpeedoHealer CAN Supplementary Manual




Ducati Panigale 899 ABS TC 2014-2015 (SH-CAN)

Cut the Black/Brown wire about 2,5cm (1") of the connector.

Connect the SH Green wire to the Black/Brown wire end, which goes to the ABS module. Use a yellow butt connector.

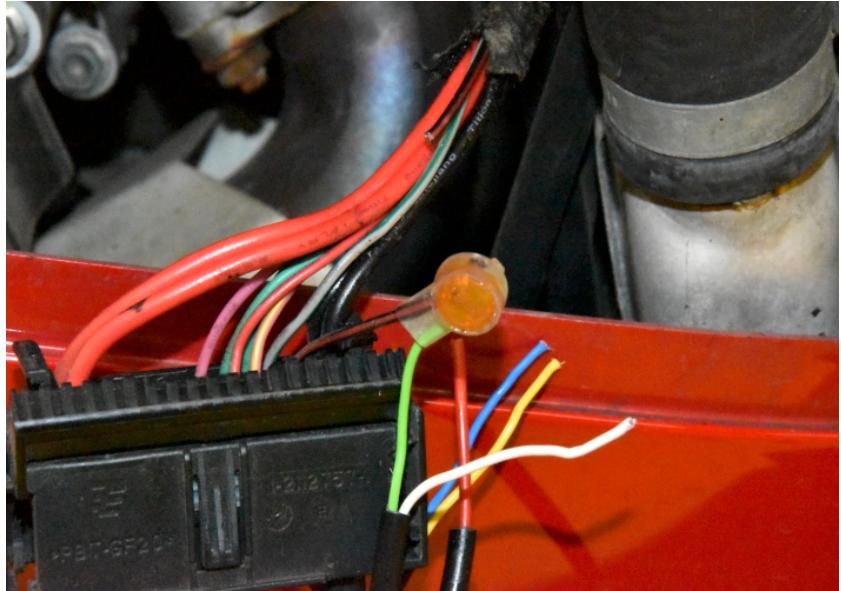


Connect the SH Blue wire to the Black/Brown wire end, which is at the wiring harness side. Use a yellow butt connector.

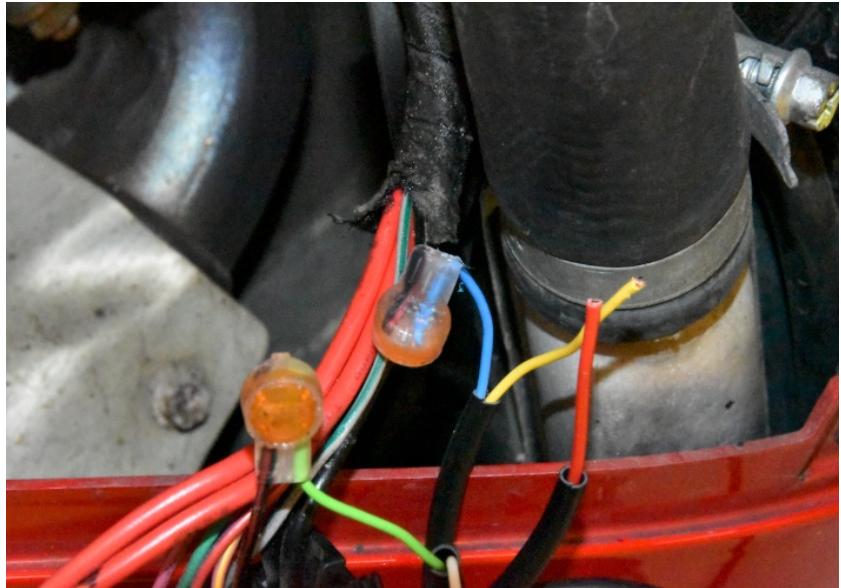

Cut the Grey/Green wire about 2,5cm (1") of the connector.

Connect the SH White wire to the Grey/Green wire end, which goes to the ABS module. Use a yellow butt connector.

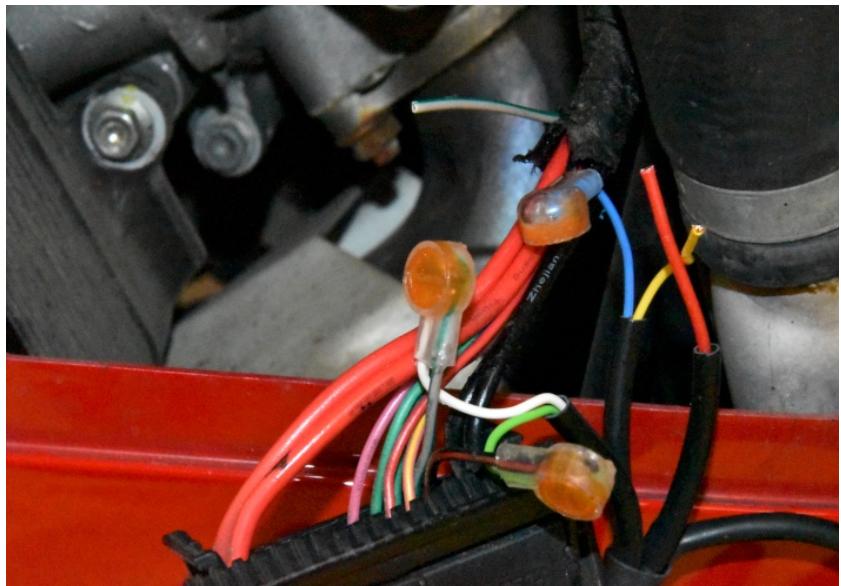

SpeedoHealer CAN Supplementary Manual




Ducati Panigale 899 ABS TC 2014-2015 (SH-CAN)

Connect the SH Yellow wire to the Grey/Green wire end, which is at the wiring harness side. Use a yellow butt connector.



Splice the SH Red wire to the Red/Blue wire of the ABS connector. Use a red wire tap connector.

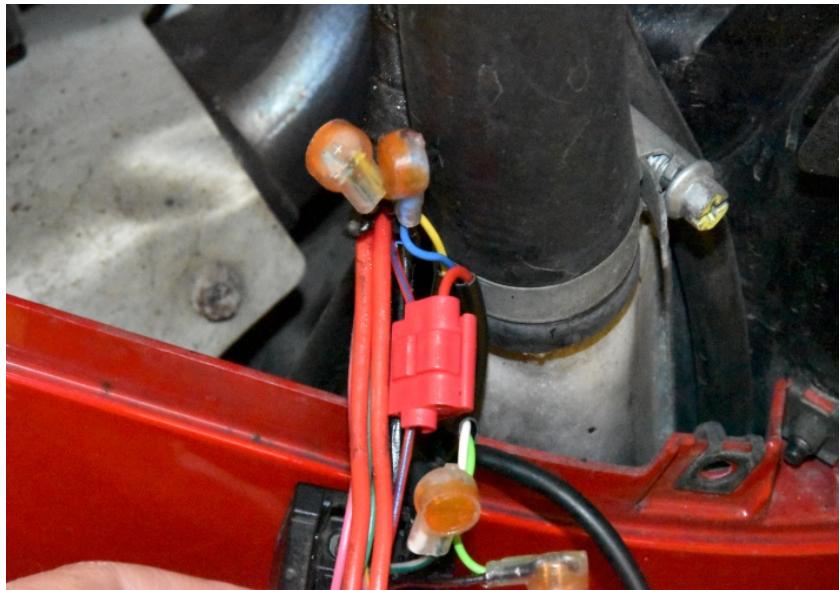

Splice the SH Black wire to the Grey wire of the ECU connector. Use a red wire tap connector.



SpeedoHealer CAN Supplementary Manual



Ducati Panigale 899 ABS TC 2014-2015 (SH-CAN)

Typical position for the SpeedoHealer CAN.

Secure the unit properly.

