

# SpeedoHealer CAN Supplementary Manual



## Fantic Caballero 700 ABS TC 2024- (SH-CAN)

Secure the bike on a stand.



Remove the seat.



Locate the ABS connector.




# SpeedoHealer CAN Supplementary Manual



## Fantic Caballero 700 ABS TC 2024- (SH-CAN)

Cut the Orange/Blue wire about 2,5cm (1") of the connector.

Connect the SH Green wire to the Orange/Blue wire end, which goes to the ABS module. Use a yellow butt connector.

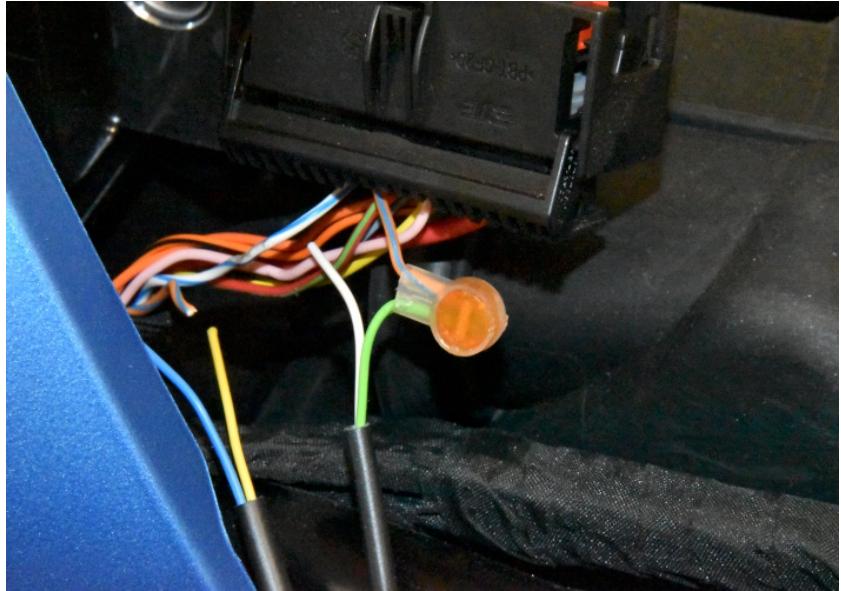

Connect the SH Blue wire to the Orange/Blue wire end, which is at the wiring harness side. Use a yellow butt connector.



Cut the White/Blue wire about 2,5cm (1") of the connector.

Connect the SH White wire to the White/Blue wire end, which goes to the ABS module. Use a yellow butt connector.



# SpeedoHealer CAN Supplementary Manual




## Fantic Caballero 700 ABS TC 2024- (SH-CAN)


Connect the SH Yellow wire to the White/Blue wire end, which is at the wiring harness side. Use a yellow butt connector.



Splice the SH Red wire to the Red/Green wire of the ABS connector. Use a red wire tap connector.

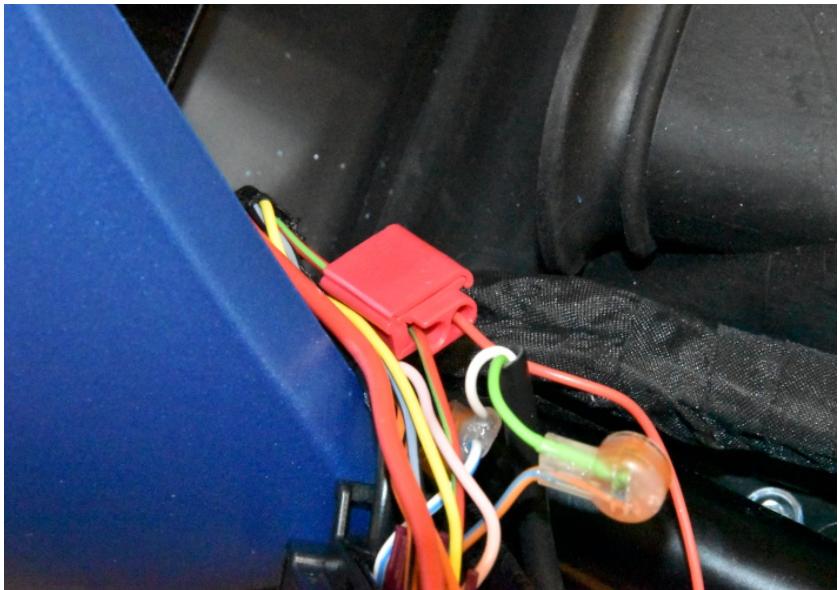

Splice the SH Black wire to the Black wire of the auxiliary connector. Use a red wire tap connector.

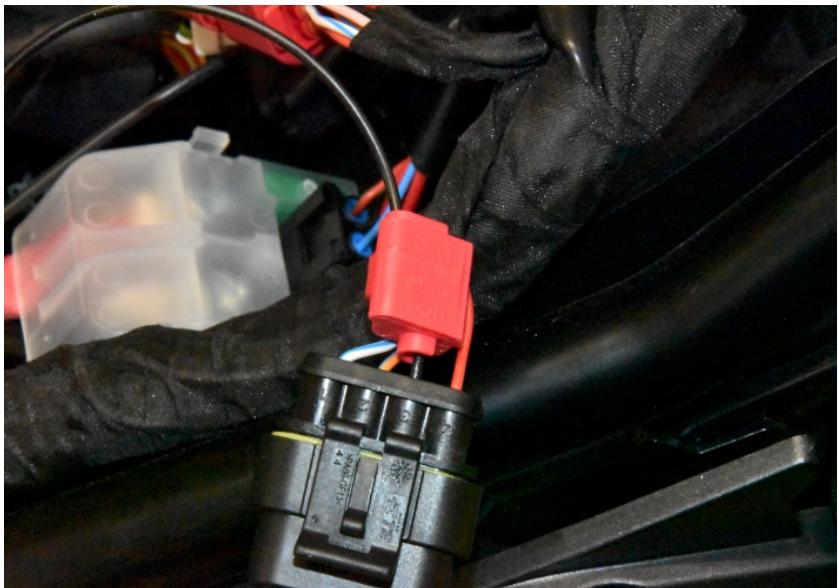

# SpeedoHealer CAN Supplementary Manual



## Fantic Caballero 700 ABS TC 2024- (SH-CAN)

Typical position for the SpeedoHealer CAN.

Secure the unit properly.

