

SpeedoHealer CAN Supplementary Manual



Harley-Davidson Pan America ABS TC 2021- (SH-CAN)


Secure the bike on a stand.



Remove the seats.



Locate the ABS connector under the main seat.

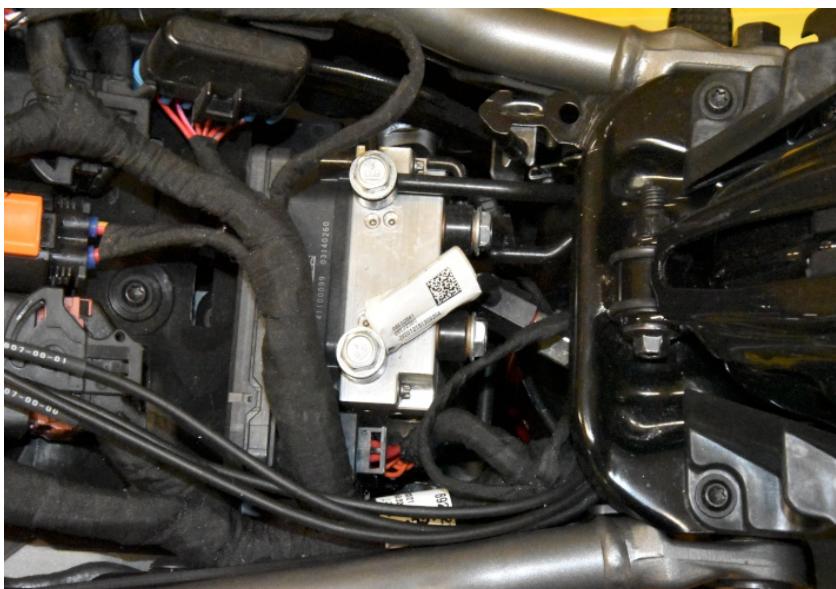


SpeedoHealer CAN Supplementary Manual




Harley-Davidson Pan America ABS TC 2021- (SH-CAN)

Cut the White/Red wire about 2,5cm (1") of the connector. (Pin #2)

Connect the SH Green wire to the White/Red wire end, which goes to the ABS module. Use a yellow butt connector.

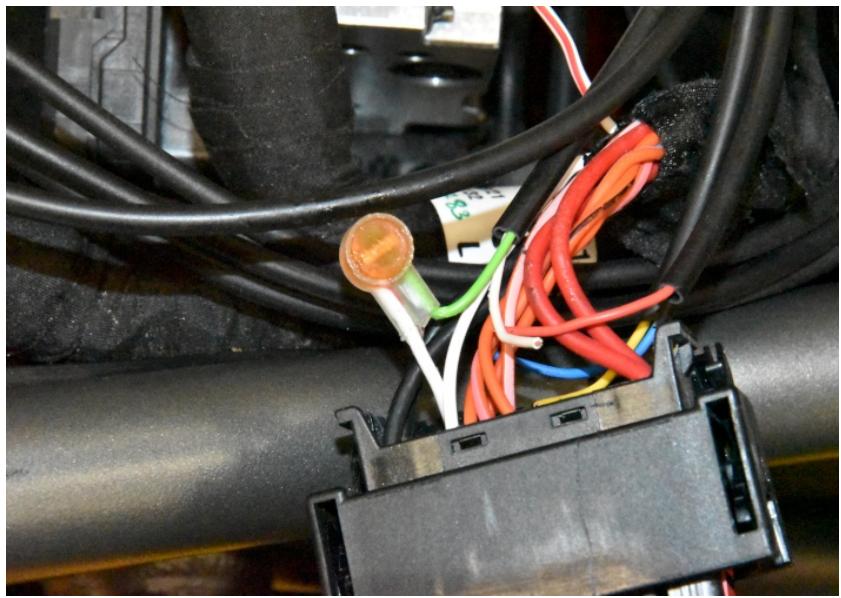

Connect the SH Blue wire to the White/Red wire end, which is at the wiring harness side. Use a yellow butt connector.

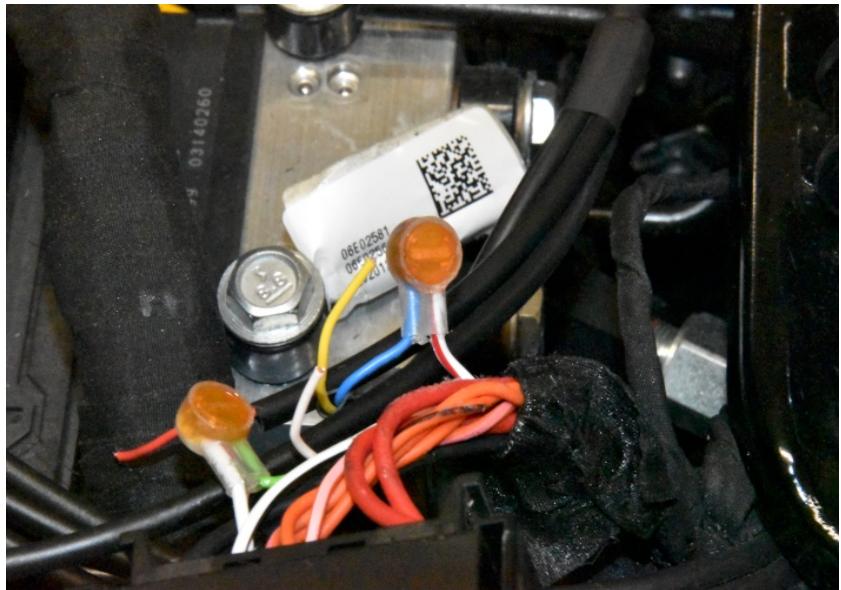

Cut the White/Black wire about 2,5cm (1") of the connector. (Pin #11)

Connect the SH White wire to the White/Black wire end, which goes to the ABS module. Use a yellow butt connector.




SpeedoHealer CAN Supplementary Manual




Harley-Davidson Pan America ABS TC 2021- (SH-CAN)

Connect the SH Yellow wire to the White/Black wire end, which is at the wiring harness side. Use a yellow butt connector.

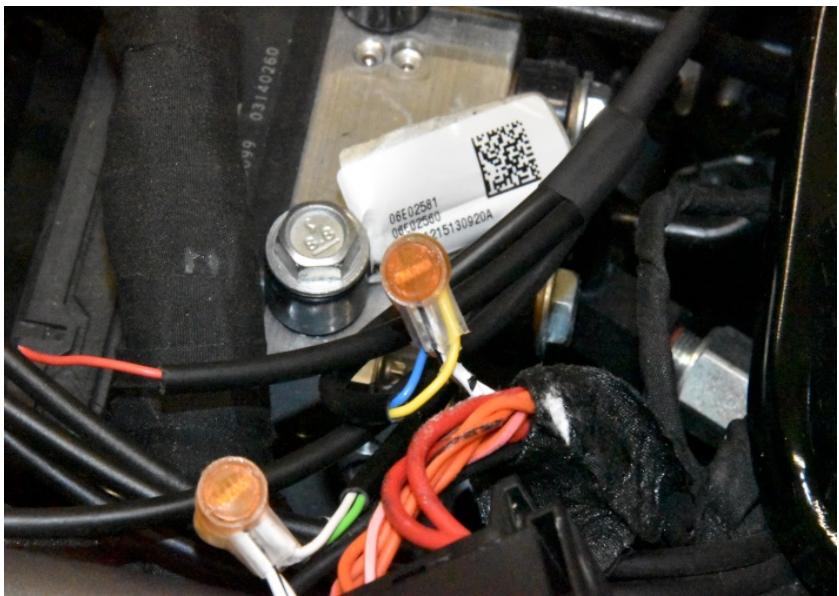

Splice the SH Red wire to the Orange/White wire of the ABS connector. Use a red wire tap connector.

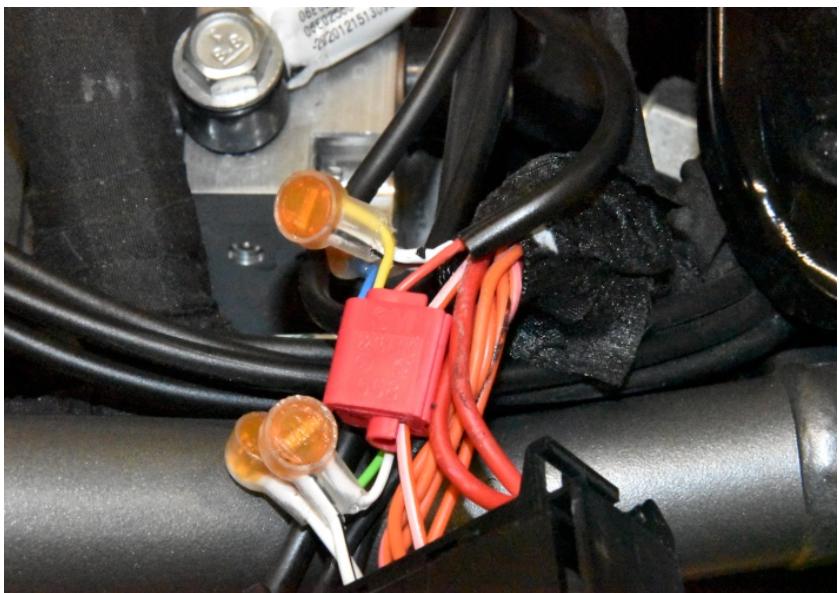

Splice the SH Black wire to the Black wire of the diagnostic connector. Use a red wire tap connector.



SpeedoHealer CAN Supplementary Manual



Harley-Davidson Pan America ABS TC 2021- (SH-CAN)

Typical position for the SpeedoHealer CAN.

Secure the unit properly.

