

SpeedoHealer CAN Supplementary Manual



Husqvarna Norden 901 ABS TC 2022- (SH-CAN)

Secure the bike on a stand.




Remove the windscreen.

Remove the dashboard and locate the dashboard connector.



Cut the Black/Blue wire about 2,5cm (1") of the connector.

Connect the SH Green wire to the Black/Blue wire end, which goes to the dashboard. Use a yellow butt connector.

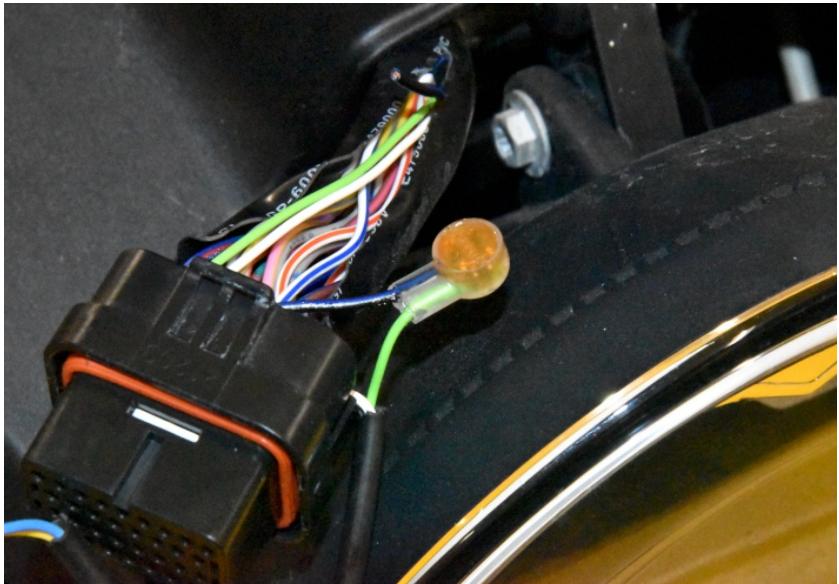


SpeedoHealer CAN Supplementary Manual




Husqvarna Norden 901 ABS TC 2022- (SH-CAN)

Connect the SH Blue wire to the Black/Blue wire end, which is at the wiring harness side. Use a yellow butt connector.

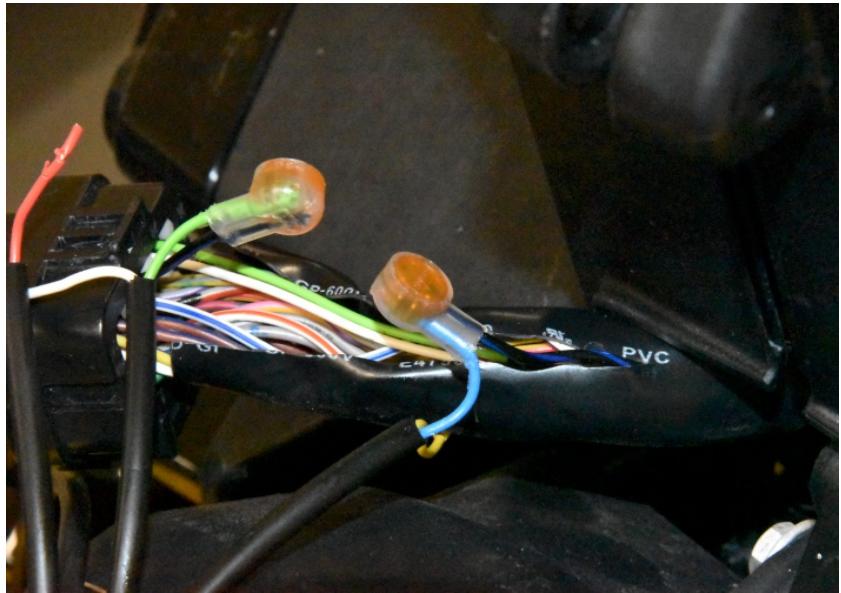


Cut the White/Blue wire about 2,5cm (1") of the connector.

Connect the SH White wire to the White/Blue wire end, which goes to the dashboard. Use a yellow butt connector.

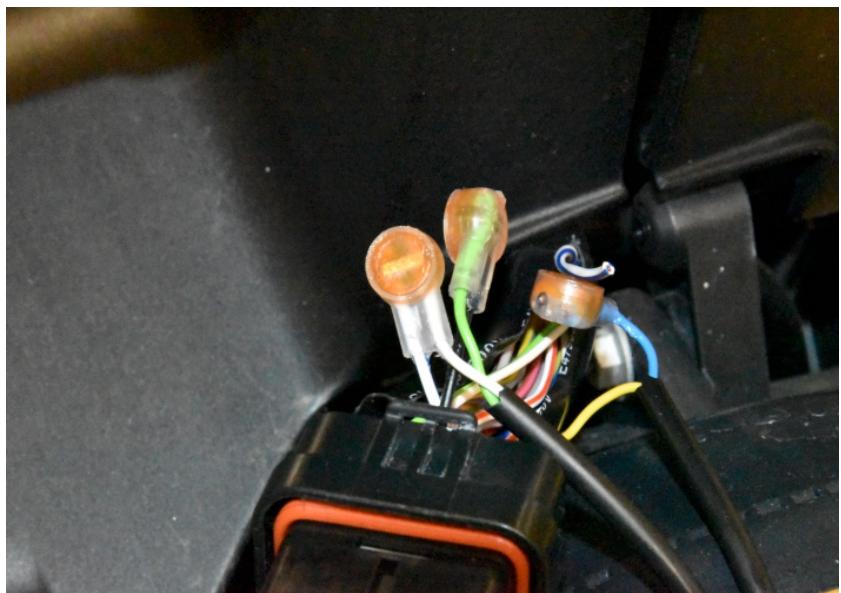

Connect the SH Yellow wire to the White/Blue wire end, which is at the wiring harness side. Use a yellow butt connector.

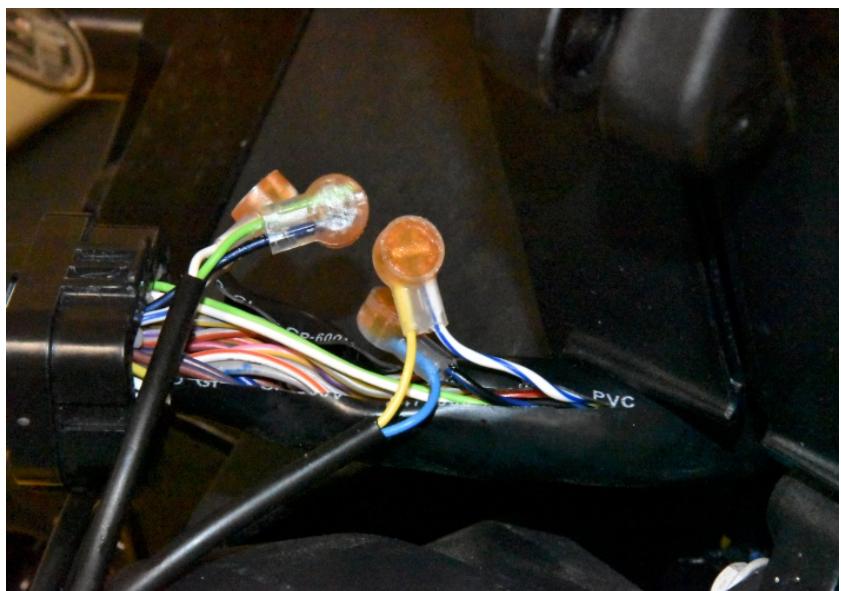


SpeedoHealer CAN Supplementary Manual



Husqvarna Norden 901 ABS TC 2022- (SH-CAN)

Splice the SH Red wire to the Yellow/Blue wire of the dashboard connector. Use a red wire tap connector.

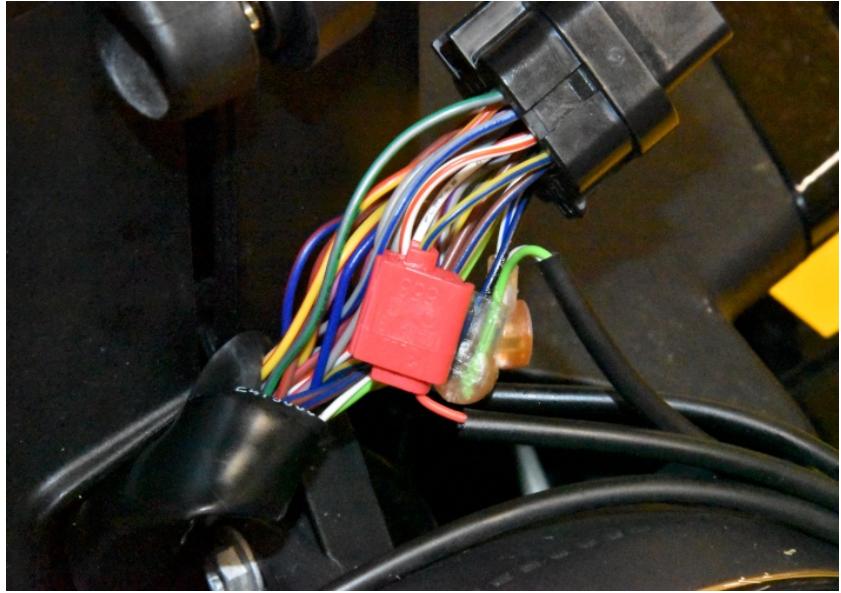

Splice the SH Black wire to the Brown/Blue wire of the dashboard connector. Use a red wire tap connector.



Typical position for the SpeedoHealer CAN.

Secure the unit properly.

