

SpeedoHealer CAN Supplementary Manual



Husqvarna Svartpilen 801 ABS TC 2024- (SH-CAN)

Secure the bike on a stand.



Remove the cover from the dashboard.

Remove the headlamp.



Locate the dashboard connector.

Cut the Black/Blue wire about 2,5cm (1") of the connector.

Connect the SH Green wire to the Black/Blue wire end, which goes to the dashboard. Use a yellow butt connector.



SpeedoHealer CAN Supplementary Manual



Husqvarna Svartpilen 801 ABS TC 2024- (SH-CAN)

Connect the SH Blue wire to the Black/Blue wire end, which is at the wiring harness side. Use a yellow butt connector.




Cut the White/Blue wire about 2,5cm (1") of the connector.

Connect the SH White wire to the White/Blue wire end, which goes to the dashboard. Use a yellow butt connector.



Connect the SH Yellow wire to the White/Blue wire end, which is at the wiring harness side. Use a yellow butt connector.

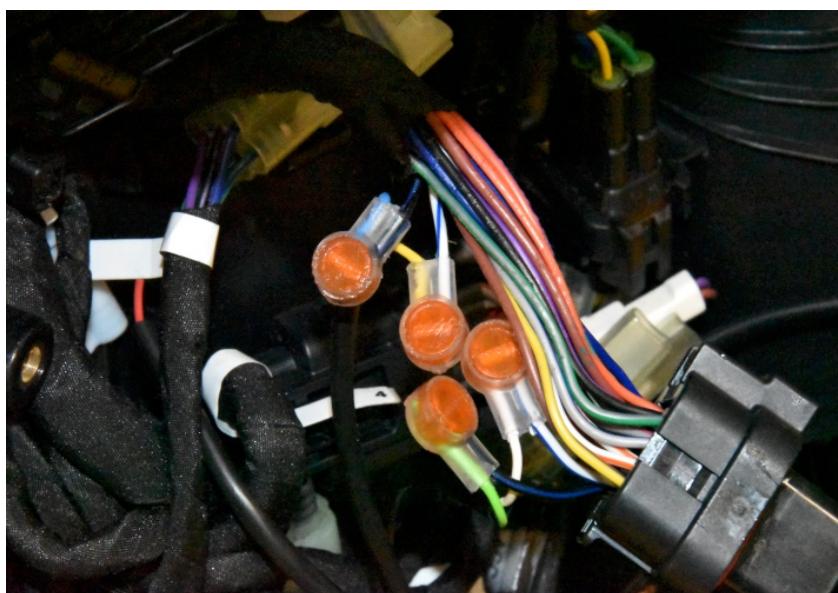

SpeedoHealer CAN Supplementary Manual



Husqvarna Svartpilen 801 ABS TC 2024- (SH-CAN)

Splice the SH Red wire to the White/Orange wire of the dashboard connector. Use a red wire tap connector.



Splice the SH Black wire to the Brown wire of the dashboard connector. Use a red wire tap connector.



Typical position for the SpeedoHealer CAN.

Secure the unit properly.

