

SpeedoHealer CAN Supplementary Manual



KTM 1290 Super Duke GT ABS TC 2019- (SH-CAN)

Secure the bike on a stand.



Remove the seats.

Remove the plastic covers from the fuel tank.

Remove the fuel tank.



Locate the ABS connector on the right side.




SpeedoHealer CAN Supplementary Manual



KTM 1290 Super Duke GT ABS TC 2019- (SH-CAN)

Cut the Black/Blue wire about 2,5cm (1") of the connector.

Connect the SH Green wire to the Black/Blue wire end, which goes to the ABS module. Use a yellow butt connector.

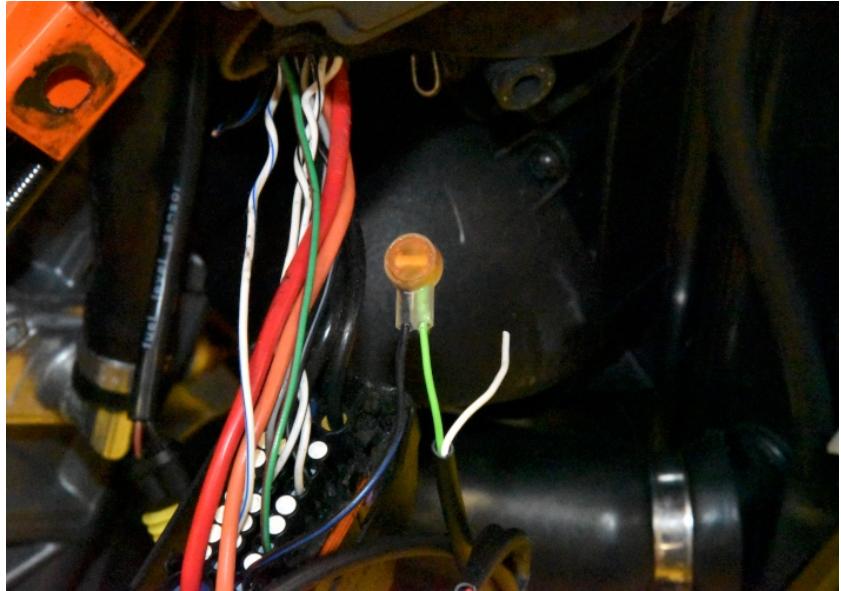


Connect the SH Blue wire to the Black/Blue wire end, which is at the wiring harness side. Use a yellow butt connector.



Cut the White/Blue wire about 2,5cm (1") of the connector.

Connect the SH White wire to the White/Blue wire end, which goes to the ABS module. Use a yellow butt connector.

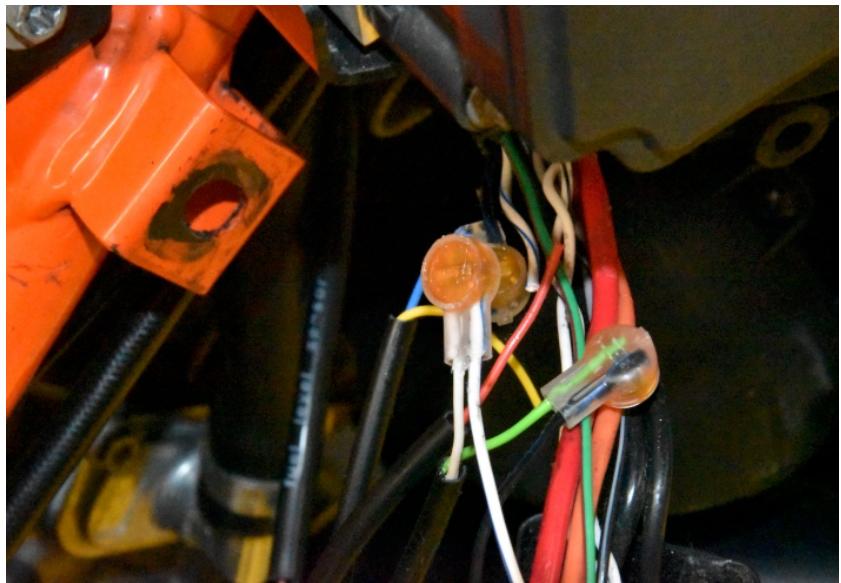


SpeedoHealer CAN Supplementary Manual




KTM 1290 Super Duke GT ABS TC 2019- (SH-CAN)

Connect the SH Yellow wire to the White/Blue wire end, which is at the wiring harness side. Use a yellow butt connector.

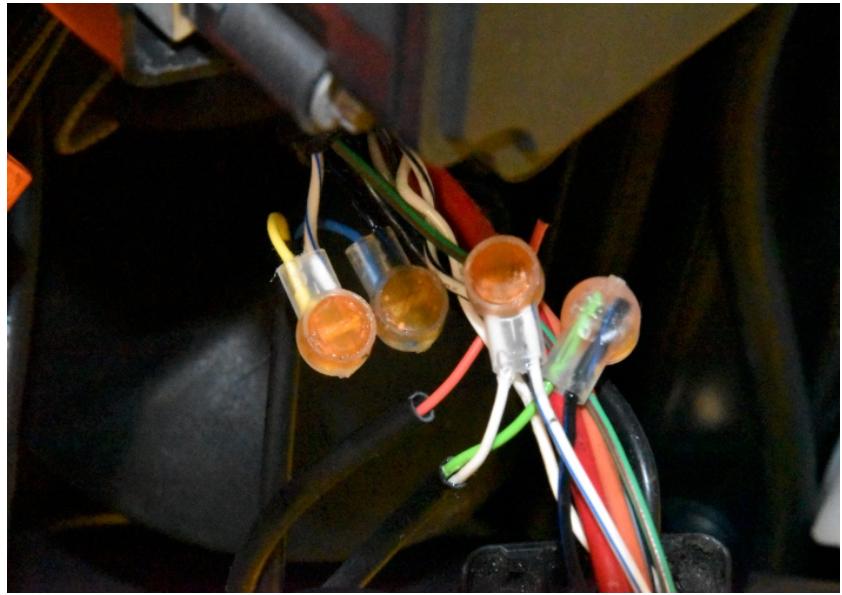

Splice the SH Red wire to the Green/Red wire of the ABS connector. Use a red wire tap connector.

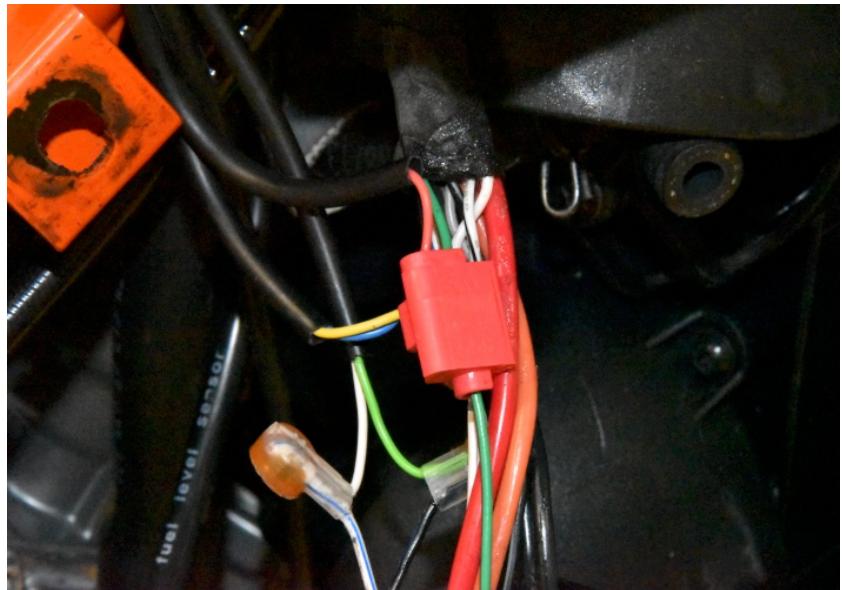

Splice the SH Black wire to the Brown wire of the right lamp connector. Use a red wire tap connector.



SpeedoHealer CAN Supplementary Manual



KTM 1290 Super Duke GT ABS TC 2019- (SH-CAN)

Typical position for the SpeedoHealer CAN.

Secure the unit properly.

