

# SpeedoHealer CAN Supplementary Manual



## Kawasaki ZX-10R ABS TC 2016-2018 (SH-CAN)


Secure the bike on a stand.



Remove the windshield and the upper fairings.


Remove the inner fairing.

Locate the dashboard connector.

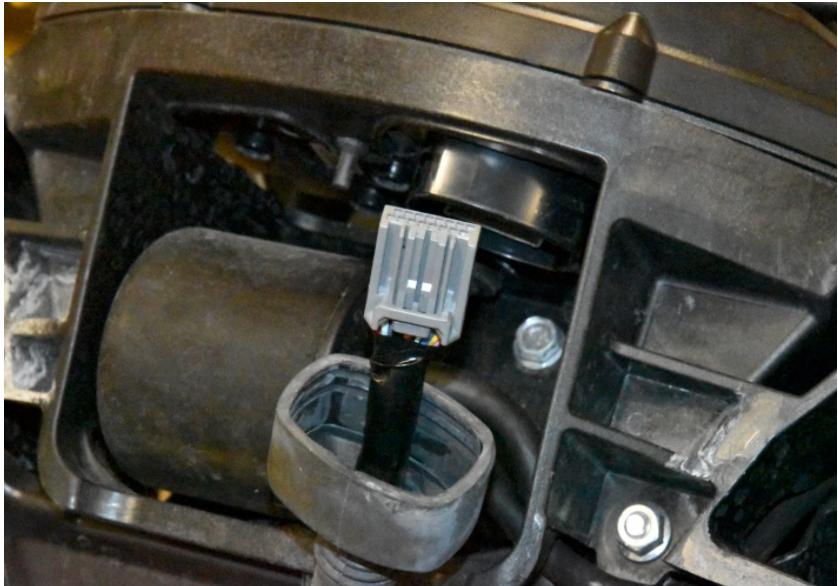

Cut the Grey/Blue wire about 2,5cm (1") of the connector.

Connect the SH Green wire to the Grey/Blue wire end, which goes to the dashboard. Use a yellow butt connector.

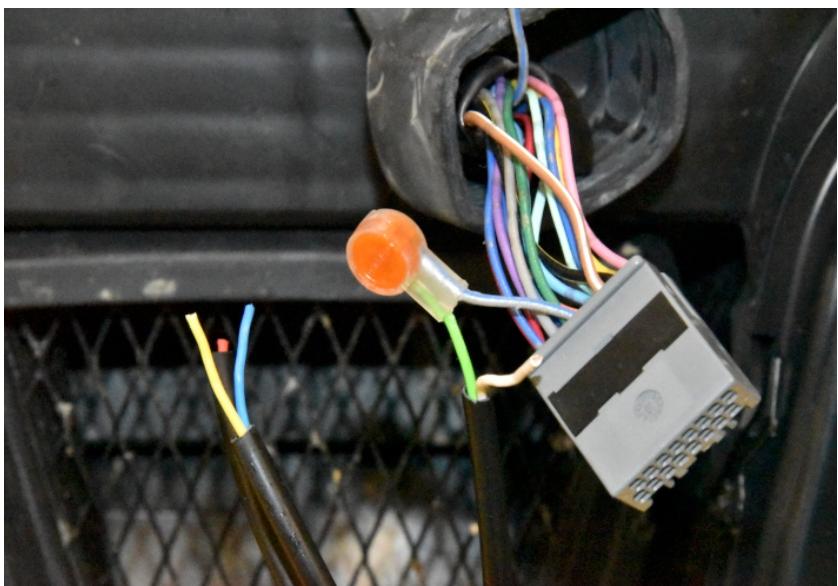

# SpeedoHealer CAN Supplementary Manual




## Kawasaki ZX-10R ABS TC 2016-2018 (SH-CAN)

Connect the SH Blue wire to the Grey/Blue wire end, which is at the wiring harness side. Use a yellow butt connector.



Cut the Light Blue wire about 2,5cm (1") of the connector.

Connect the SH White wire to the Light Blue wire end, which goes to the dashboard. Use a yellow butt connector.

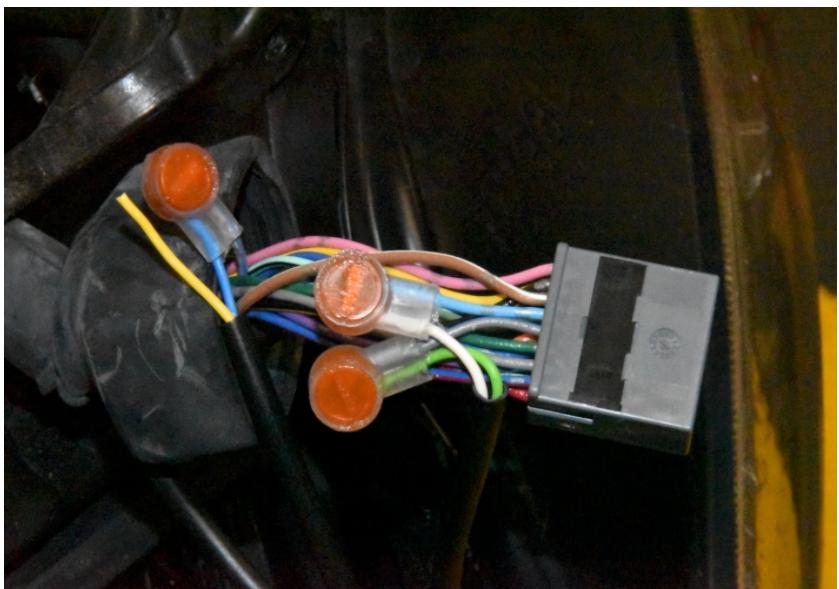

Connect the SH Yellow wire to the Light Blue wire end, which is at the wiring harness side. Use a yellow butt connector.




# SpeedoHealer CAN

## Supplementary Manual



### Kawasaki ZX-10R ABS TC 2016-2018 (SH-CAN)

Splice the SH Red wire to the Brown/White wire of the dashboard connector. Use a red wire tap connector.

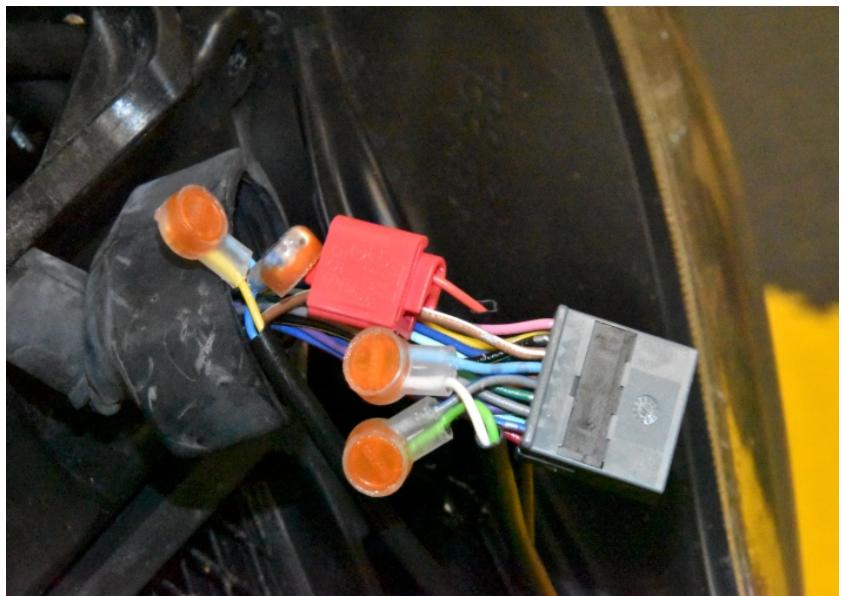

Splice the SH Black wire to the Black/Yellow wire of the dashboard connector. Use a red wire tap connector.



Typical position for the SpeedoHealer CAN.

Secure the unit properly.

