

Kove 800X ABS Rally 2025- (SH-CAN)

Secure the bike on a stand.



Remove the seat.

Remove the side fairing on the right side.



Locate the ABS connector under the fuel tank.



SpeedoHealer CAN


Supplementary Manual




Kove 800X ABS Rally 2025- (SH-CAN)

Cut the Blue/Green wire about 2,5cm (1") of the connector.(Pin #13)

Connect the SH Green wire to the Blue/Green wire end, which goes to the ABS module. Use a yellow butt connector.

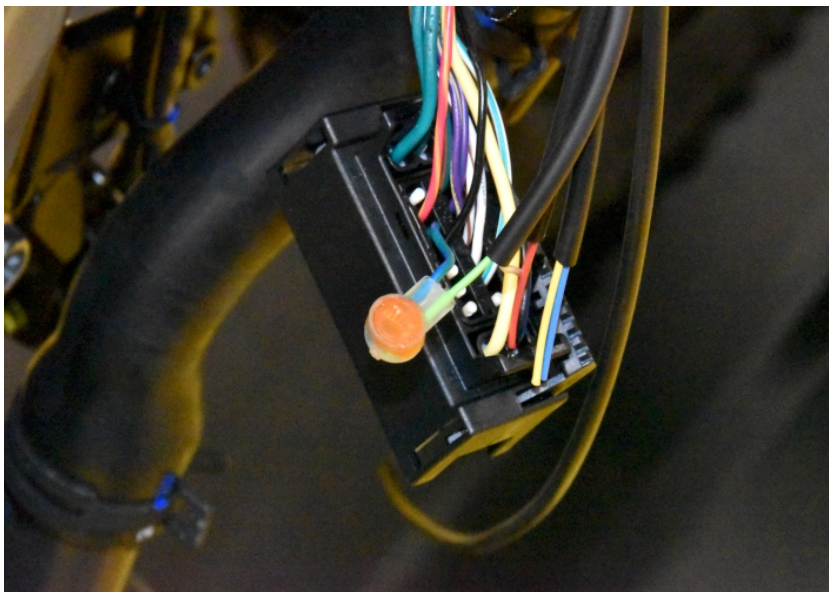


Connect the SH Blue wire to the Blue/Green wire end, which is at the wiring harness side. Use a yellow butt connector.

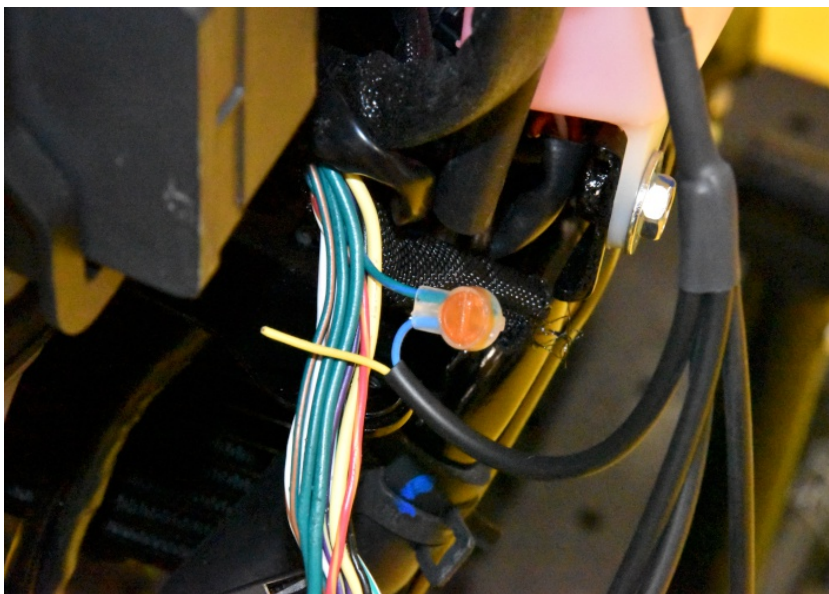

Cut the Red/Yellow wire about 2,5cm (1") of the connector.(Pin #12)

Connect the SH White wire to the Red/Yellow wire end, which goes to the ABS module. Use a yellow butt connector.

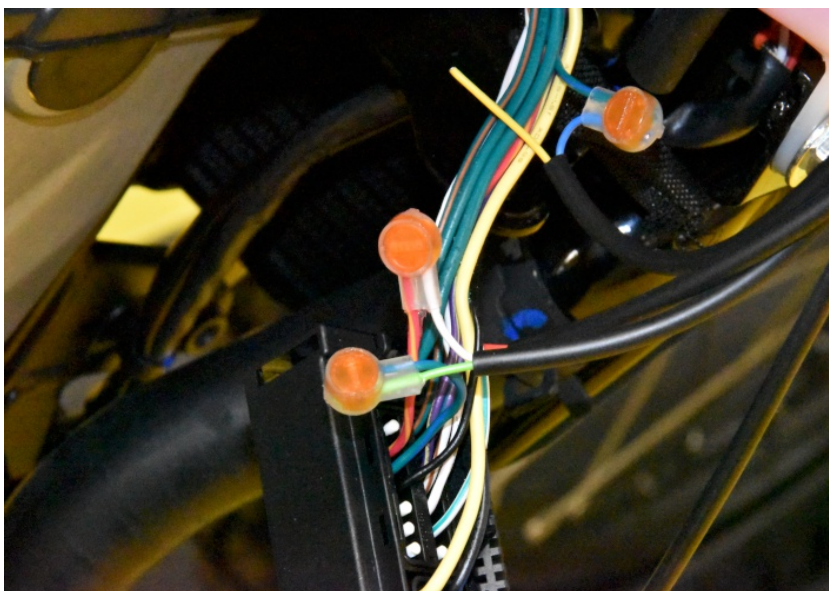

SpeedoHealer CAN

Supplementary Manual




Kove 800X ABS Rally 2025- (SH-CAN)


Connect the SH Yellow wire to the Red/Yellow wire end, which is at the wiring harness side. Use a yellow butt connector.



Splice the SH Red wire to the Black wire of the ABS connector. Use a red wire tap connector.

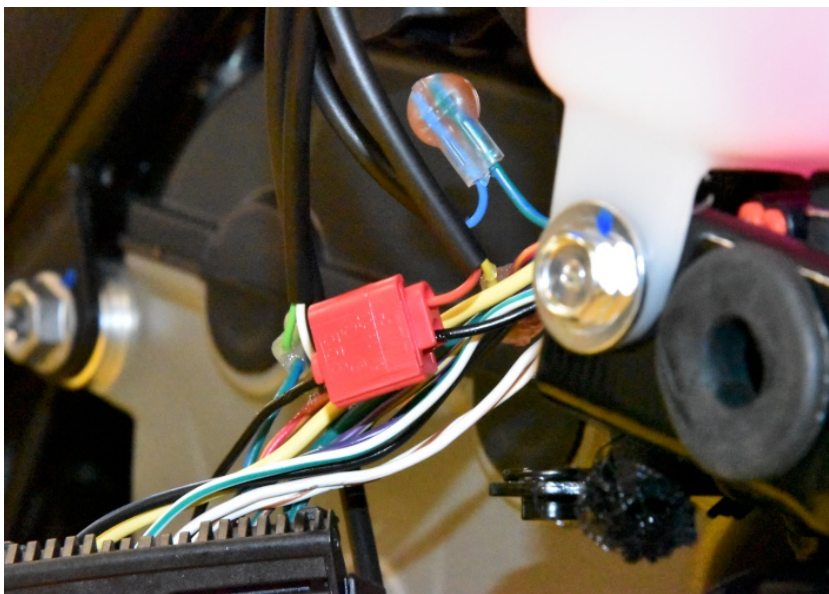

Splice the SH Black wire to the Green wire of the ABS connector. Use a red wire tap connector.

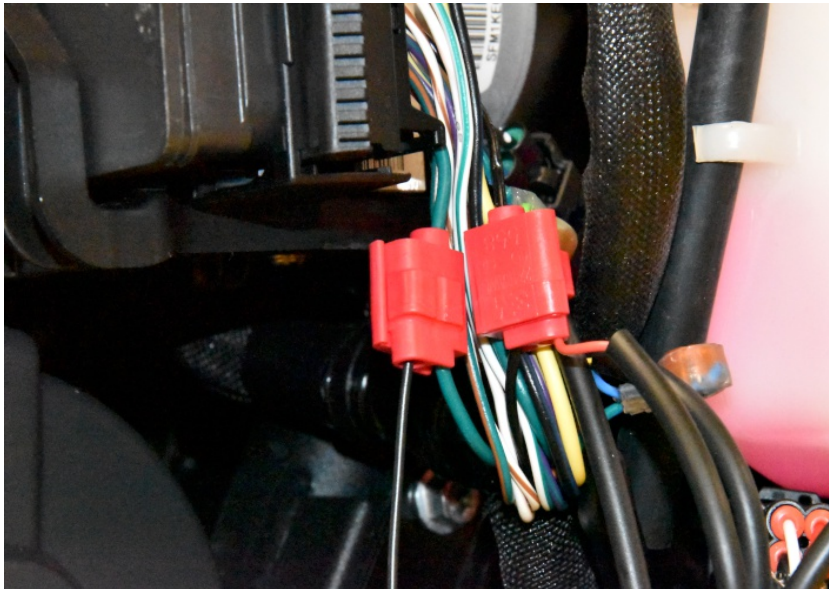

SpeedoHealer CAN

Supplementary Manual



Kove 800X ABS Rally 2025- (SH-CAN)

Typical position for the SpeedoHealer CAN.

Secure the unit properly.

