

SpeedoHealer CAN Supplementary Manual




MV Agusta Brutale 800 ABS TC 2014-2020 (SH-CAN)


Secure the bike on a stand.



Remove the seats.

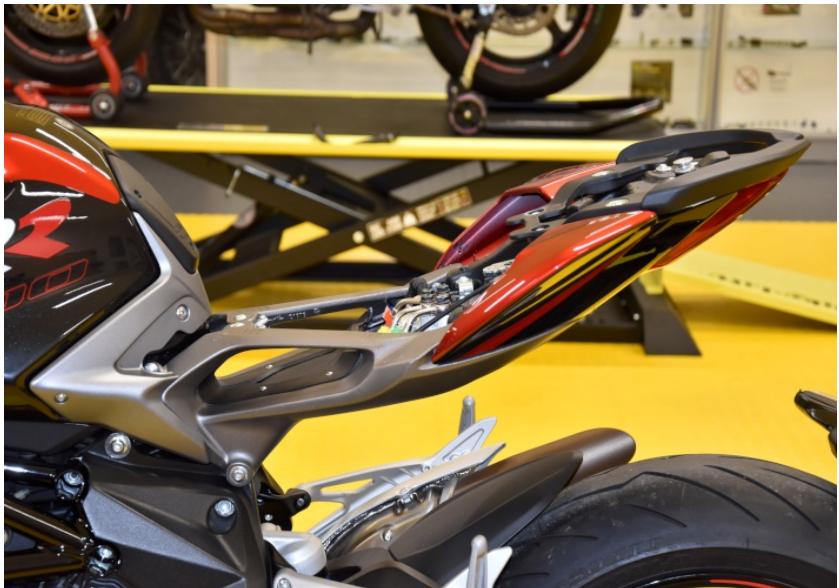

Locate the ABS connector under the main seat.

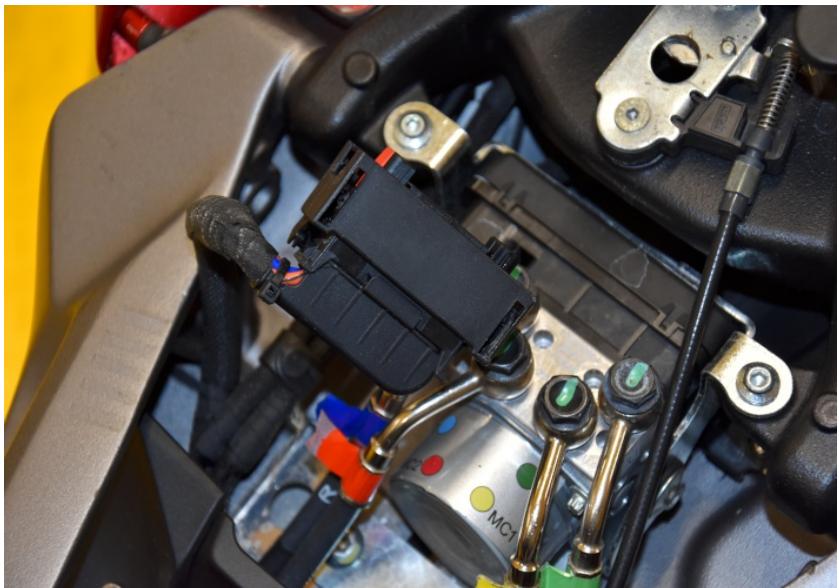


SpeedoHealer CAN Supplementary Manual




MV Agusta Brutale 800 ABS TC 2014-2020 (SH-CAN)

Cut the Blue/White wire about 2,5cm (1") of the connector.

Connect the SH Green wire to the Blue/White wire end, which goes to the ABS module. Use a yellow butt connector.

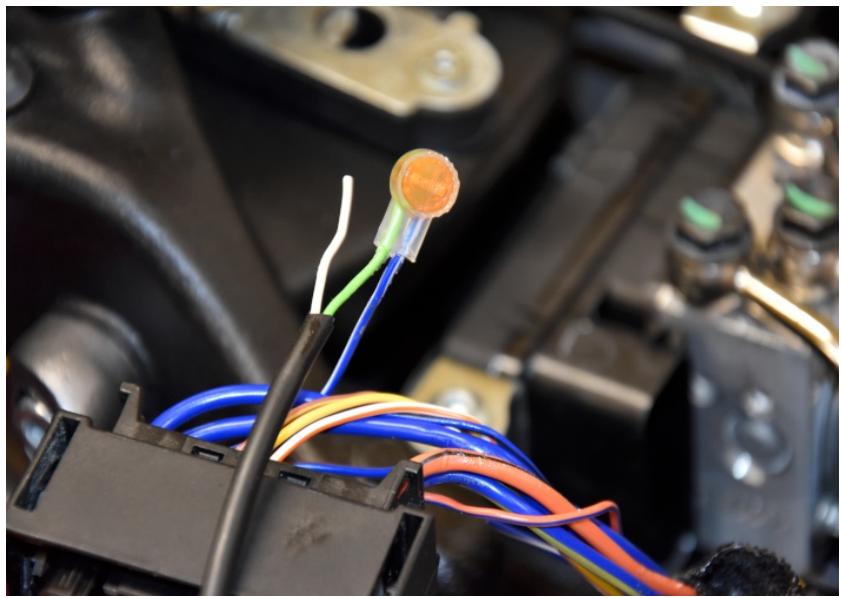

Connect the SH Blue wire to the Blue/White wire end, which is at the wiring harness side. Use a yellow butt connector.

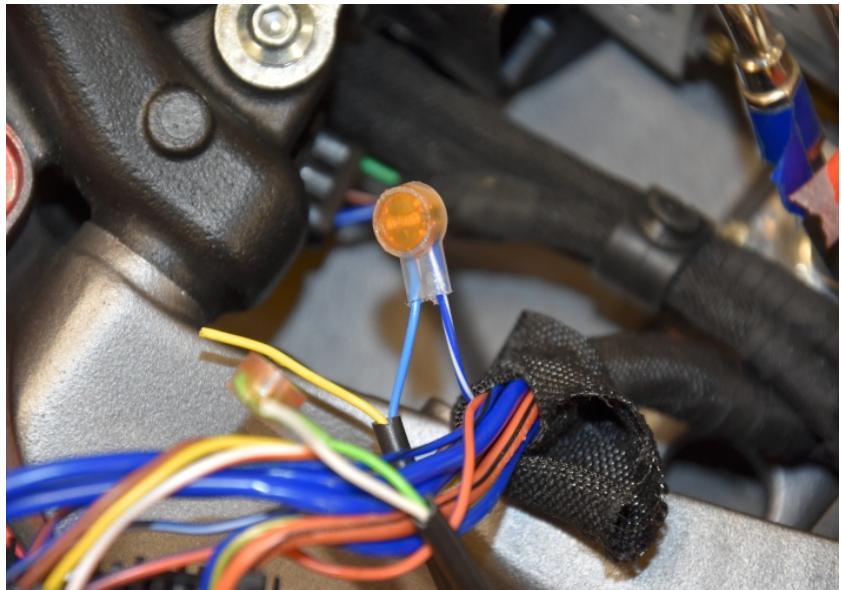

Cut the Blue/Black wire about 2,5cm (1") of the connector.

Connect the SH White wire to the Blue/Black wire end, which goes to the ABS module. Use a yellow butt connector.




SpeedoHealer CAN Supplementary Manual




MV Agusta Brutale 800 ABS TC 2014-2020 (SH-CAN)


Connect the SH Yellow wire to the Blue/Black wire end, which is at the wiring harness side. Use a yellow butt connector.

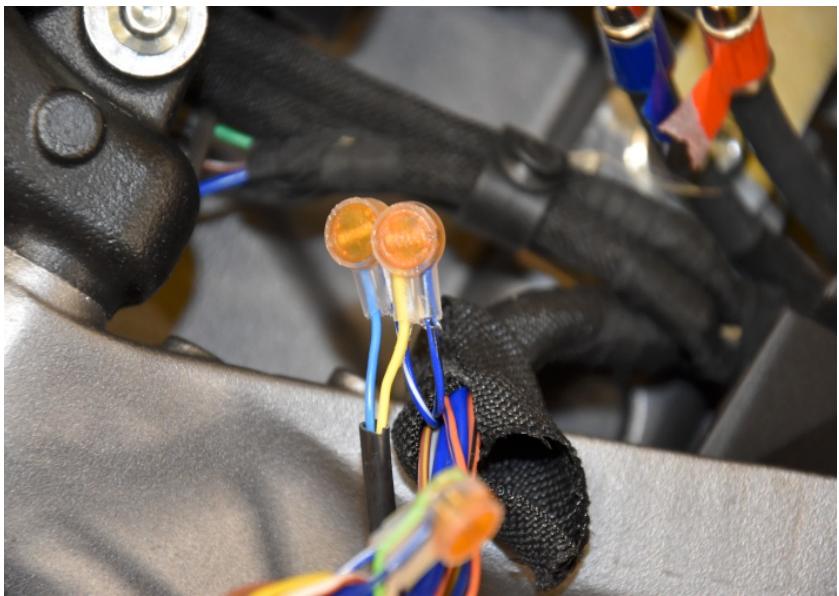

Splice the SH Red wire to the Orange/Blue wire of the ABS connector. Use a red wire tap connector.

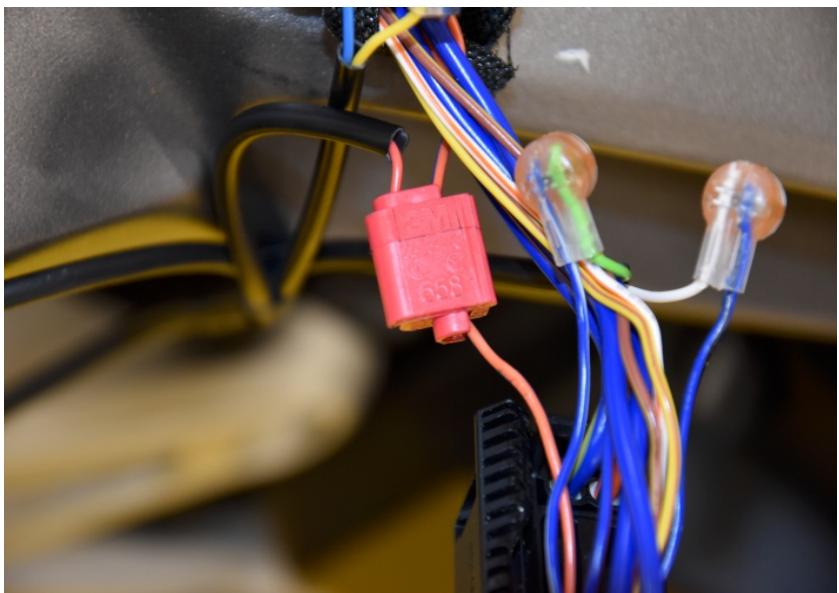

Splice the SH Black wire to the Blue wire of the diagnostic power connector. Use a red wire tap connector.

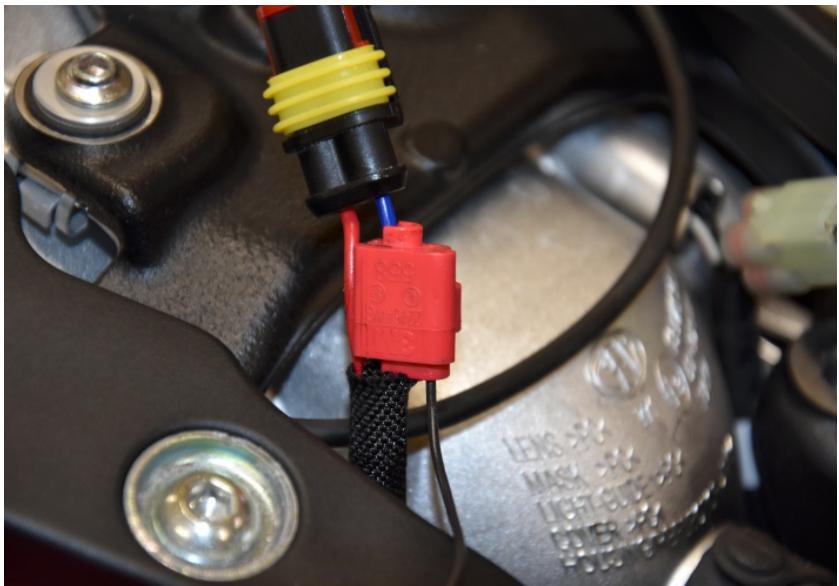

SpeedoHealer CAN Supplementary Manual



MV Agusta Brutale 800 ABS TC 2014-2020 (SH-CAN)

Typical position for the SpeedoHealer CAN.

Secure the unit properly.

