

SpeedoHealer CAN Supplementary Manual



MV Agusta Turismo Veloce 800 ABS TC 2015-2020 (SH-CAN)

Secure the bike on a stand.



Remove the seats.

Remove the side fairings from the fuel tank.

Remove the upper cowl.



Locate the the ABS connector under the headlight.




SpeedoHealer CAN Supplementary Manual




MV Agusta Turismo Veloce 800 ABS TC 2015-2020 (SH-CAN)

Cut the White wire about 2,5cm (1") of the connector.

Connect the SH Green wire to the White wire end, which goes to the ABS module. Use a yellow butt connector.

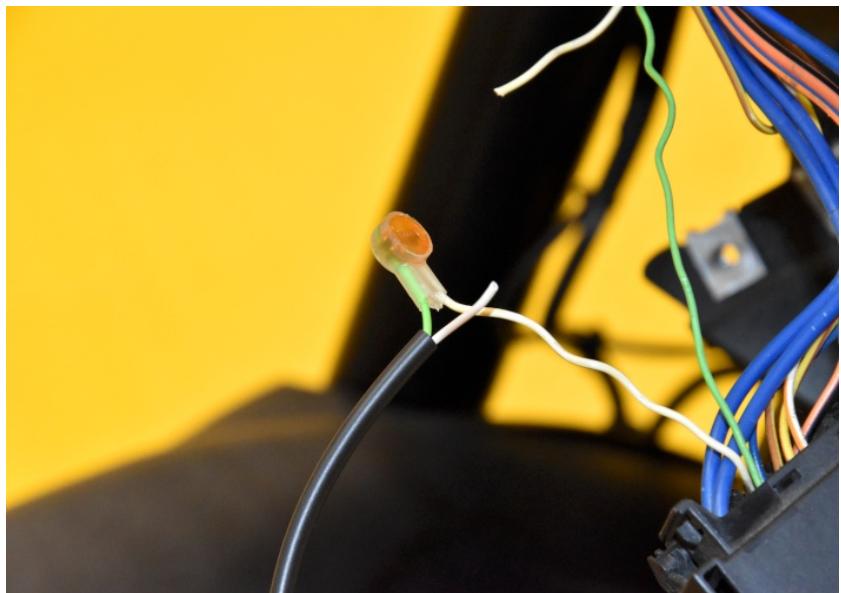


Connect the SH Blue wire to the White wire end, which is at the wiring harness side. Use a yellow butt connector.

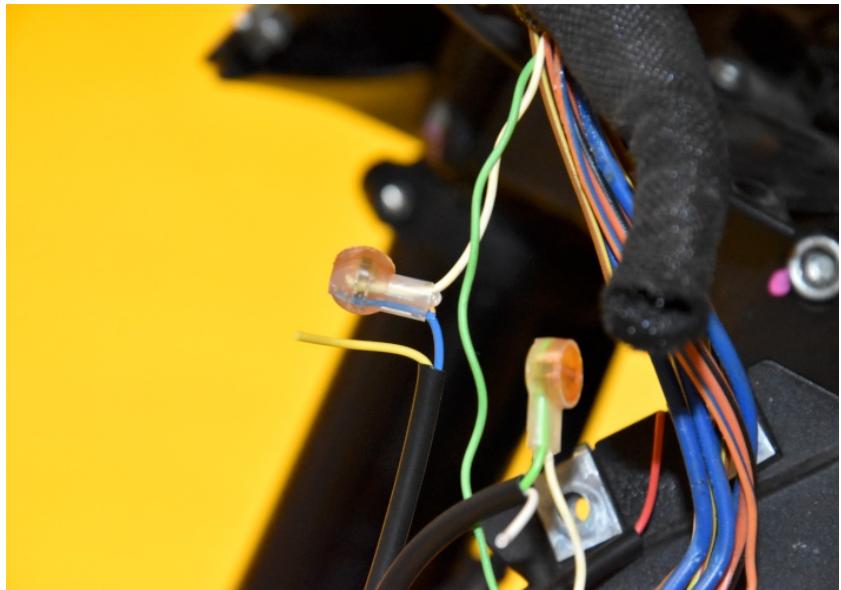

Cut the Green wire about 2,5cm (1") of the connector.

Connect the SH White wire to the Green wire end, which goes to the ABS module. Use a yellow butt connector.

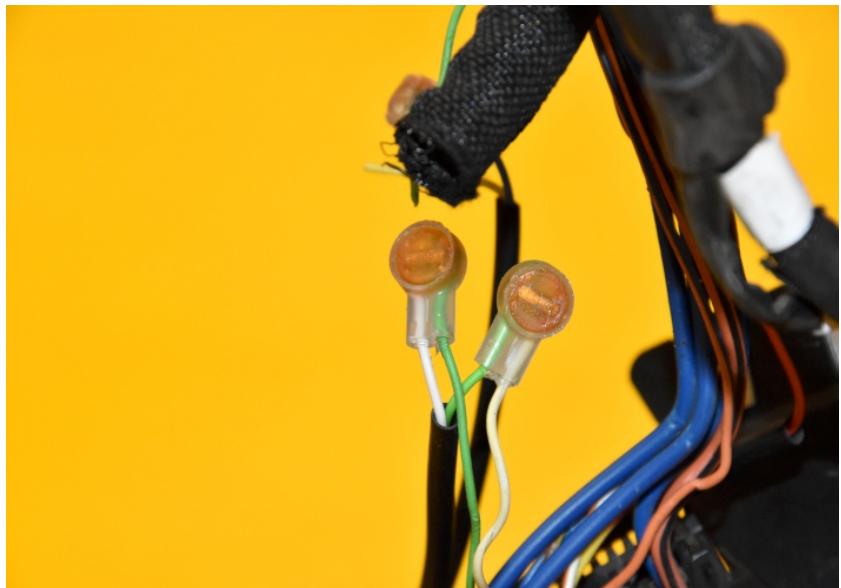


SpeedoHealer CAN Supplementary Manual




MV Agusta Turismo Veloce 800 ABS TC 2015-2020 (SH-CAN)


Connect the SH Yellow wire to the Green wire end, which is at the wiring harness side. Use a yellow butt connector.

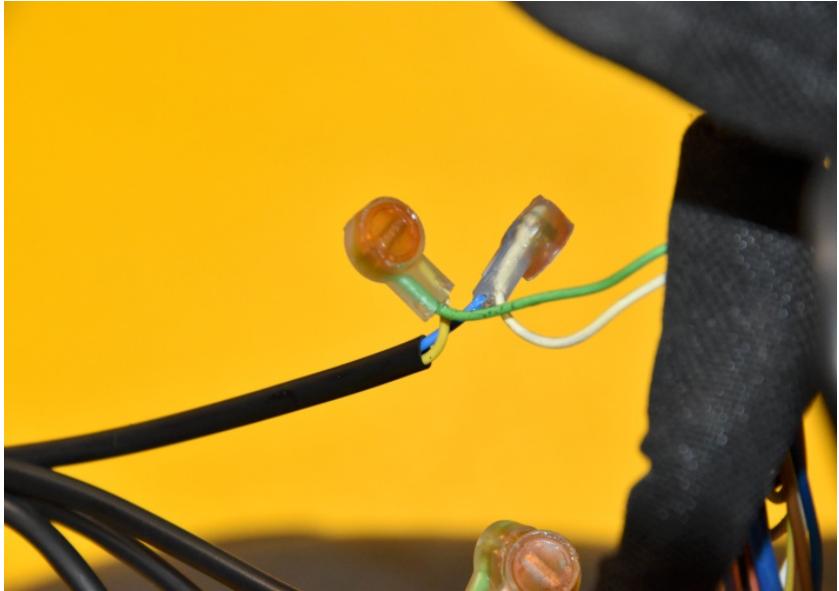

Splice the SH Red wire to the Orange/Blue wire of the ABS module. Use a red wire tap connector.

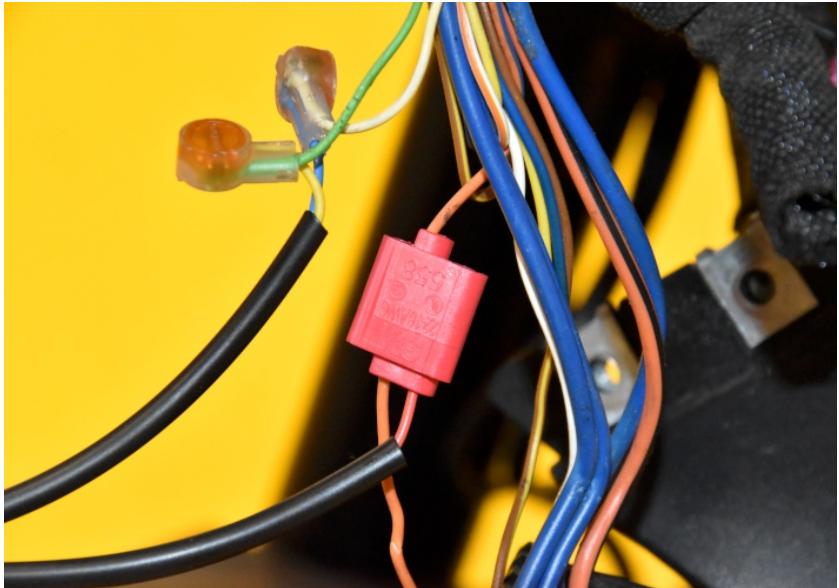

Splice the SH Black wire to the Blue wire. Use a red wire tap connector.

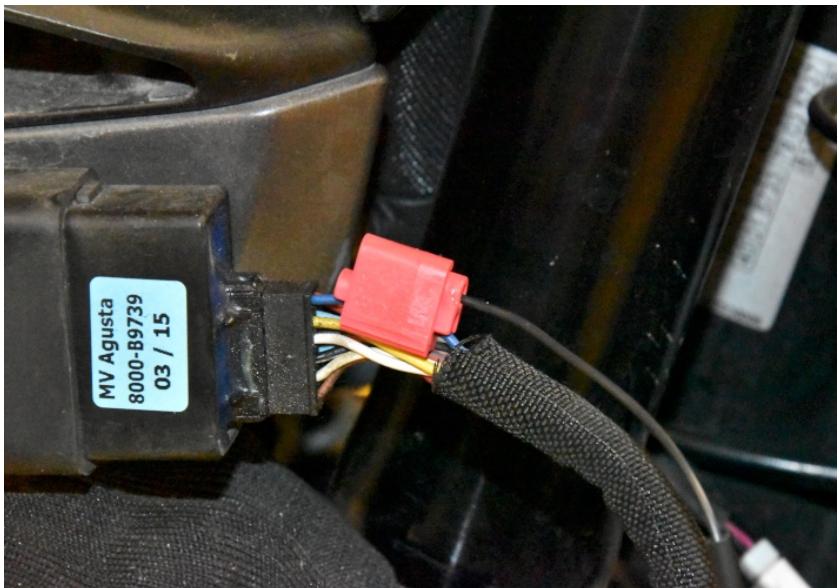

SpeedoHealer CAN Supplementary Manual



MV Agusta Turismo Veloce 800 ABS TC 2015-2020 (SH-CAN)

Typical position for the SpeedoHealer CAN.

Secure the unit properly.

