

SpeedoHealer CAN Supplementary Manual



Royal Enfield Bear 650 ABS 2025- (SH-CAN)

Secure the bike on a stand.




Remove the side cover on the right side.



Remove the seat.

Remove the fuel tank.

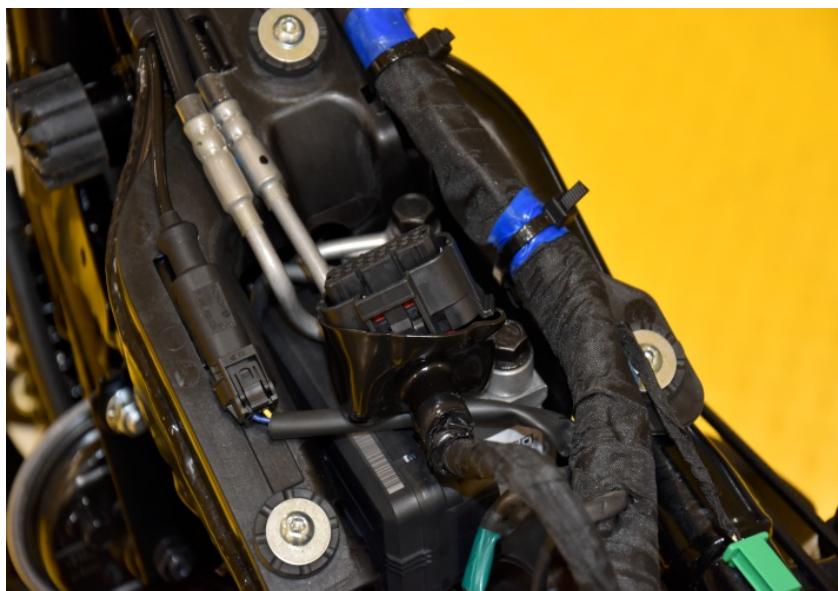

Locate the ABS connector under the fuel tank.


SpeedoHealer CAN Supplementary Manual




Royal Enfield Bear 650 ABS 2025- (SH-CAN)

Cut the Light Blue wire about 2,5cm (1") of the connector.

Connect the SH Green wire to the Light Blue wire end, which goes to the ABS module. Use a yellow butt connector.

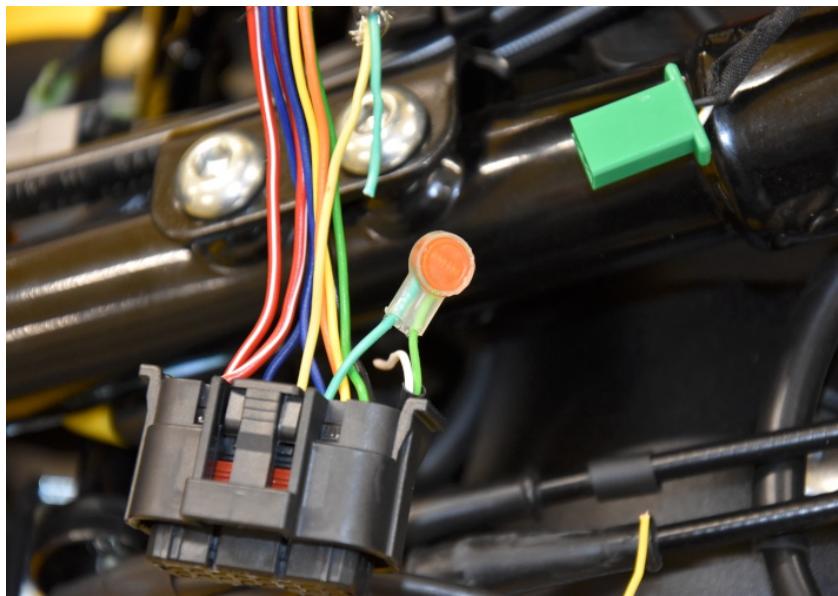


Connect the SH Blue wire to the Light Blue wire end, which is at the wiring harness side. Use a yellow butt connector.

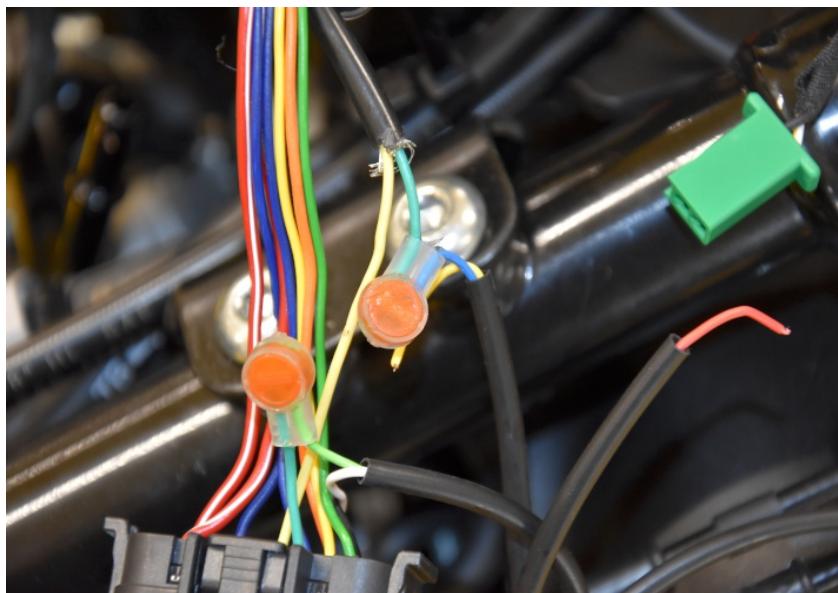

Cut the Yellow wire about 2,5cm (1") of the connector.

Connect the SH White wire to the Yellow wire end, which goes to the ABS module. Use a yellow butt connector.

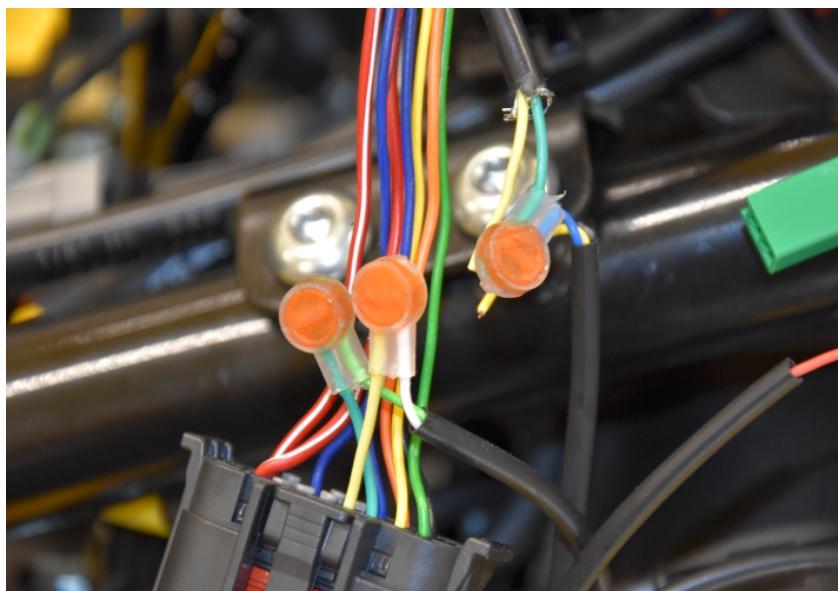


SpeedoHealer CAN Supplementary Manual



Royal Enfield Bear 650 ABS 2025- (SH-CAN)


Connect the SH Yellow wire to the Yellow wire end, which is at the wiring harness side. Use a yellow butt connector.

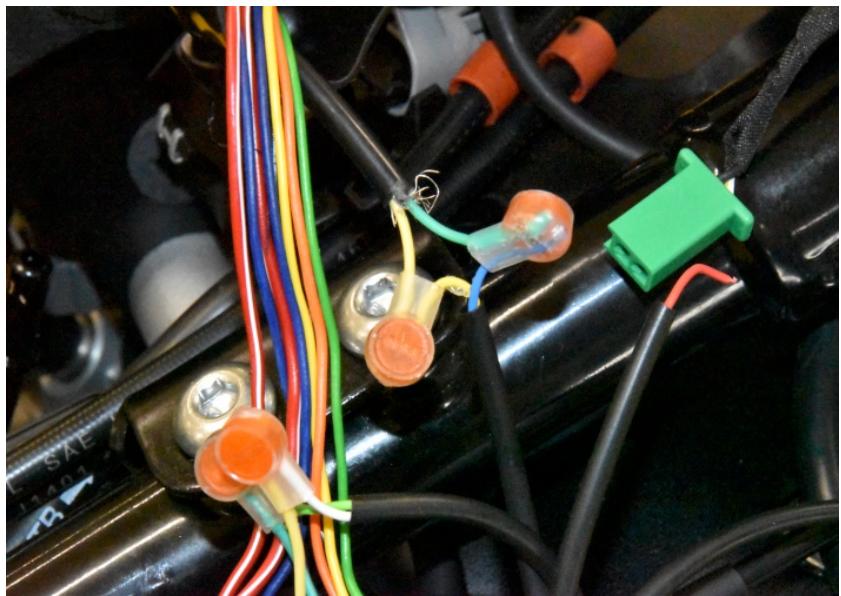

Splice the SH Red wire to the Blue wire of the ABS connector. Use a red wire tap connector.



Splice the SH Black wire to the Black wire of the ABS connector. Use a red wire tap connector.

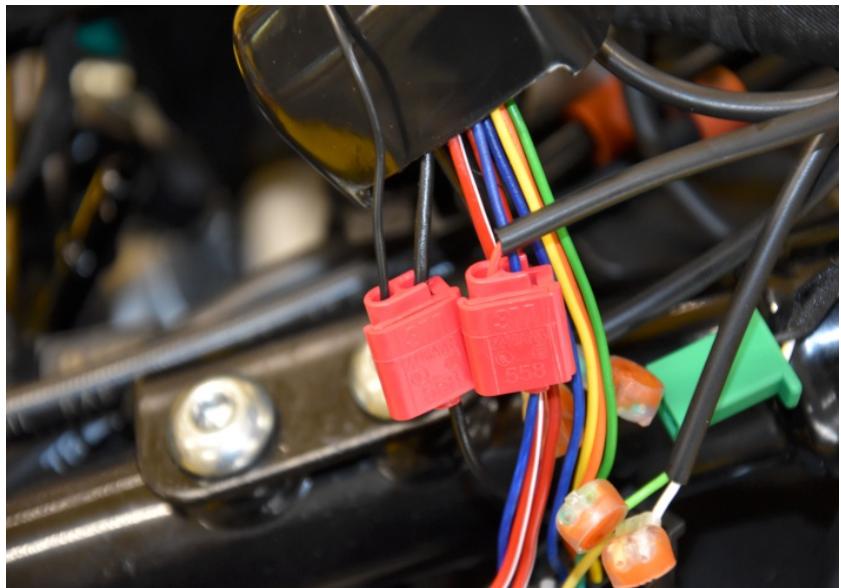

SpeedoHealer CAN Supplementary Manual



Royal Enfield Bear 650 ABS 2025- (SH-CAN)

Typical position for the SpeedoHealer CAN.

Secure the unit properly.

