

SpeedoHealer CAN Supplementary Manual



Royal Enfield Meteor 350 ABS 2021- (SH-CAN)

Secure the bike on a stand.



Remove the side cover from the airbox on the left side.



Locate the ABS connector.




SpeedoHealer CAN Supplementary Manual



Royal Enfield Meteor 350 ABS 2021- (SH-CAN)

Cut the White wire about 2,5cm (1") of the connector.

Connect the SH Green wire to the White wire end, which goes to the ABS module. Use a yellow butt connector.

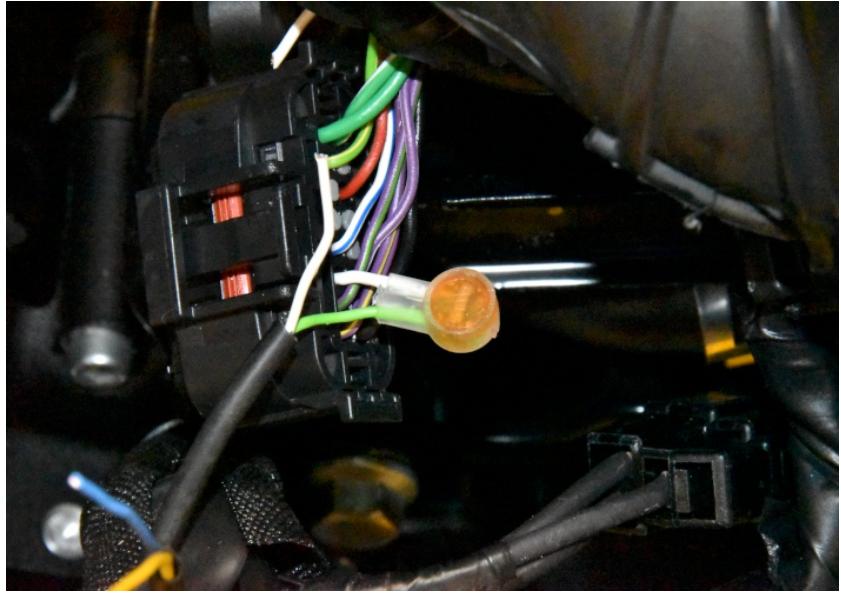

Connect the SH Blue wire to the White wire end, which is at the wiring harness side. Use a yellow butt connector.



Cut the White/Blue wire about 2,5cm (1") of the connector.

Connect the SH White wire to the White/Blue wire end, which goes to the ABS module. Use a yellow butt connector.




SpeedoHealer CAN Supplementary Manual



Royal Enfield Meteor 350 ABS 2021- (SH-CAN)

Connect the SH Yellow wire to the White/Blue wire end, which is at the wiring harness side. Use a yellow butt connector.

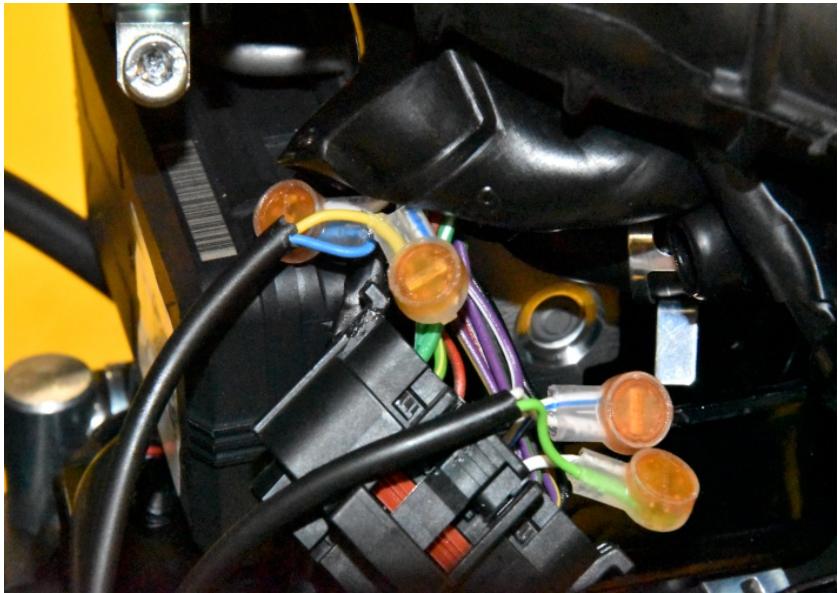

Splice the SH Red wire to the Red/Brown wire of the ABS connector. Use a red wire tap connector.



Splice the SH Black wire to the Black wire of the ABS connector. Use a red wire tap connector.



SpeedoHealer CAN

Supplementary Manual



Royal Enfield Meteor 350 ABS 2021- (SH-CAN)

Typical position for the SpeedoHealer CAN.

Secure the unit properly.

