

SpeedoHealer CAN Supplementary Manual



Suzuki DR-Z4S ABS TC 2025- (SH-CAN)


Secure the bike on a stand.



Remove the plastic covers from the headlight.



Cut the White wire about 2,5cm (1") of the connector.

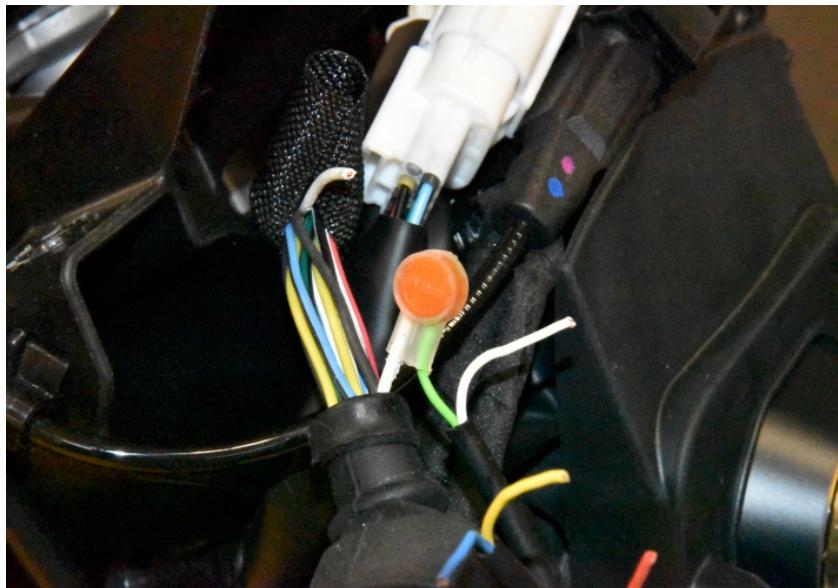

Connect the SH Green wire to the White wire end, which goes to the dashboard. Use a yellow butt connector.

SpeedoHealer CAN Supplementary Manual




Suzuki DR-Z4S ABS TC 2025- (SH-CAN)

Connect the SH Blue wire to the White wire end, which is at the wiring harness side. Use a yellow butt connector.




Cut the Black wire about 2,5cm (1") of the connector.

Connect the SH White wire to the Black wire end, which goes to the dashboard. Use a yellow butt connector.

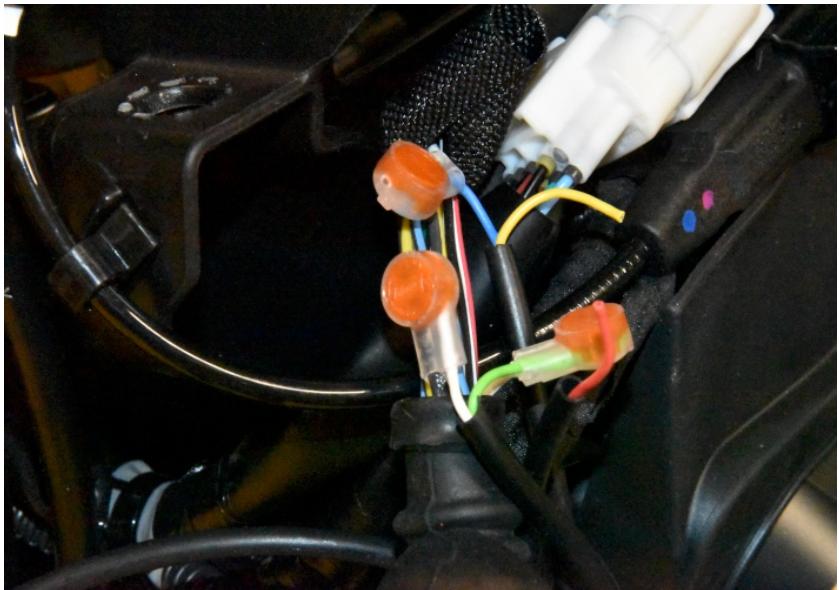

Connect the SH Yellow wire to the Black wire end, which is at the wiring harness side. Use a yellow butt connector.

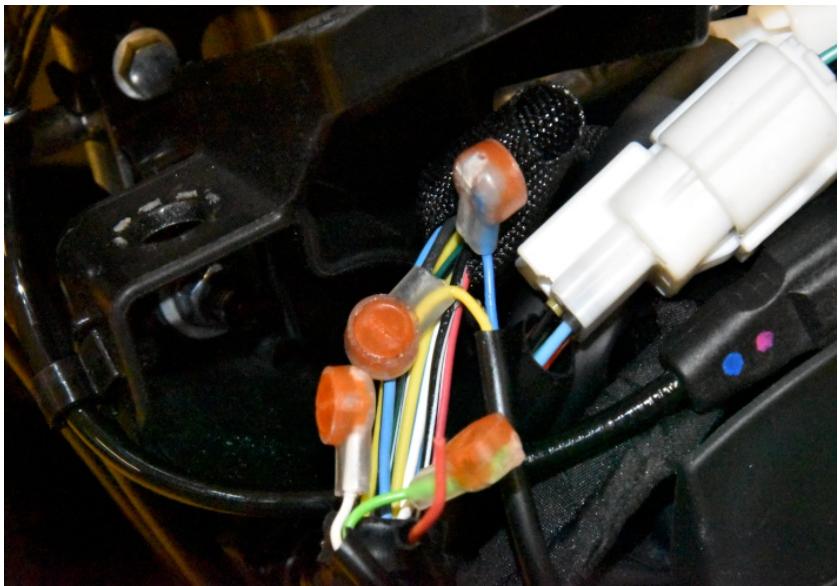

SpeedoHealer CAN Supplementary Manual



Suzuki DR-Z4S ABS TC 2025- (SH-CAN)

Splice the SH Red wire to the White/Blue wire of the dashboard connector. Use a red wire tap connector.



Splice the SH Black wire to the Black/White wire of the diagnostic connector. Use a red wire tap connector.



Typical position for the SpeedoHealer CAN.

Secure the unit properly.

