

SpeedoHealer CAN

Supplementary Manual



Triumph Street Triple 765 ABS TC 2023- (SH-CAN)

Secure the bike on a stand.



Remove the seats.

Locate the ABS connector under the main seat.



Cut the Red wire about 2,5cm (1") of the connector.

Connect the SH Green wire to the Red wire end, which goes to the ABS module. Use a yellow butt connector.

Connect the SH Blue wire to the Red wire end, which is at the wiring harness side. Use a yellow butt connector.



SpeedoHealer CAN Supplementary Manual




Triumph Street Triple 765 ABS TC 2023- (SH-CAN)


Cut the Blue wire about 2,5cm (1") of the connector.

Connect the SH White wire to the Blue wire end, which goes to the ABS module. Use a yellow butt connector.


Connect the SH Yellow wire to the Blue wire end, which is at the wiring harness side. Use a yellow butt connector.

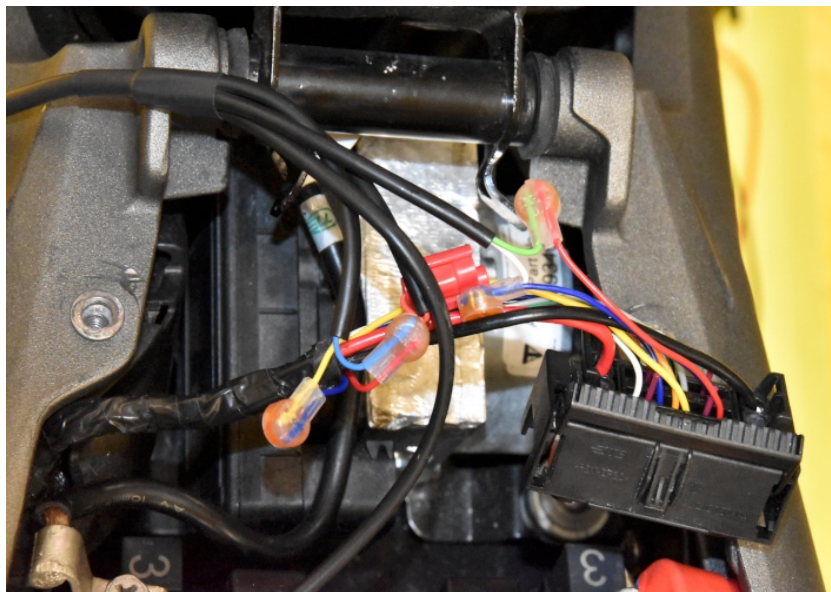

Splice the SH Red wire to the Yellow wire of the ABS connector. Use a red wire tap connector.

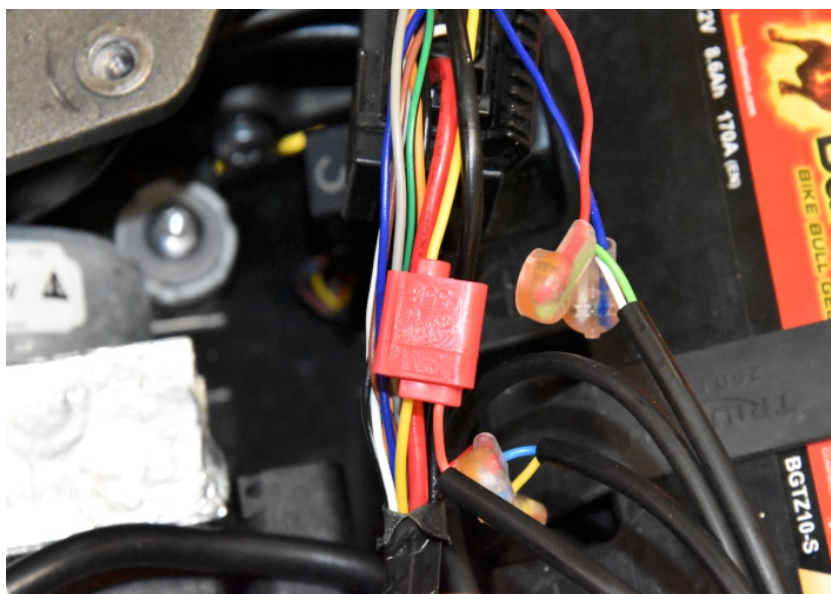

Splice the SH Black wire to the Black wire of the USB socket connector. Use a red wire tap connector.

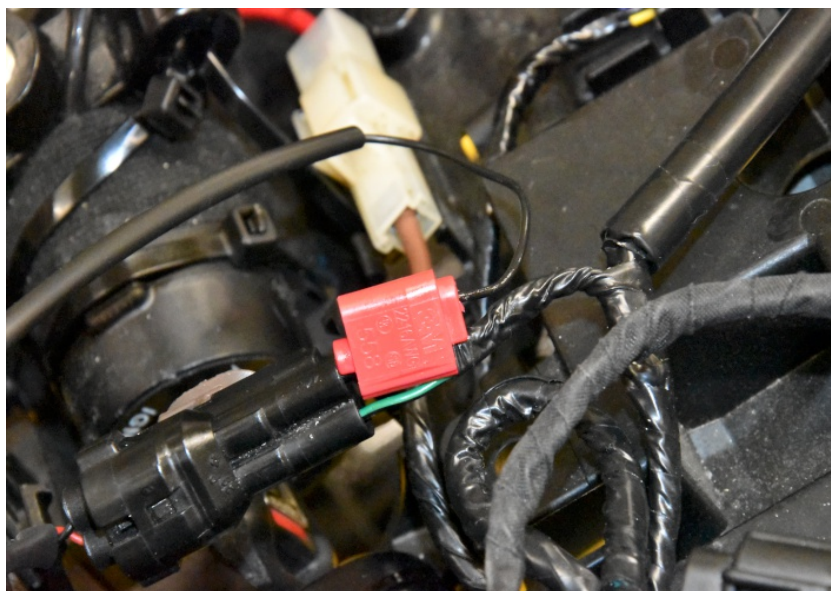

SpeedoHealer CAN

Supplementary Manual



Triumph Street Triple 765 ABS TC 2023- (SH-CAN)

Typical position for the SpeedoHealer CAN.

Secure the unit properly.

