

SpeedoHealer CAN Supplementary Manual



Triumph Tiger Explorer ABS TC 2016-2020 (SH-CAN)

Secure the bike on a stand.




Remove the seats.

Remove the side fairings.

Remove the fuel tank and the airbox.



Locate the ABS connector under the fuel tank.

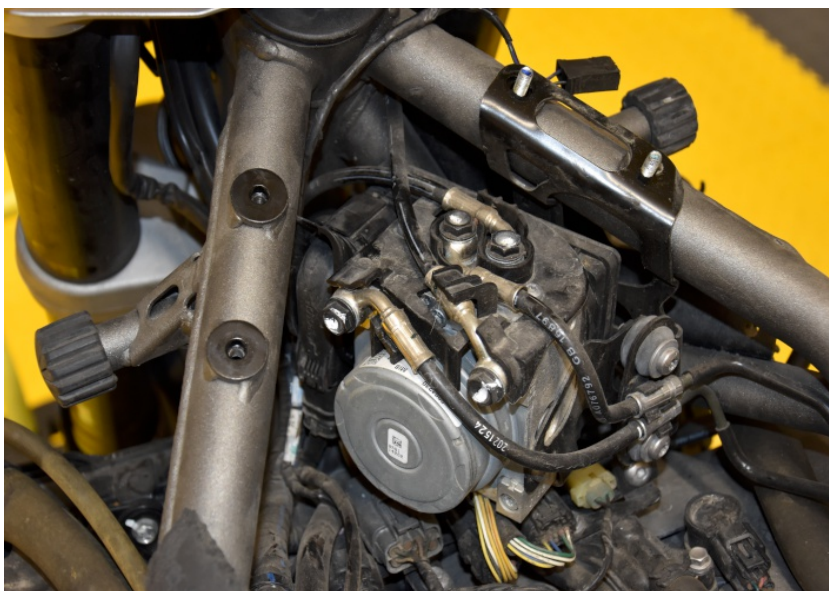

SpeedoHealer CAN

Supplementary Manual




Triumph Tiger Explorer ABS TC 2016-2020 (SH-CAN)

Cut the Red wire about 2,5cm (1") of the connector.

Connect the SH Green wire to the Red wire end, which goes to the ABS module. Use a yellow butt connector.



Connect the SH Blue wire to the Red wire end, which is at the wiring harness side. Use a yellow butt connector.

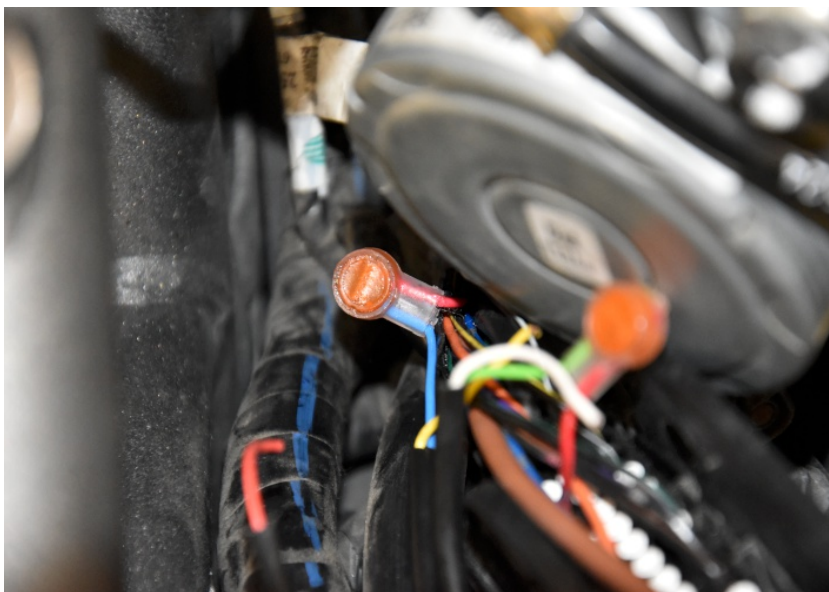

Cut the Blue wire about 2,5cm (1") of the connector.

Connect the SH White wire to the Blue wire end, which goes to the ABS module. Use a yellow butt connector.




SpeedoHealer CAN

Supplementary Manual



Triumph Tiger Explorer ABS TC 2016-2020 (SH-CAN)


Connect the SH Yellow wire to the Blue wire end, which is at the wiring harness side. Use a yellow butt connector.

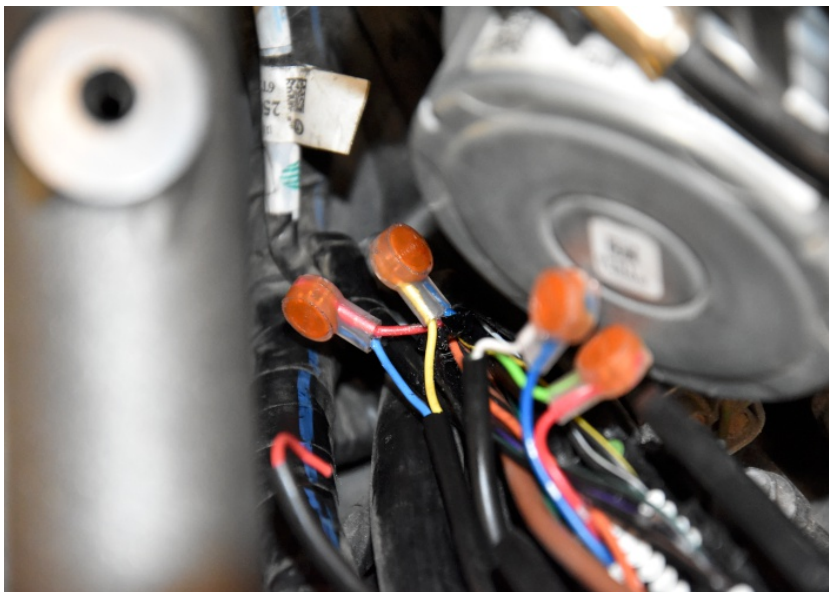

Splice the SH Red wire to the Green wire of the ABS connector. Use a red wire tap connector.



Splice the SH Black wire to the Black wire of the auxiliary power outlet connector. Use a red wire tap connector.

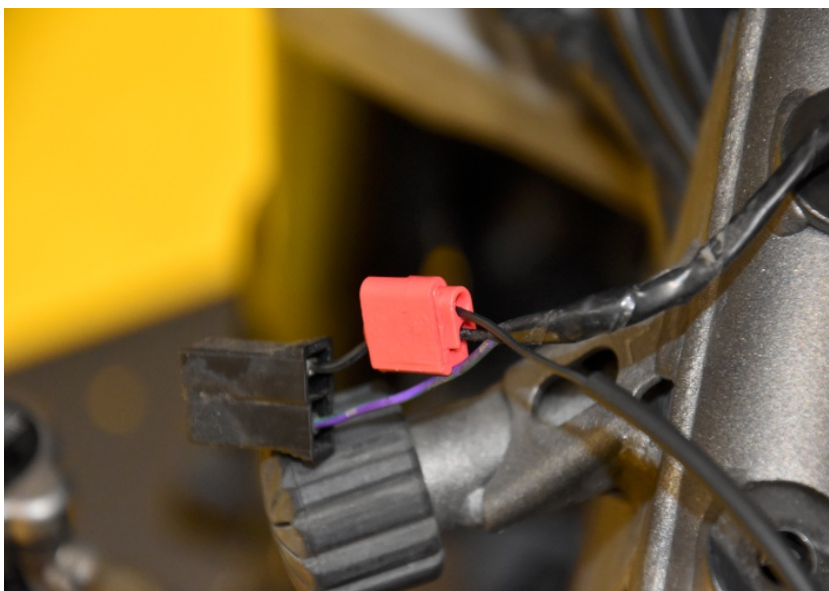

SpeedoHealer CAN

Supplementary Manual



Triumph Tiger Explorer ABS TC 2016-2020 (SH-CAN)

Typical position for the SpeedoHealer CAN.

Secure the unit properly.

