


# SpeedoHealer CAN Supplementary Manual



## Voge 625R ABS TC 2025- (SH-CAN)

Secure the bike on a stand.

Remove the seats.

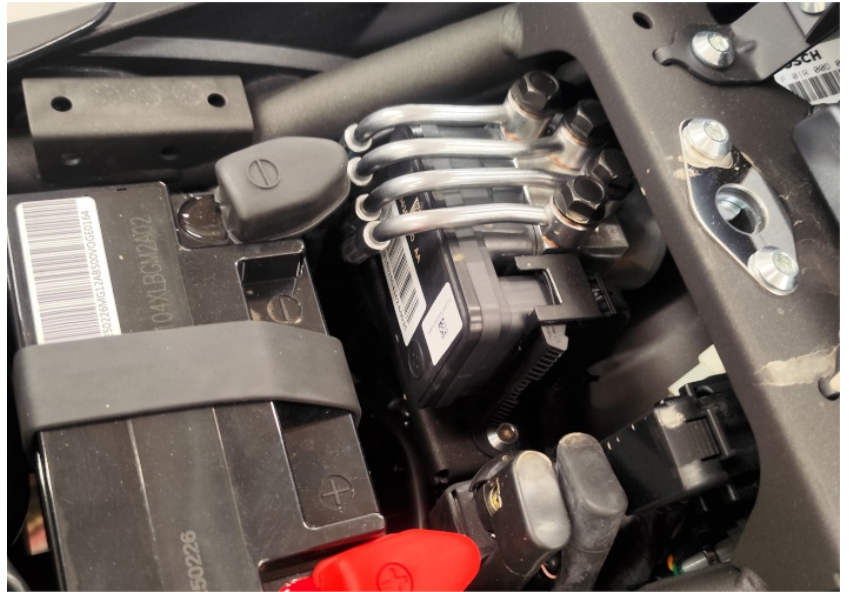

Locate the ABS connector under the main seat.



Cut the Green wire about 2,5cm (1") of the connector.

Connect the SH Green wire to the Green wire end, which goes to the ABS module. Use a yellow butt connector.



# SpeedoHealer CAN Supplementary Manual



## Voge 625R ABS TC 2025- (SH-CAN)

Connect the SH Blue wire to the Green wire end, which is at the wiring harness side. Use a yellow butt connector.




Cut the Red/Yellow wire about 2,5cm (1") of the connector.

Connect the SH White wire to the Red/Yellow wire end, which goes to the ABS module. Use a yellow butt connector.



Connect the SH Yellow wire to the Red/Yellow wire end, which is at the wiring harness side. Use a yellow butt connector.

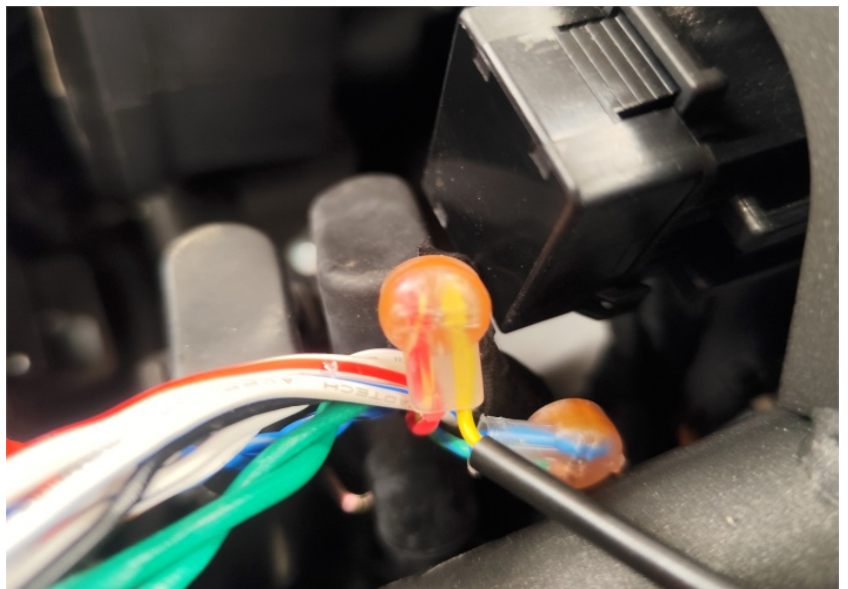

# SpeedoHealer CAN Supplementary Manual



## Voge 625R ABS TC 2025- (SH-CAN)

Splice the SH Red wire to the Black wire of the ABS connector. Use a red wire tap connector.



Splice the SH Black wire to the Green wire of the ABS connector. Use a red wire tap connector.



Typical position for the SpeedoHealer CAN.

Secure the unit properly.

