

SpeedoHealer CAN

Supplementary Manual



Zontes 703 F ABS TC 2025- (SH-CAN)

Secure the bike on a stand.



Remove the seat.

Remove the cover along the fuel tank.

Remove the coolant reservoir cover and the coolant reservoir.

Remove the gear shift lever and the left footpeg.

Remove the left side cover and the left frame guard.



Locate the ABS connector under the fuel tank.



SpeedoHealer CAN Supplementary Manual



Zontes 703 F ABS TC 2025- (SH-CAN)

Cut the Yellow/Black wire about 2,5cm (1") of the connector.

Connect the SH Green wire to the Yellow/Black wire end, which goes to the ABS module. Use a yellow butt connector.

Connect the SH Blue wire to the Yellow/Black wire end, which is at the wiring harness side. Use a yellow butt connector.



Cut the Green/Black wire about 2,5cm (1") of the connector.


Connect the SH White wire to the Green/Black wire end, which goes to the ABS module. Use a yellow butt connector.

Connect the SH Yellow wire to the Green/Black wire end, which is at the wiring harness side. Use a yellow butt connector.



Splice the SH Red wire to the Black wire of the rear light connector connector. Use a red wire tap connector.

Splice the SH Black wire to the Green wire of the rear light connector connector. Use a red wire tap connector.

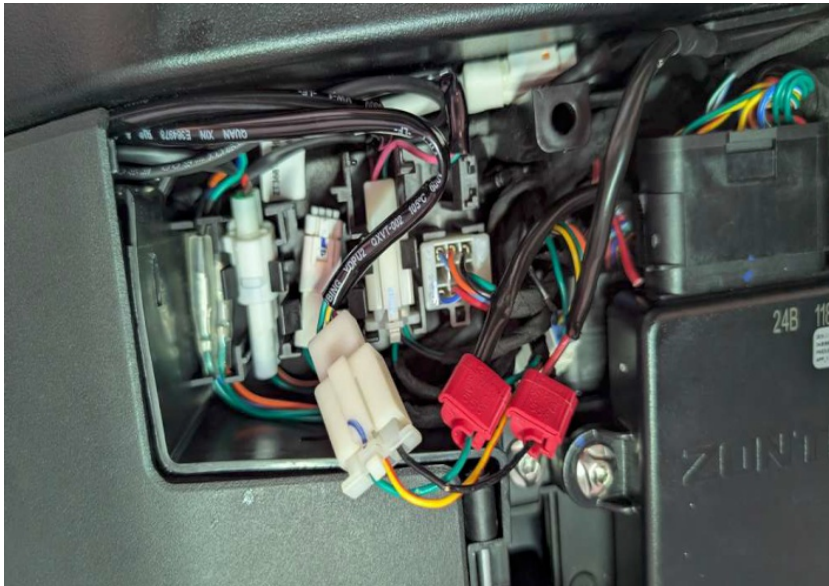

SpeedoHealer CAN

Supplementary Manual



Zontes 703 F ABS TC 2025- (SH-CAN)

Typical position for the SpeedoHealer CAN.

Secure the unit properly.

