

Honda CBR1100XX 1996-2008 (SH-V4 + SH-H01)


Secure the bike on a stand.

Remove the seat.

Remove the seat cowl and the lower fairing cowl.



Lift up or remove the fuel tank.

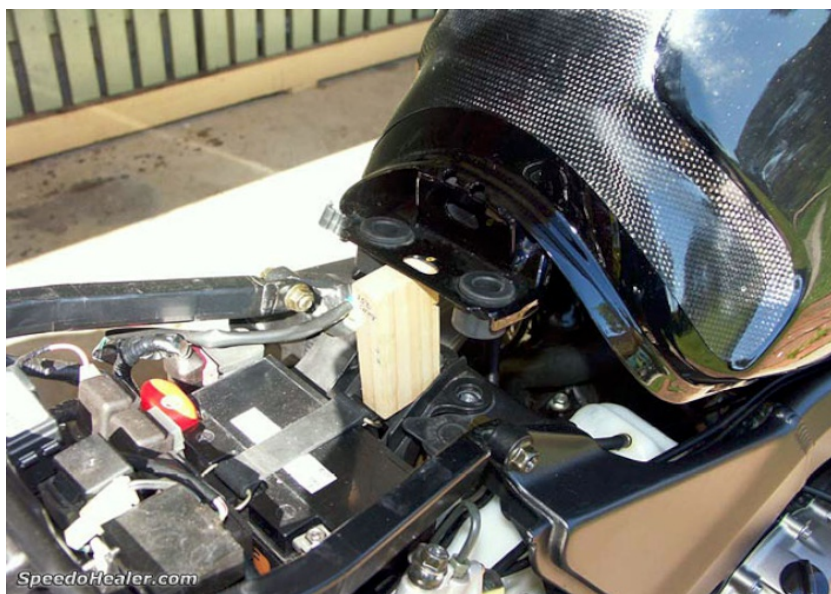

Locate the vehicle speed sensor connectors in a dust boot.

Plug the SpeedoHealer connectors in-line with the vehicle speed sensor connectors.



SpeedoHealer

Supplementary Manual



Honda CBR1100XX 1996-2008 (SH-V4 + SH-H01)

Typical position for the SpeedoHealer.

Secure the unit properly.

