

SpeedoHealer

Supplementary Manual



Honda CBR600F4i 2001-2006 (SH-V4 + SH-H01)

Secure the bike on a stand.

Remove the seats.

Remove the left side fairing.


Lift up the fuel tank.



Locate the vehicle speed sensor connectors.



Plug the SpeedoHealer connectors in-line with the vehicle speed sensor connectors.

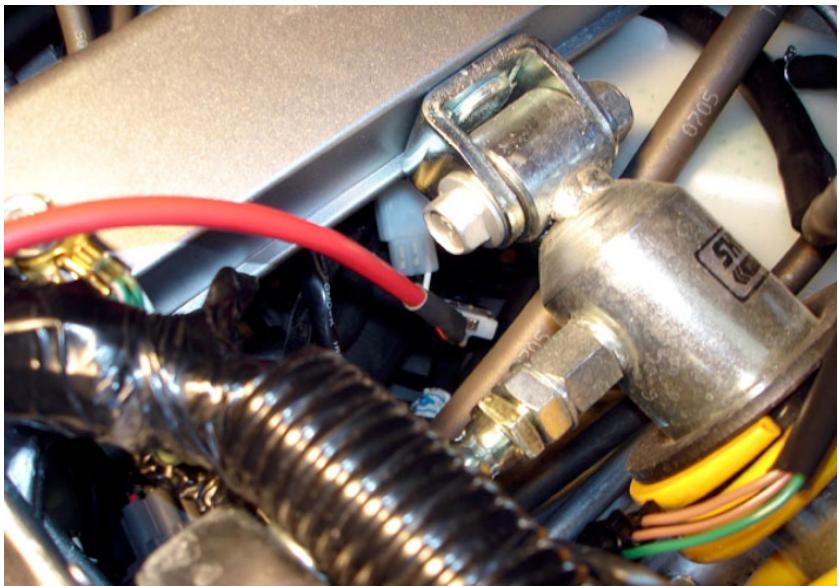


SpeedoHealer

Supplementary Manual



Honda CBR600F4i 2001-2006 (SH-V4 + SH-H01)

Typical position for the remote button.

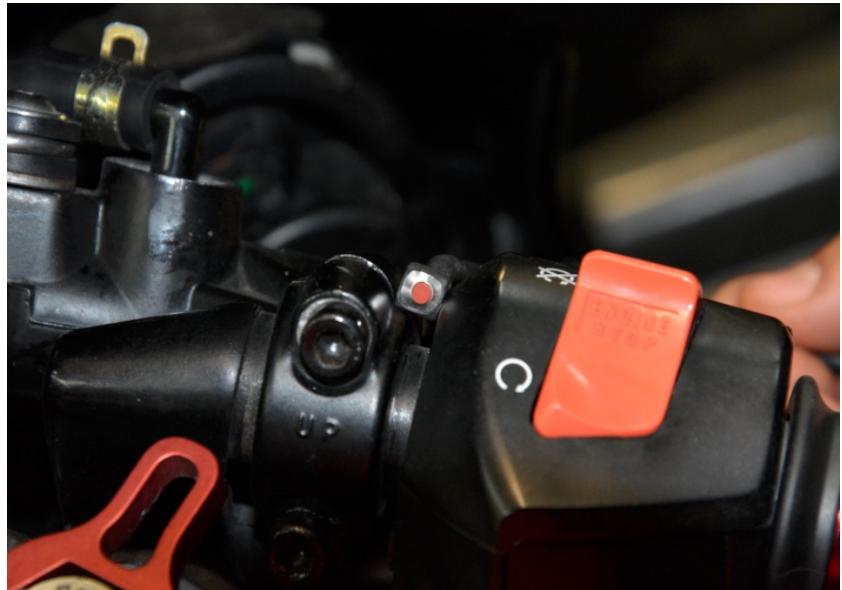

Typical position for the SpeedoHealer.

Secure the unit properly.

